


AIR OUTLET SERVOMOTOR INSPECTION


AC1TP-02

1. REMOVE LOWER NO. 1 PANEL
(See page BO-16)

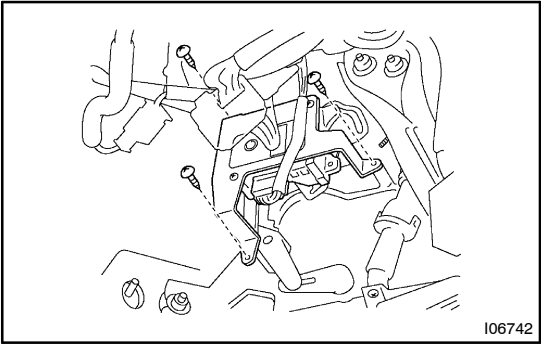

2. REMOVE AIR OUTLET SERVOMOTOR

- (a) Disconnect the connector.
(b) Remove the 3 screws and servomotor.

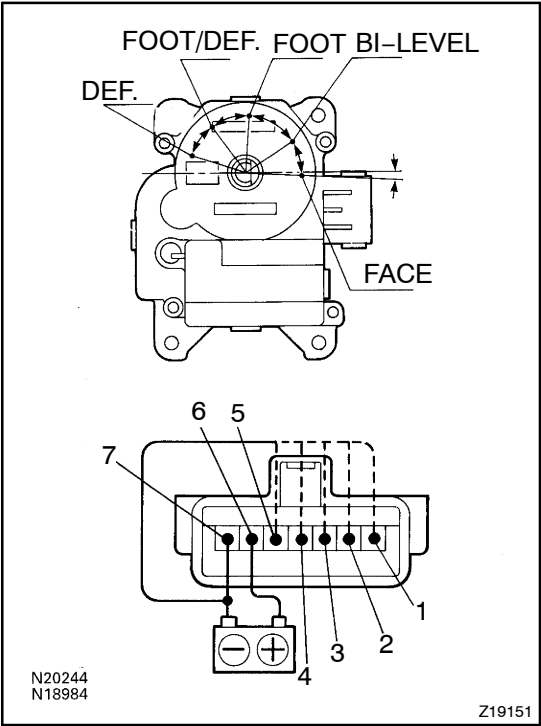


3. LHD Models:

INSPECT AIR OUTLET SERVOMOTOR OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 6 and the negative (-) lead to terminal 7.
(b) Connect the negative (-) lead from the battery to each terminal and check that the shaft rotates at each position, as shown in the chart.

Connected terminal	Position
5	DEF.
4	FOOT/DEF.
3	FOOT
2	B/L
1	FACE

If operation is not as specified, replace the servomotor.

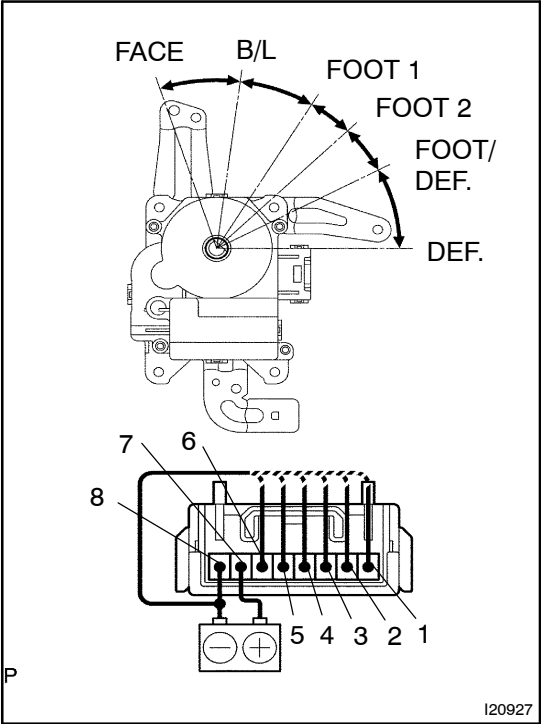

- 4. RHD Models:**
INSPECT AIR OUTLET SERVOMOTOR OPERATION
- (a) Connect the positive (+) lead from the battery to terminal 7 and the negative (-) lead to terminal 8.
 - (b) Connect the negative (-) lead from the battery to each terminal and check that the shaft rotates at each position, as shown in the chart.

Connected terminal	Position
1	DEF.
2	FOOT/DEF.
3	FOOT 2
4	FOOT 1
5	B/L
6	FACE

If operation is not as specified, replace the servomotor.

- 5. INSTALL AIR OUTLET SERVOMOTOR**
- (a) Install the servomotor with the 3 screws.
 - (b) Connect the connector.
- 6. INSTALL LOWER NO. 1 PANEL**