


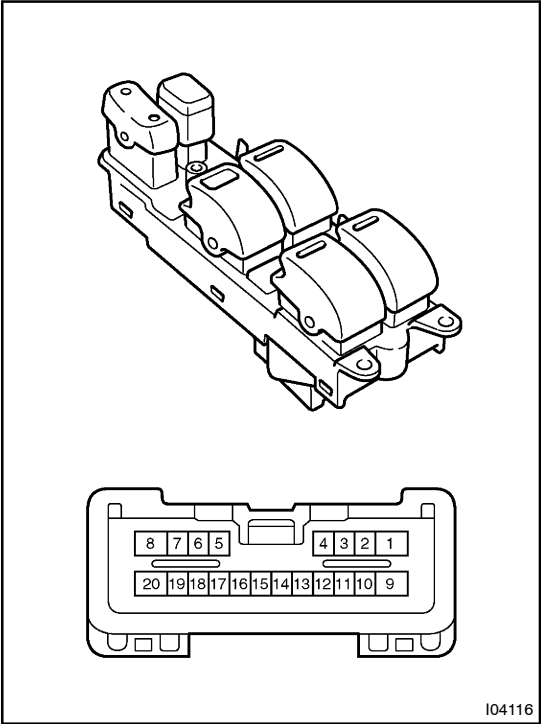

POWER DOOR LOCK CONTROL SYSTEM INSPECTION

BE12V-01

Master Switch:
INSPECT DRIVER'S DOOR LOCK CONTROL SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
LOCK	9 – 15	Continuity
OFF	–	No continuity
UNLOCK	9 – 16	Continuity

If continuity is not as specified, replace the switch.