

REMOVAL

1. REMOVE FRONT DOOR OPENING TRIMS

2. REMOVE FRONT PILLAR GARNISH

(a) Driver's side:

Using a screwdriver, remove the 2 assist grip plugs, then remove the 2 screws and assist grip.

HINT:


Tape the screwdriver tip before use.

(b) Passenger's side:

Using a screwdriver, remove the 4 assist grip plugs, then remove the 4 screws and 2 assist grips.

HINT:

Tape the screwdriver tip before use.

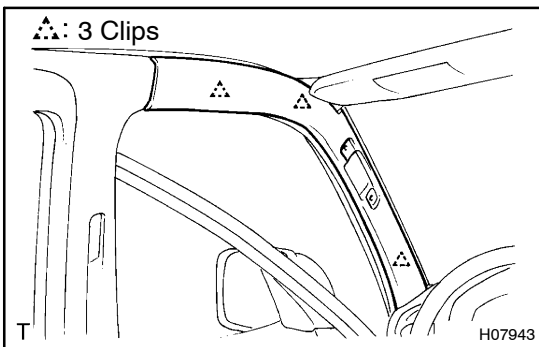

(c) Using a screwdriver, remove the front pillar garnish.

HINT:


Tape the screwdriver tip before use.

(d) Employ the same manner described above to the other side.

3. REMOVE SUN VISORS

4. REMOVE DOUBLE VISORS

5. REMOVE HOLDERS

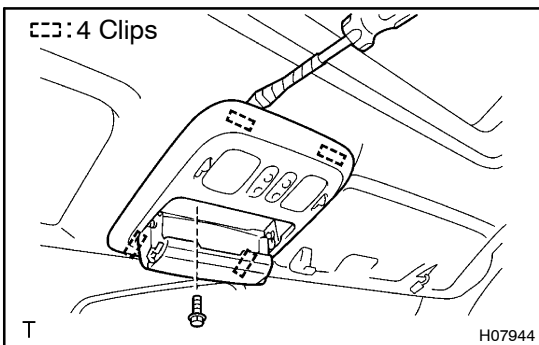

6. w/ Sliding roof:


REMOVE OVERHEAD CONSOLE BOX

(a) Remove the bolt.

(b) Using a screwdriver, remove the overhead console box, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

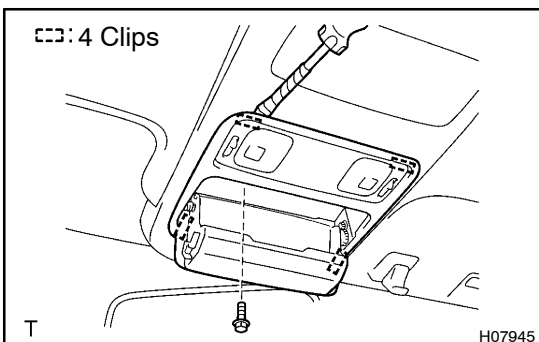

7. w/o Sliding roof:


REMOVE OVERHEAD CONSOLE BOX

(a) Remove the bolt.

(b) Using a screwdriver, remove the map lamp assembly, then disconnect the connector.

HINT:


Tape the screwdriver tip before use.

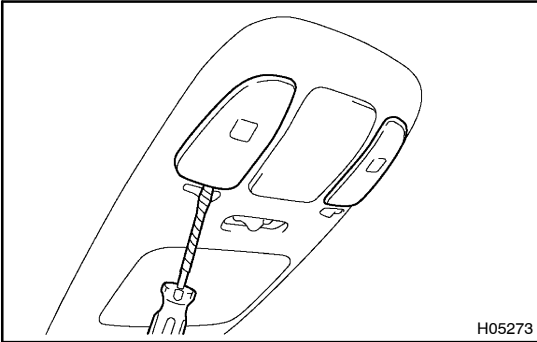

(c) Using a screwdriver, remove the 2 lenses.

HINT:

Tape the screwdriver tip before use.

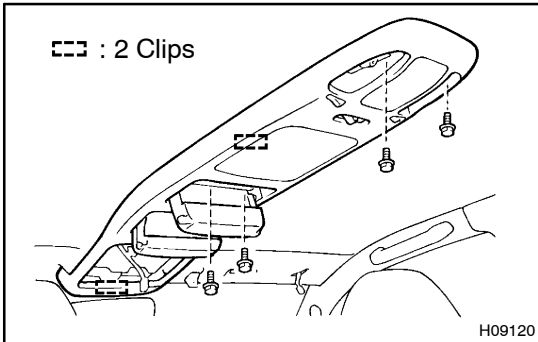


(d) Remove the 4 bolts.

(e) Using a screwdriver, remove the overhead console box, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

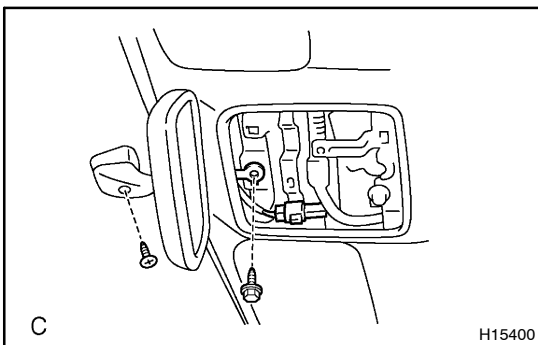

8. w/ Electrochromic rear view mirror:

REMOVE INNER REAR VIEW MIRROR

(a) Pull down front side of roof headlining.

(b) Disconnect the connector.


(c) Remove the bolt, screw and inner rear view mirror.

9. w/o Electrochromic rear view mirror:

REMOVE INNER REAR VIEW MIRROR

(a) Remove the screw and inner rear view mirror.


(b) Pull down front side of roof headlining.

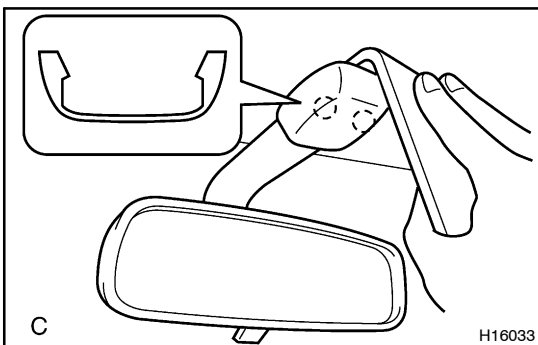

10. Normal roof:

REMOVE INNER REAR VIEW MIRROR

(a) Using a moulding remover, remove the cover as shown in the illustration.

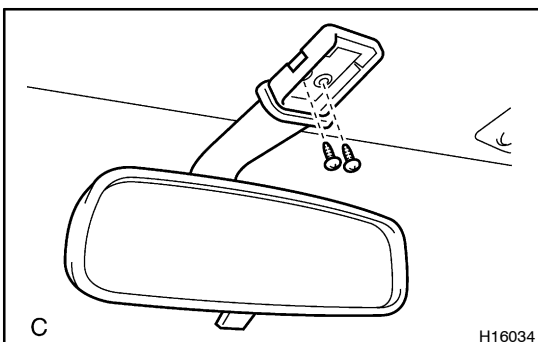

(b) Remove the 2 screws and inner rear view mirror.

(c) Pull down front side of roof headlining.

11. REMOVE WIPER ARMS

(a) Remove the 2 caps and 2 nuts.

(b) Remove the 2 wiper arms.

12. REMOVE HOOD TO COWL TOP SEAL

13. REMOVE COWL TOP VENTILATOR LOUVERS

(a) Remove the cowl top ventilator louver RH.

(b) Remove the cowl top ventilator louver LH.


14. REMOVE OUTSIDE NO. 2 MOULDING

(a) Using a screwdriver, remove the outside No. 2 moulding.

HINT:

Tape the screwdriver tip before use.

(b) Using a drill of less than $\varnothing$ 4 mm (0.16 in.).

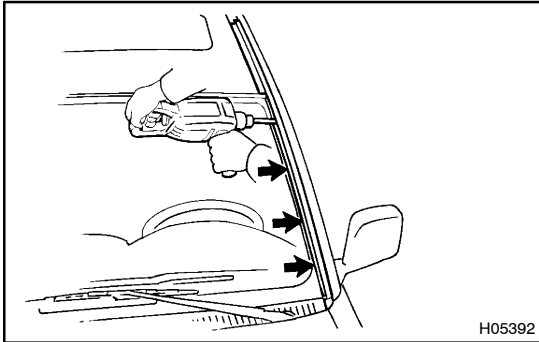

(c) Gently and vertically put the drill to the rivet, and cut the rivet flanges.

NOTICE:

- **Prizing the hole with a drill can lead to damage to the rivet hole or breaking the drill.**
- **Take care as the cut rivet is hot.**


(d) Even if flange is taken off, continue drilling and push out remaining fragments with the drill.

(e) Using a heat light, heat the moulding to 40 – 60 °C (104 – 140 °F).

NOTICE:

Do not heat the moulding excessively.

(f) Tie both piano wire ends to wooden blocks or similar objects.

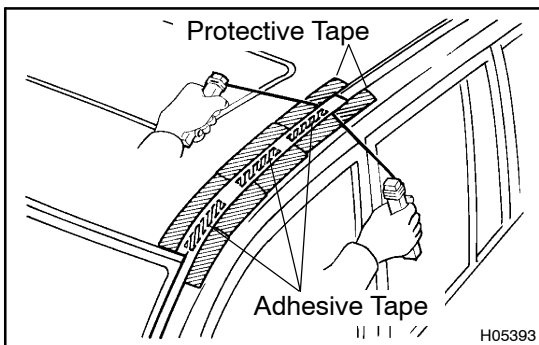

(g) Cut the adhesive tape by pulling the piano wire as shown.

NOTICE:


- **If reusing the moulding, take care not to damage the moulding.**
- **Do not damage the body.**

HINT:

Apply protective tape to the outer surface to keep the surface from being scratched.

(h) Remove the moulding.


(i) Employ the same manner described above to the other side.

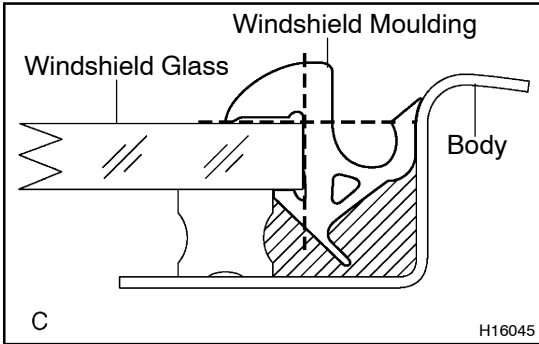**15. REMOVE OUTSIDE UPPER MOULDING**

Using a knife, cut off the moulding as shown in the illustration.

NOTICE:


Do not damage the body with the knife.

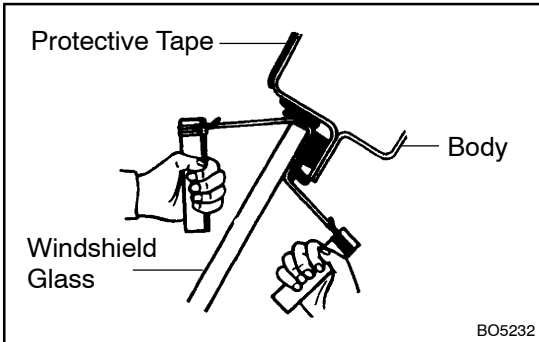**16. REMOVE WINDSHIELD GLASS**

- (a) Push piano wire through between the body and glass from the interior.
- (b) Tie both wire ends to wooden blocks or similar objects.

HINT:

Apply protective tape to the outer surface to keep the surface from being scratched.

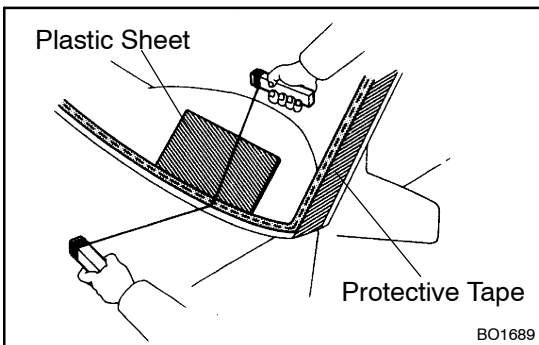**NOTICE:**

When separating the glass, take care not to damage the paint and interior and exterior ornaments. To prevent scratching the safety pad when removing the windshield, place a plastic sheet between the piano wire and safety pad.

- (c) Cut the adhesive by pulling the piano wire around it.
- (d) Remove the windshield glass.

NOTICE:

Leave as much of the adhesive on the body as possible when cutting the glass.