



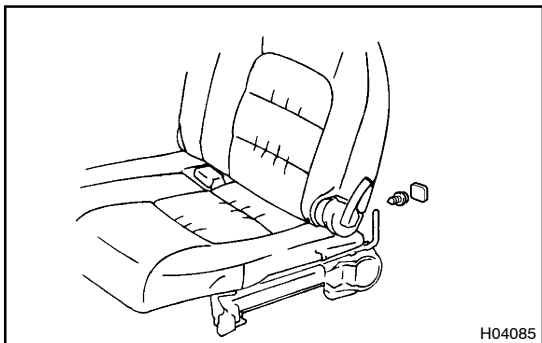

DISASSEMBLY


1. REMOVE RECLINING ADJUSTER RELEASE HANDLE

- (a) Remove the screw.
- (b) Remove the reclining adjuster release handle.

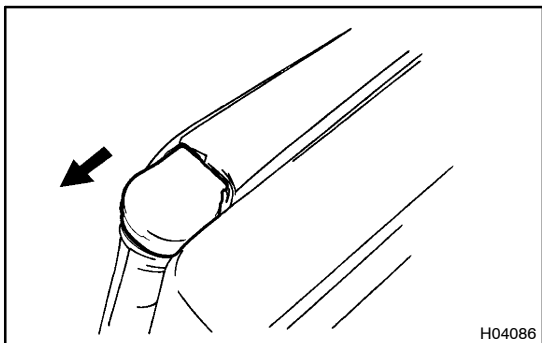


2. REMOVE REAR NO. 2 SEAT RECLINING ADJUSTER COVERS

- (a) Remove the screw.
- (b) Remove the No. 2 rear seat reclining covers.

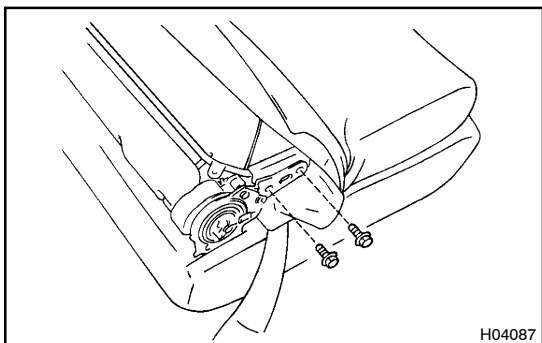

3. REMOVE SEATBACK ASSEMBLY

- (a) Remove the 4 bolts.
Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)
- (b) Remove the seatback assembly.

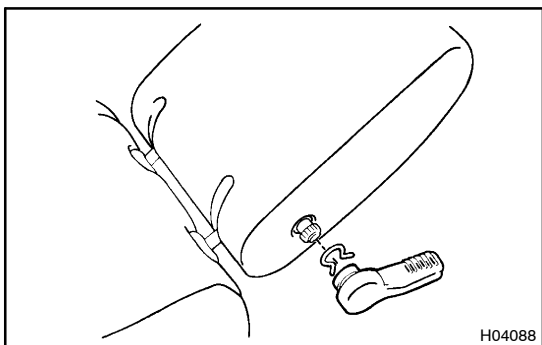

4. REMOVE HEADREST

- (a) w/ Headrest adjuster:
Remove the headrest adjuster knob.
- (b) Remove the headrest.
- (c) w/ Headrest spacer:
Remove the 2 headrest spacers.

5. REMOVE SEATBACK COVER

- (a) Remove the 2 headrest supports.
- (b) Remove the seatback cover with pad from the seatback frame.
- (c) Remove the seatback cover from the seatback pad.


6. REMOVE REAR NO. 2 LAP TYPE CENTER WITH INNER BELT

Remove the nut and rear No. 2 lap type center with inner belt.

7. REMOVE REAR SEAT LOCK CONTROL CABLE

8. REMOVE REAR SEAT STAY


Remove the 2 bolts and rear seat stay.

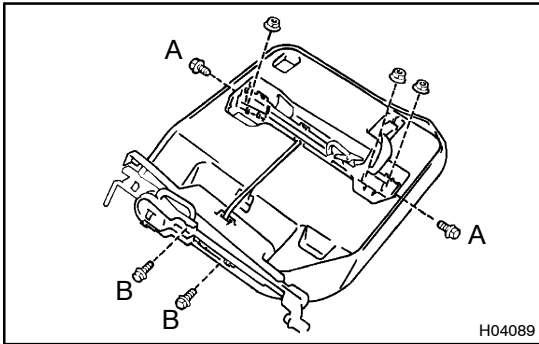**9. REMOVE ADJUSTER**

- (a) Remove the 3 nuts.
- (b) Remove the 4 bolts.

Torque:**A bolt: 18 N·m (184 kgf·cm, 13 ft·lbf)****B bolt: 37 N·m (380 kgf·cm, 27 ft·lbf)**

- (c) Remove the adjuster.
- (d) Remove the seat leg bracket cover.
- (e) Remove the 2 screws and seat leg No.1 stay.

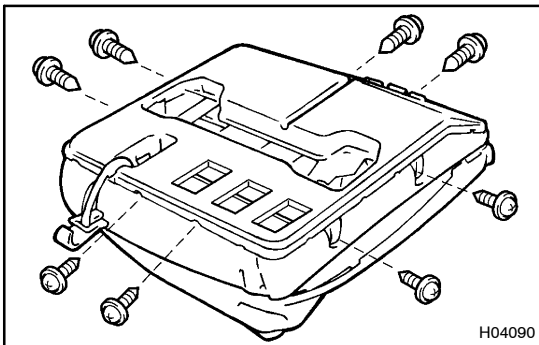
10. REMOVE SEAT LEG BRACKET**11. REMOVE SEAT LEG REAR COVER****12. REMOVE SEAT LEG COVER****13. REMOVE SEAT CUSHION UNDER COVER**

- (a) Remove the assist grip.
- (b) Using a screwdriver, disengage the hooks.

HINT:

Tape the screwdriver tip before use.

- (c) Remove the 8 screws.
- (d) Remove the seat cushion under cover.

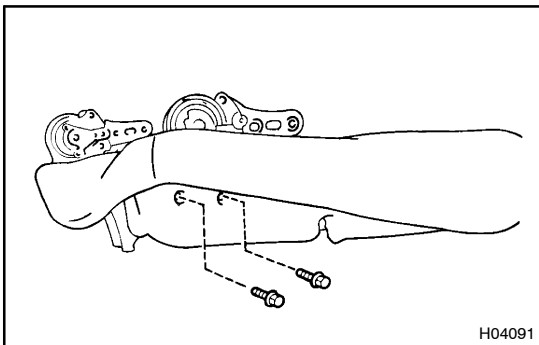14. REMOVE SEAT ADJUSTER CONTROL CABLE**15. REMOVE SEAT RECLINING INNER COVERS****16. REMOVE REAR NO. 2 SEAT RECLINING ADJUSTERS**


- (a) Remove the 4 bolts.

Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)

- (b) Remove the rear No. 2 seat reclining adjusters.

17. REMOVE SEAT CUSHION COVER

- (a) Remove the hog rings and seat cushion frame.
- (b) Remove the seat cushion cover from the seat cushion pad.

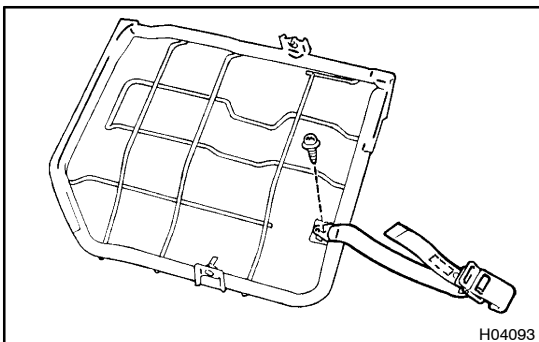**18. REMOVE HOLD SEAT STOPPER NO. 2 BAND**

- (a) Remove the screw.
- (b) Remove the hold seat stopper No. 2 band.