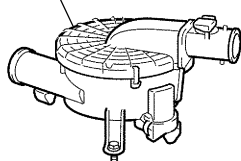


COMPONENTS

LHD:

RHD:

Air Cleaner Case Assembly

Hydraulic Brake
Booster Assembly

◆ Gasket

15 (155, 11)

Pin

Clip

w/ ABS & BA &
TRC & VSC Only:

15 (155, 11)

15 (155, 11)

w/ ABS & BA & TRC & VSC Only:
Master Cylinder Pressure Sensor ConnectorFluid Level Warning
Switch ConnectorABS ECU or
ABS & BA &
TRC & VSC
ECU

5.0 (51, 44 in.·lbf)

LH Lower Panel

Lower No. 1 Panel

No. 2 Heater to
Register Duct

Cowl Side Trim

Front Door Scuff Plate

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

P

F13250

