

DTC	Always ON	Malfunction in ECU
------------	------------------	---------------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
Always ON	Either of the following 1. through 3. is detected: 1. The ECU connectors are OFF from the ECU. 2. There is a malfunction in the ECU internal circuit. 3. The voltage of terminal IG1 is more than 18.5 V.	• Battery • Charging system • Power source circuit • ABS ECU


HINT:

There is a case that TOYOTA hand-held tester cannot be used when ECU is abnormal.


Fail safe function:

If trouble occurs in the ECU, the ECU cuts off current to the ABS solenoid relay and prohibits ABS control.

WIRING DIAGRAM

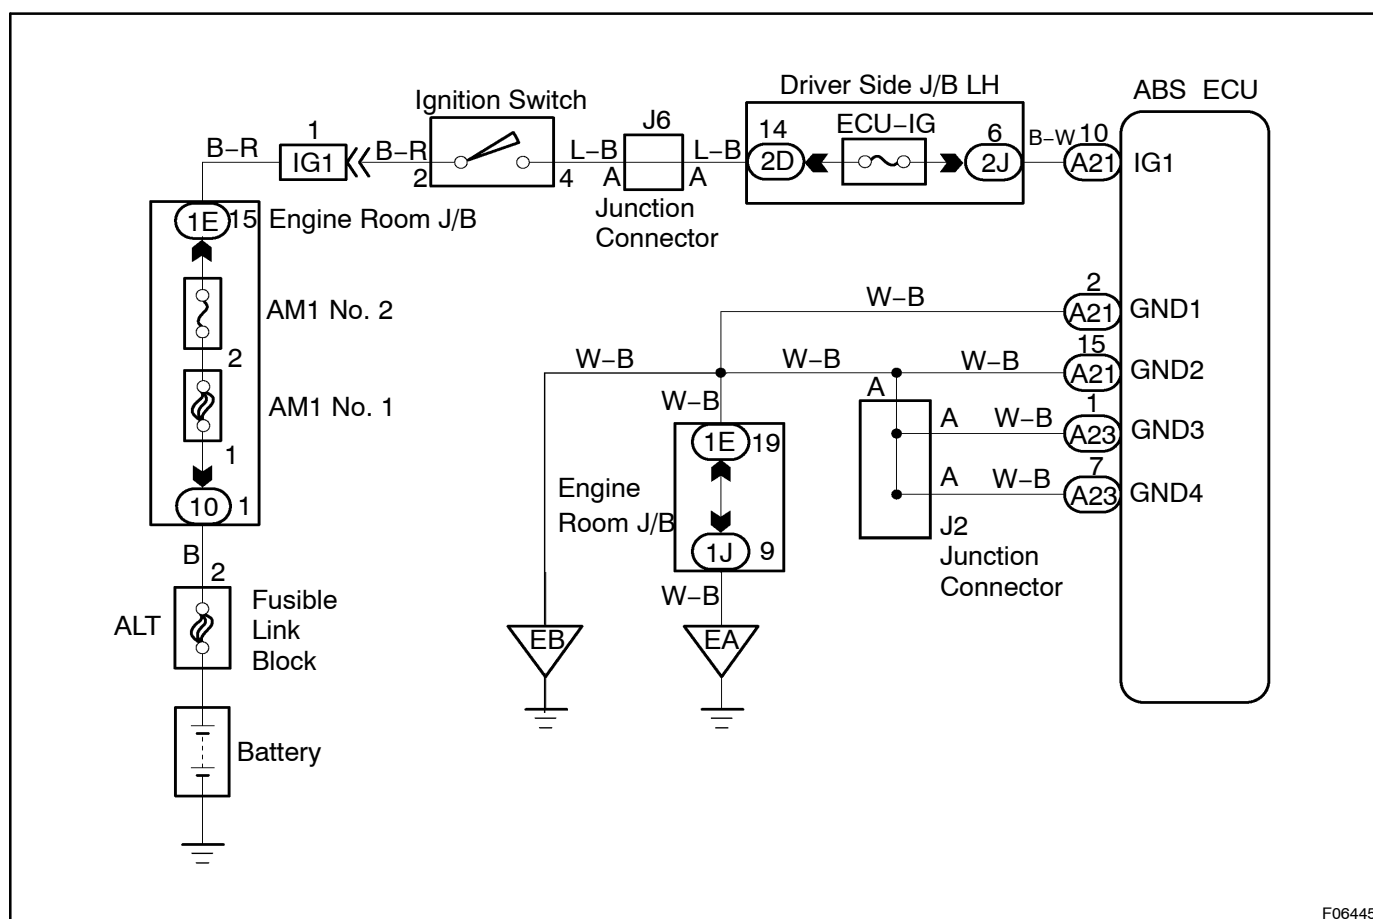

INSPECTION PROCEDURE

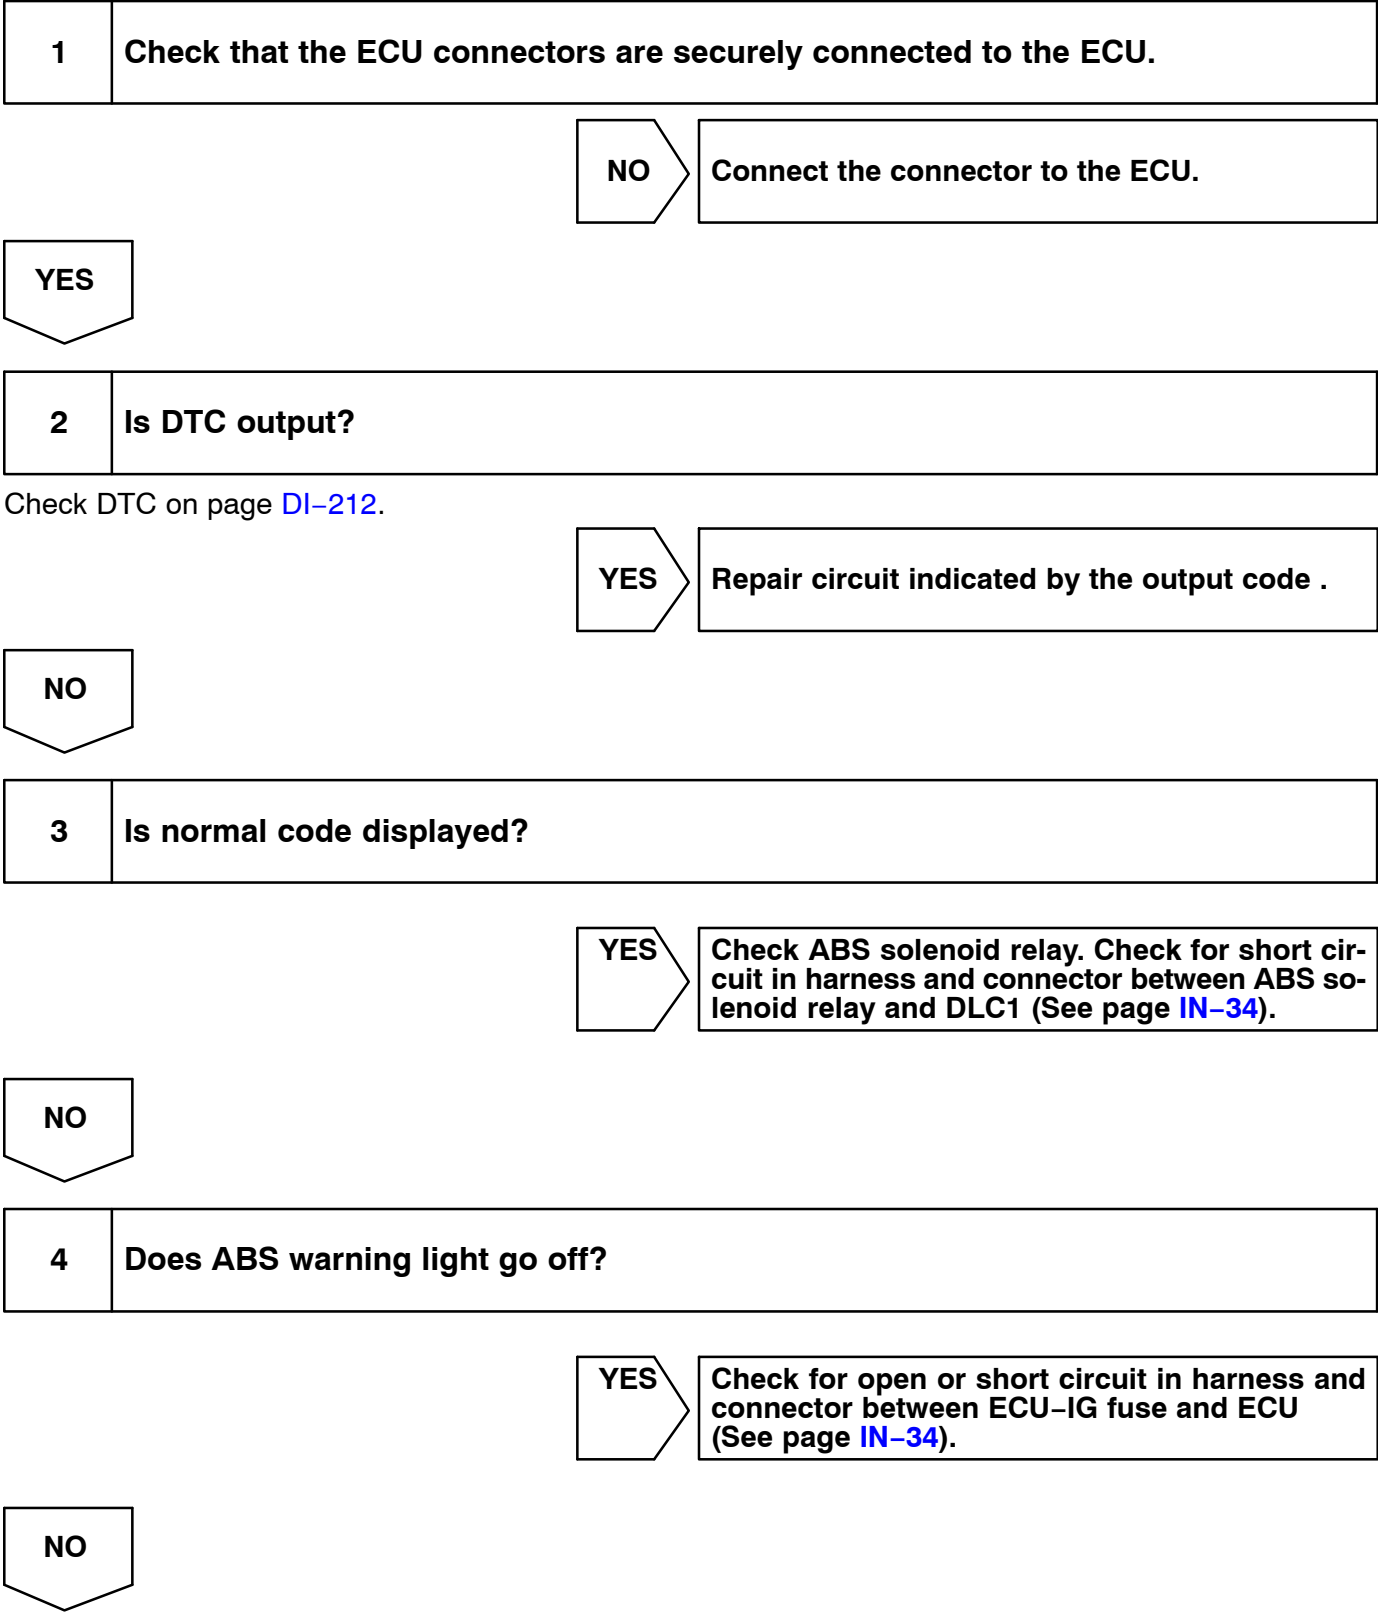

5	Check battery positive voltage.
----------	--

CHECK:

Check the battery positive voltage.

OK:

Voltage: 10 – 16 V

NG

Check and repair the charging system.

OK

6	Check operation of the ABS warning light.
----------	--

In case of using TOYOTA hand-held tester:

PREPARATION:

- (a) Connect the TOYOTA hand-held tester to the DLC3.
- (b) Turn the ignition switch ON and push the TOYOTA hand-held tester main switch ON.
- (c) Select the ACTIVE TEST mode on the TOYOTA hand-held tester.

CHECK:

Check that "ON" and "OFF" of the ABS warning light can be shown on the combination meter by the TOYOTA hand-held tester.

In case of not using TOYOTA hand-held tester:

PREPARATION:

- (a) Turn the ignition switch OFF.
- (b) Disconnect the connector from the ABS ECU.
- (c) Turn the ignition switch ON.

CHECK:

Check the ABS warning light condition when pushing in and pulling out the short pin from the DLC1.

OK:

When the short pin is pulled out: ABS warning light goes off

When the short pin is pushed in: ABS warning light goes on

OK

Check and replace ABS ECU.

NG

Check for short circuit in harness and connector between combination meter and ABS ECU, combination meter and DLC1 (See page [IN-34](#)).
Check ABS solenoid relay circuit (See page [DI-232](#)).