



COMBINATION METER CIRCUIT


BE251-01

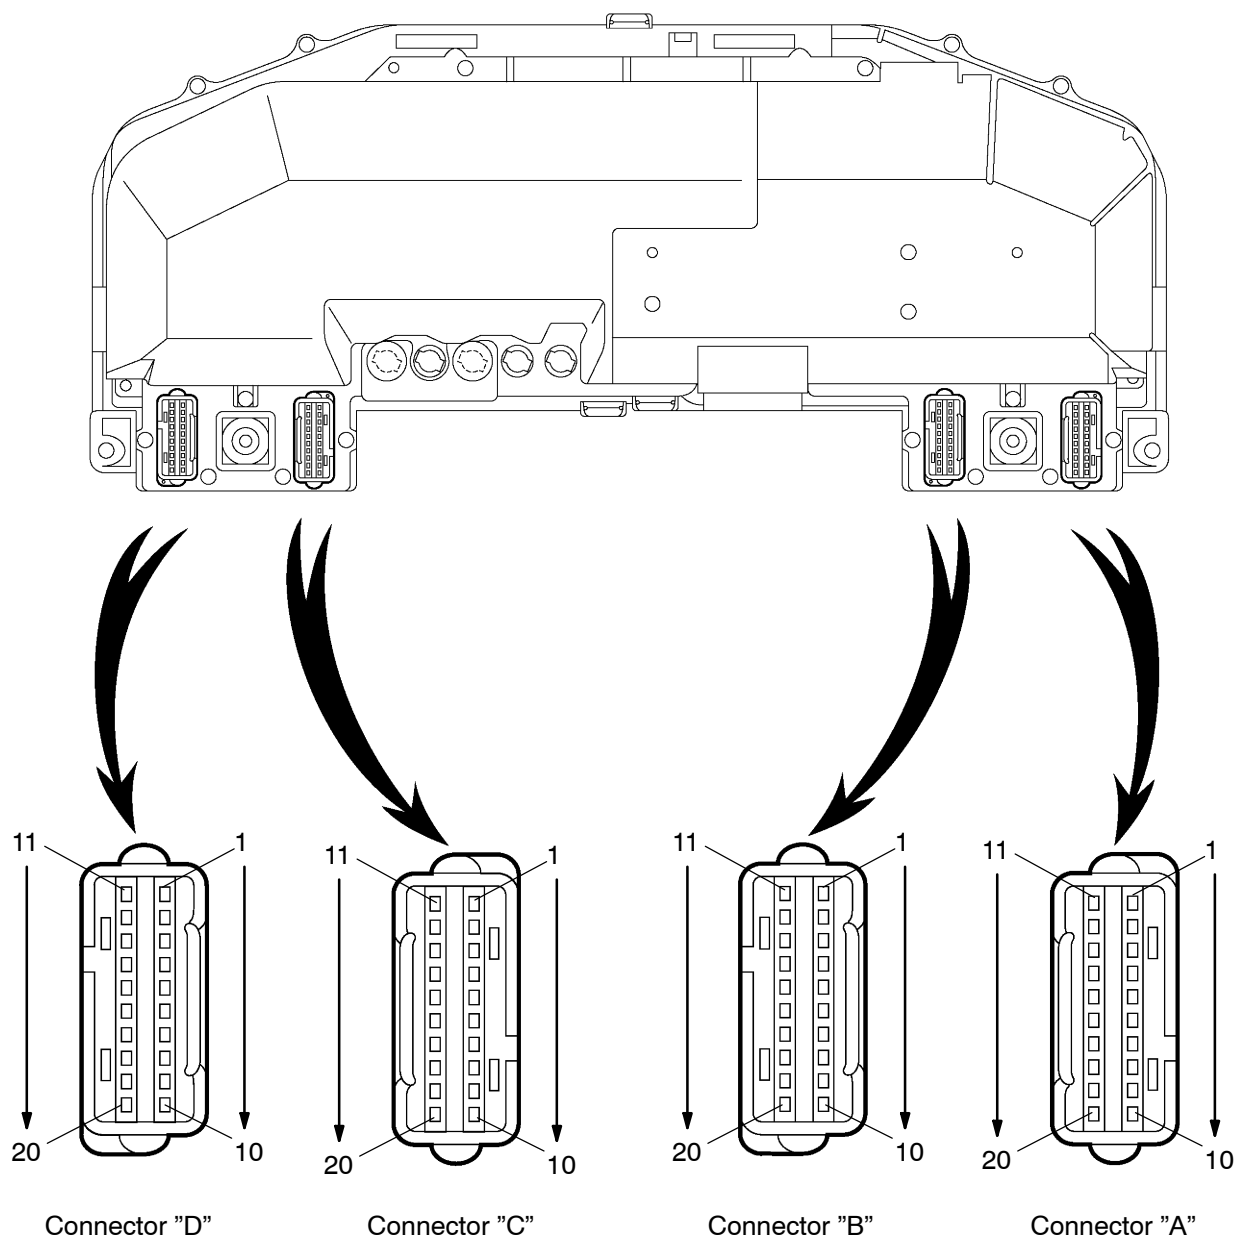

106128

- (S) : Speedometer (V) : Voltmeter
 (T) : Tachometer (W) : Water temperature gauge
 (F) : Fuel Receiver Gauge (O) : Oil Pressure Gauge

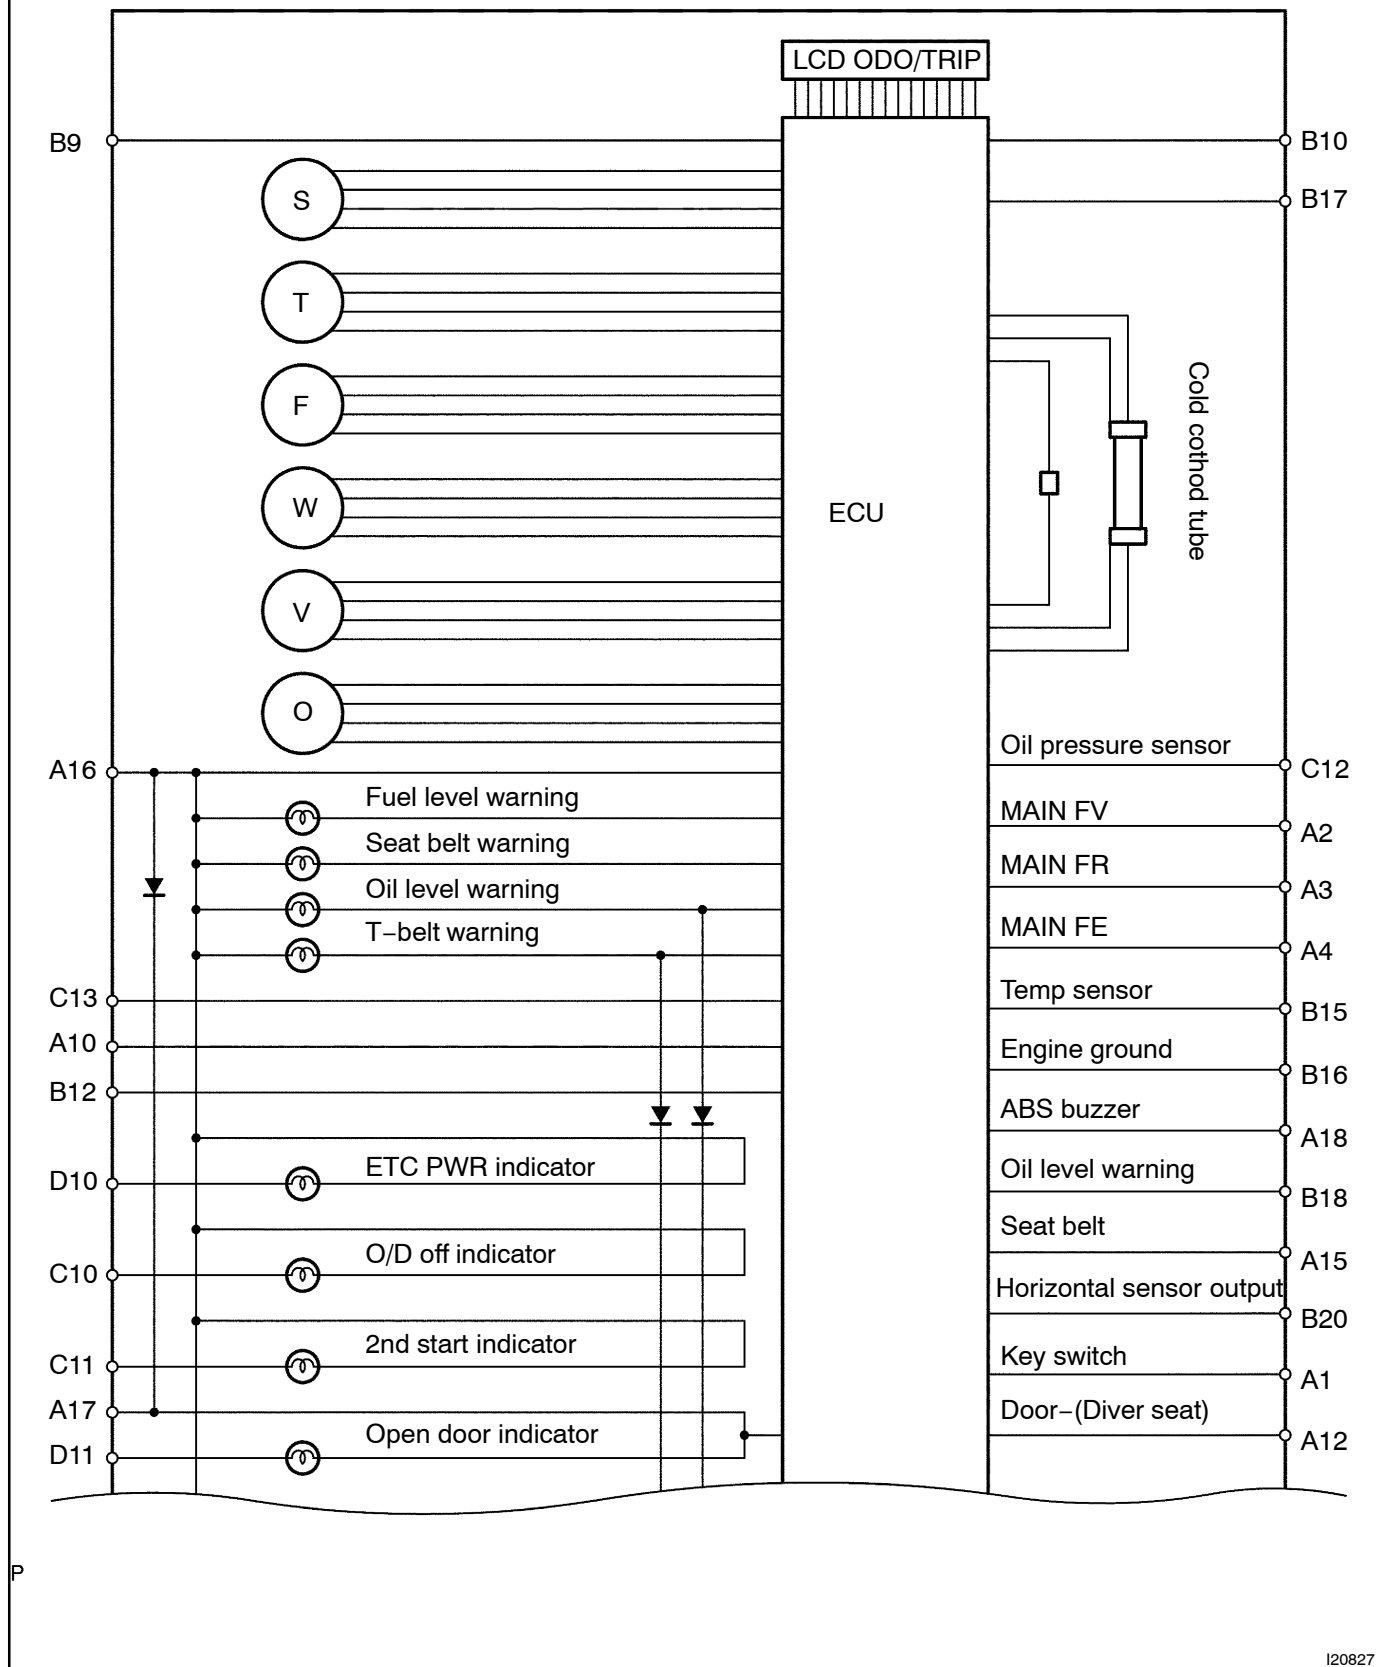

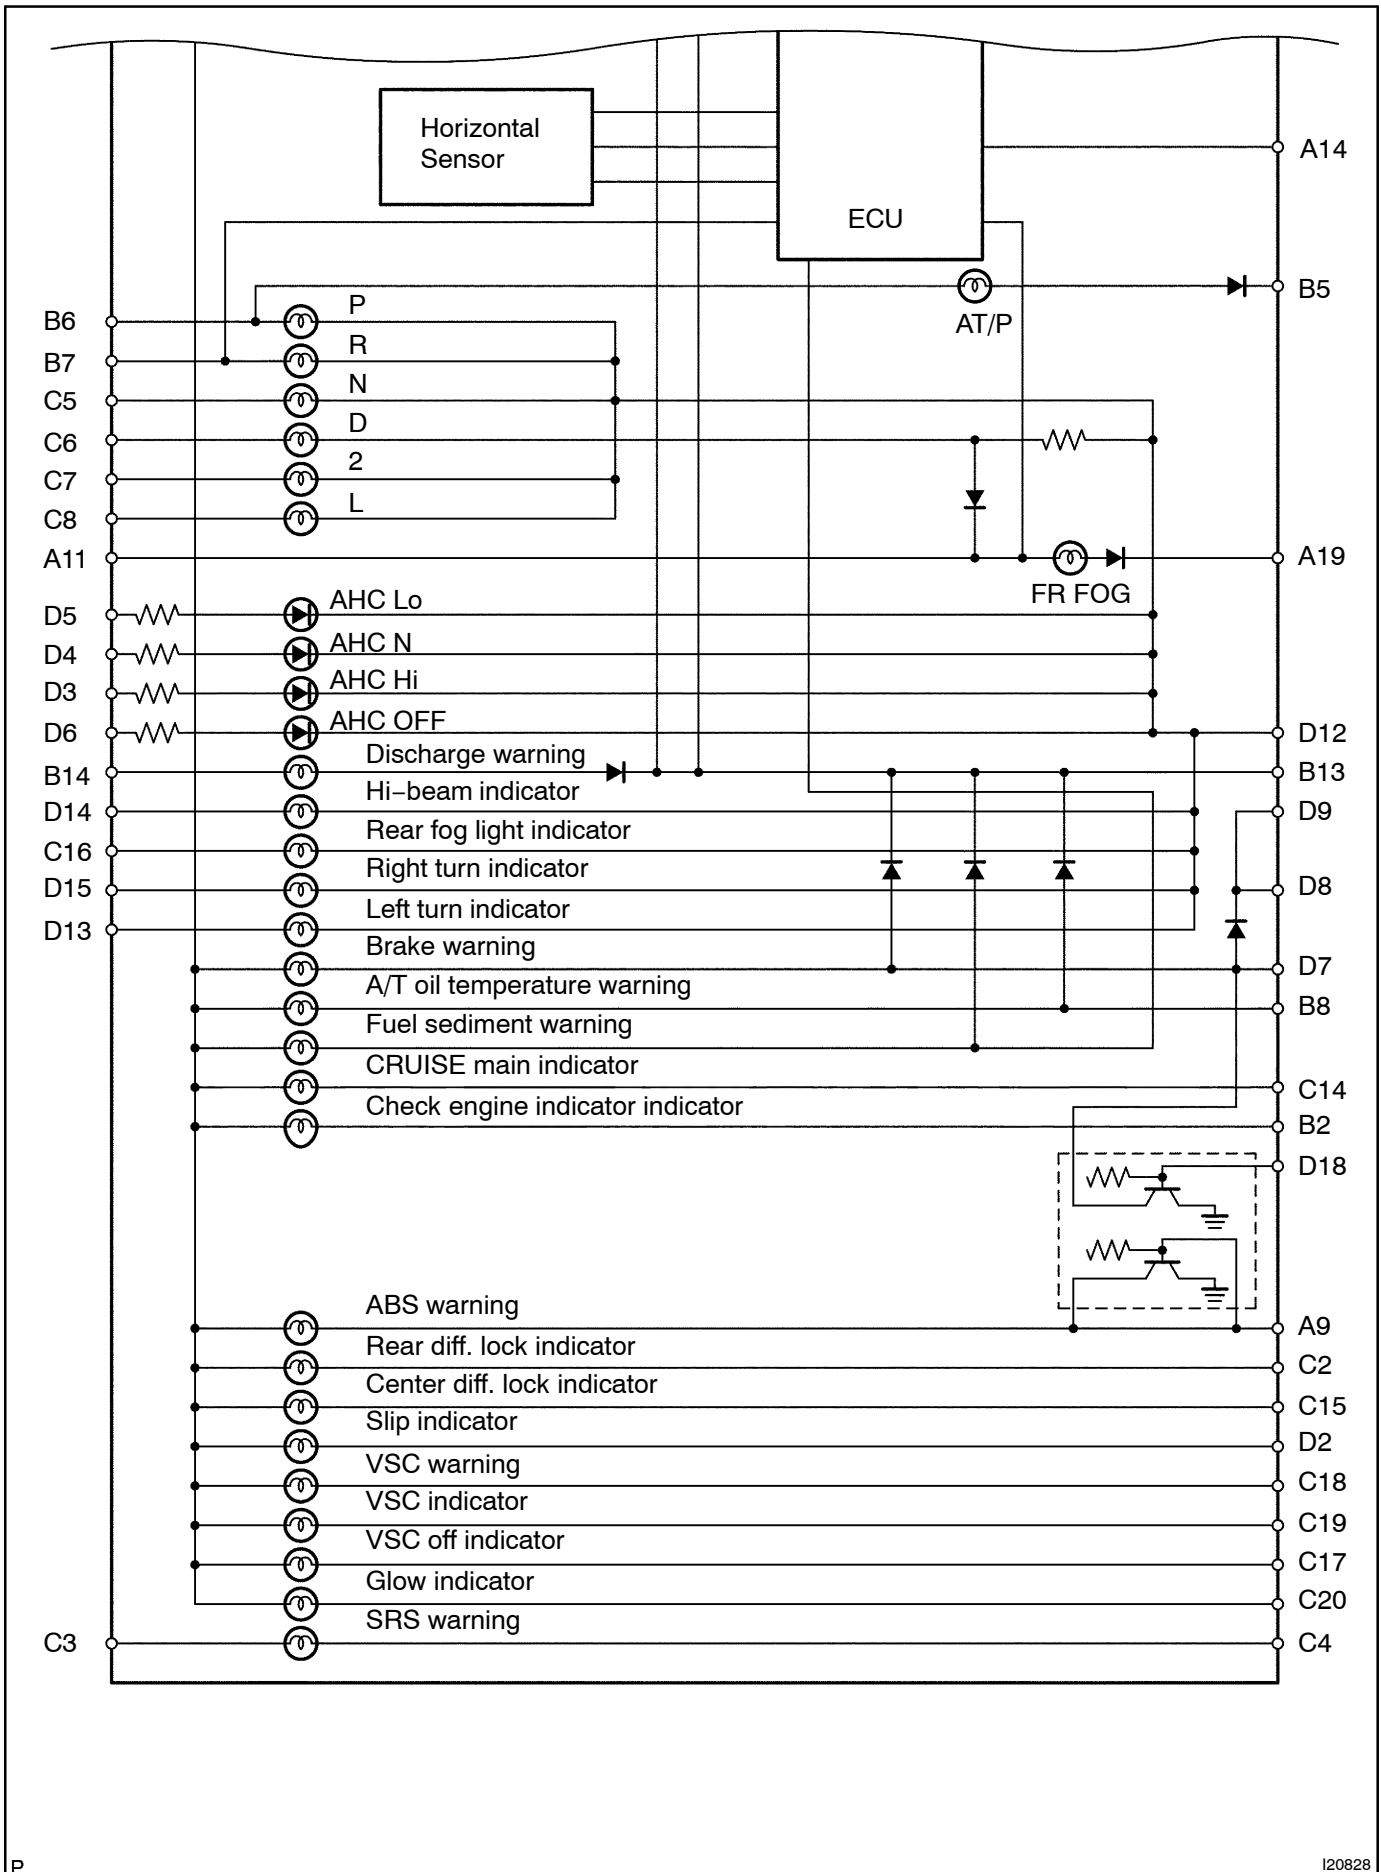

No.		Wiring connector side
A	1	Key unlock warning switch
	2	Fuel sender gauge
	3	Fuel sender gauge
	4	Fuel sender gauge
	9	ABS ECU
	10	Light control rheostat
	11	TAIL fuse
	12	Driver door courtesy switch
	14	Fuel sediment warning switch
	15	Seat belt buckle switch
	16	GAUGE fuse
	17	DOME fuse
	18	ABS ECU
	19	Fog light switch
B	2	ECM
	4	MIRR fuse
	5	Park/ neutral position switch (P - position)
	6	Park/ neutral position switch (P + position)
	7	Park/ neutral position switch (R position)
	8	Engine and ECT ECU
	9	Speed control unit
	10	Speed sensor
	11	Ground
	12	Light control rheostat
	13	Generator
	14	IGN fuse
	15	Water temperature sender gauge
	16	Ground
	17	Engine and ECU ECU
C	2	Rear diff. lock detection switch
	3	ECU-B fuse
	4	Center airbag sensor assembly
	5	Park/ neutral position switch (N position)
	6	Park/ neutral position switch (P position)
	7	Park/ neutral position switch (2 position)
	8	Park/ neutral position switch (L position)
	10	O/D main switch
	11	Engine and ECU ECU
	12	Low oil pressure warning switch
	13	Starter relay
	14	Engine and ECU ECU
	16	Rear fog light switch
	17	ABS, TRC, VSC, ECU
	18	ABS, TRC, VSC, ECU
	19	ABS, TRC, VSC, ECU
	20	ABS, TRC, VSC, ECU
D	3	Suspension control ECU
	4	Suspension control ECU
	5	Suspension control ECU
	6	Suspension control ECU
	7	ABS, TRC, VSC, ECU
	8	Parking brake switch
	10	Body control ECU (Instrument panel ECU)
	11	ECT pattern select switch
	12	Ground
	13	Turn signal switch (Left side)
	14	Headlight dimmer switch
	15	Turn signal switch (Right side)
	18	ABS, TRC, VSC, ECU