
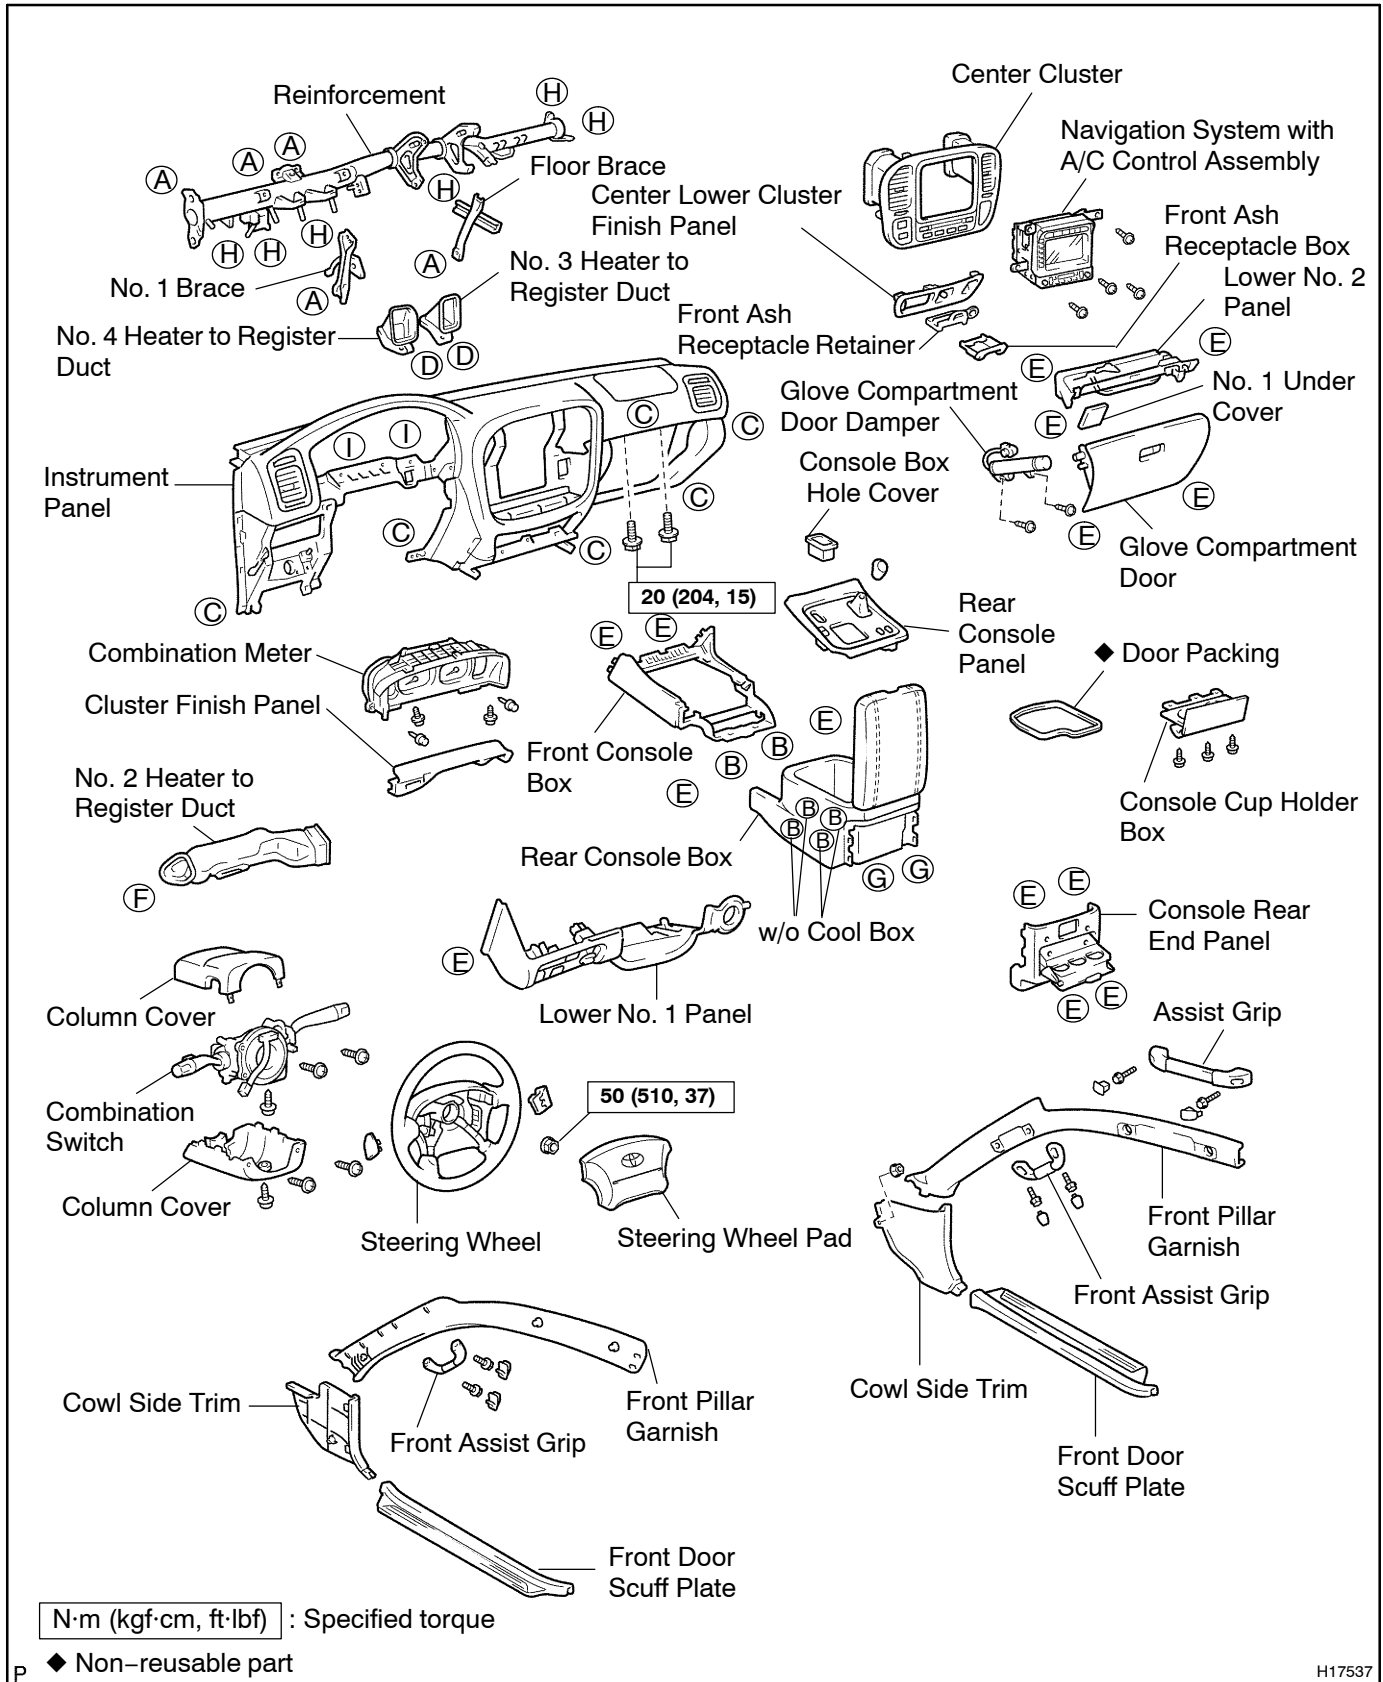
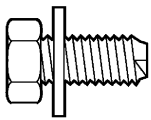
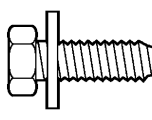
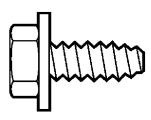
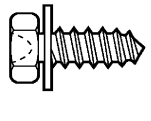
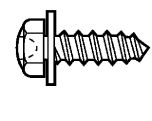
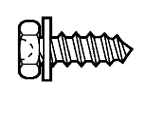
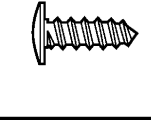
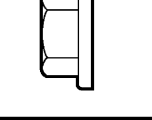


INSTRUMENT PANEL COMPONENTS

BO42W-01

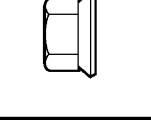

HINT:
Screw shapes and sizes are indicated in the table below. The codes (A – I) correspond to those indicated on the previous page.

mm (in.)								
	Shape	Size		Shape	Size		Shape	Size
Ⓐ		ø = 8 (0.31) L = 16 (0.63)	Ⓑ		ø = 6 (0.24) L = 18 (0.71)	Ⓒ		ø = 6 (0.24) L = 16 (0.63)
Ⓓ		ø = 6 (0.24) L = 16 (0.63)	Ⓔ		ø = 5 (0.20) L = 16 (0.63)	Ⓕ		ø = 5 (0.20) L = 14 (0.55)
Ⓖ		ø = 5 (0.20) L = 14 (0.55)	Ⓖ		ø = 8 (0.31)	Ⓖ		ø = 6 (0.24)