


REPLACEMENT

HINT:

- The following is the seat heater replacement procedure.
- Care should be taken during operation to protect the seat cover from scratches, dirt or accidental cut of thread.

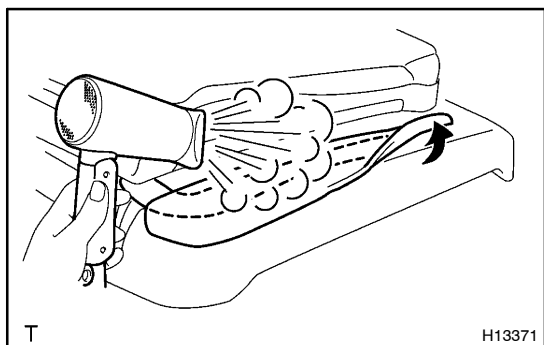

1. REMOVE SIDE OF SEAT HEATER

- (a) Using a hair dryer, heat the adhesive tape.


NOTICE:

Do not heat the adhesive tape excessively.

- (b) Peel the adhesive tape and remove the side of the seat cushion heater.
- (c) Use the same manner described above to the other side.

NOTICE:


Heating the adhesive tape insufficiently may result in damage to the pad.

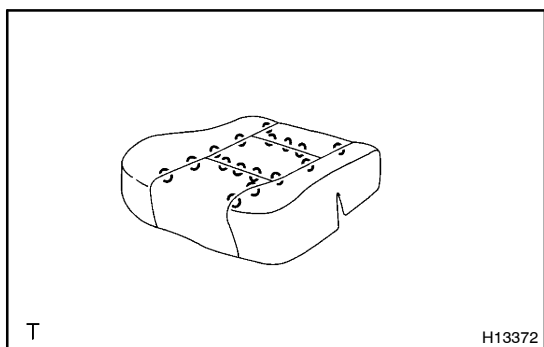


2. Seat cushion cover:

REMOVE SEAT HEATER


- (a) Remove the 16 hog rings.
- (b) Remove the seat cushion cover from pad.
- (c) Turn the seat cushion cover inside out.

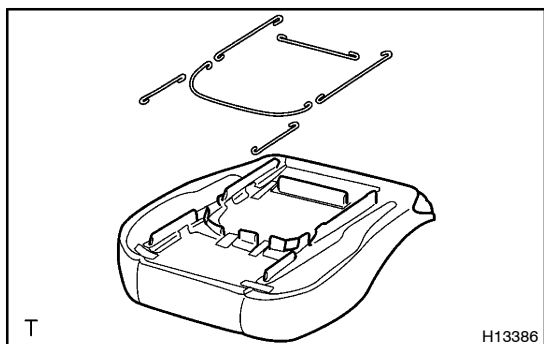


- (d) Disconnect the 6 seat wires.

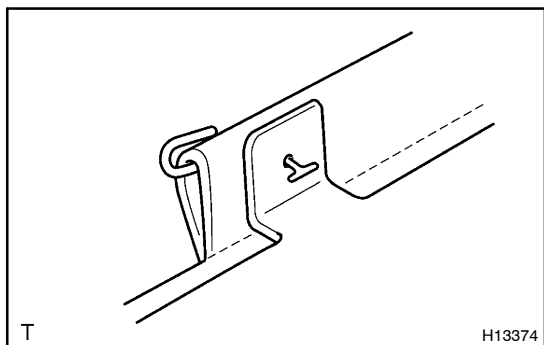

- (e) Remove the tack pins which are fastened to the heater.
- (f) Remove the seat heater from the seat cushion cover.

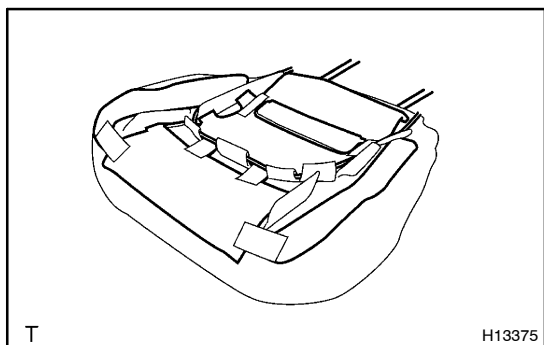
**HINT:**

Surely remove the wire before removing the seat heater.

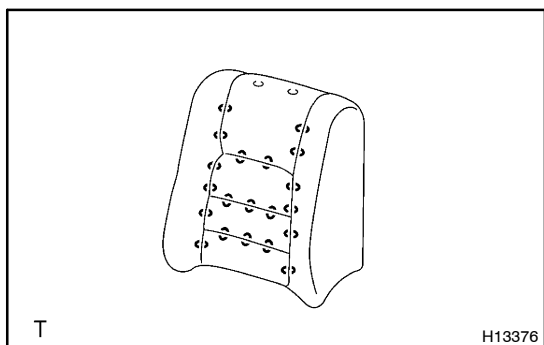


**3. Seatback cover:
REMOVE SEAT HEATER**

- (a) Remove the 20 hog rings and wires.
- (b) Remove the seatback cover from the pad.
- (c) Turn the seatback cover inside out.

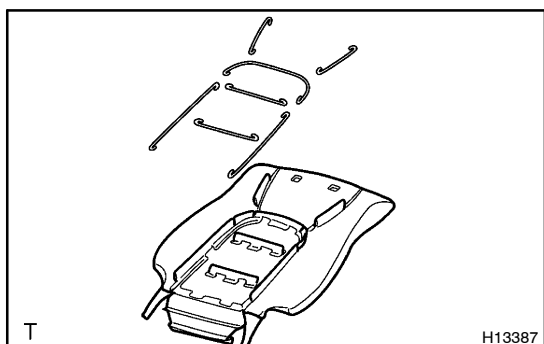

- (d) Disconnect the 7 seat wires.

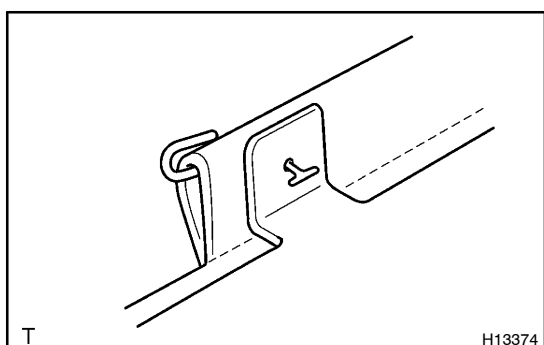

- (e) Remove the tack pins which are fastened to the seat heater.
 - (f) Remove the seat heater from the seatback cover.
- 4. INSTALL NEW SEAT HEATER TO SEAT COVER**
- (a) Using a tacker, install a new seat heater to the seat cushion cover with tack pins.




Tacker: BANZAI 303XT or equivalent

NOTICE:


Do not substitute other metal parts in place of tack pins. Insufficient distance between the heater and cover may result damage to the heater.

HINT:

- Fasten the cover and heater with tack pins matching the seam with the v slit of heater.
- Sewing thread can be substituted for tack pins. However, allow a distance of 6 – 7 mm (0.24 – 0.28 in.) between both sewed parts of the heater and

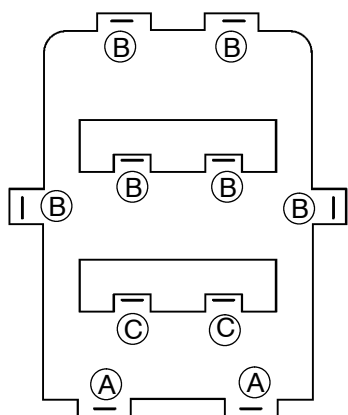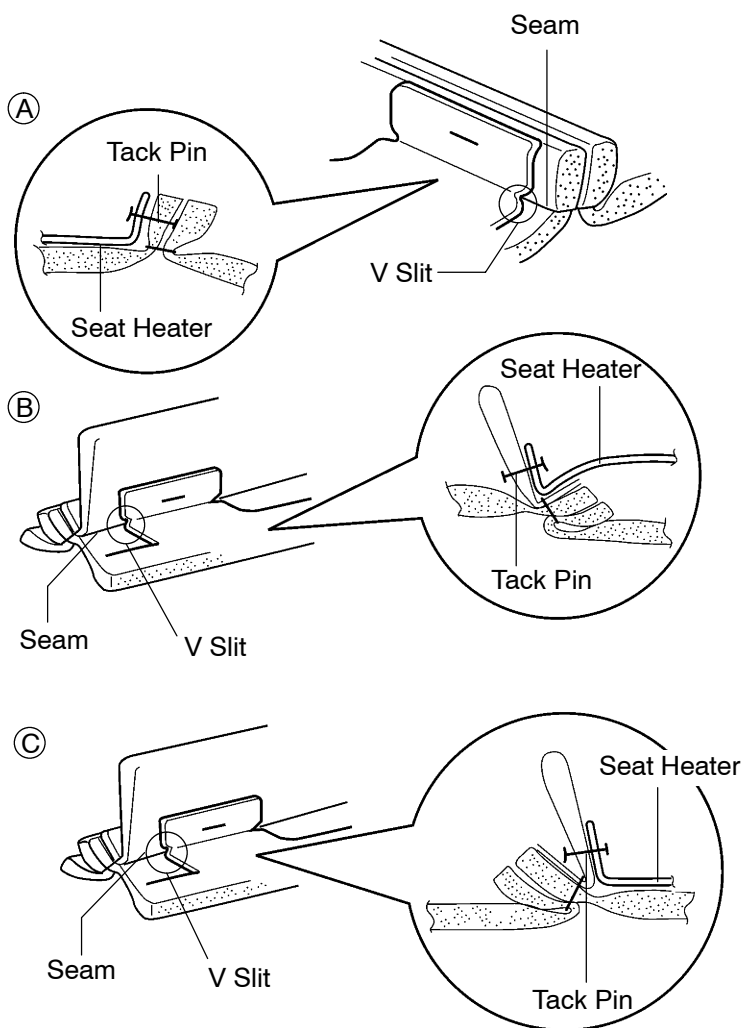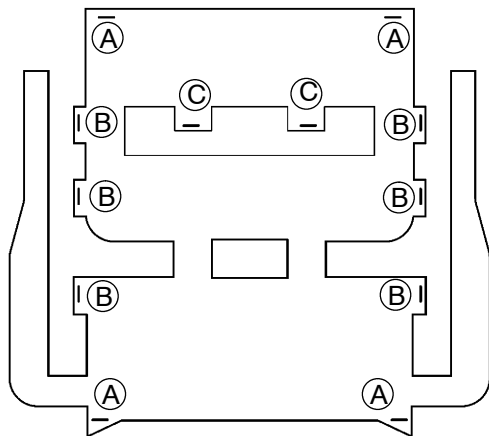
Seatback cover:**Seat cushion cover:**

H13377

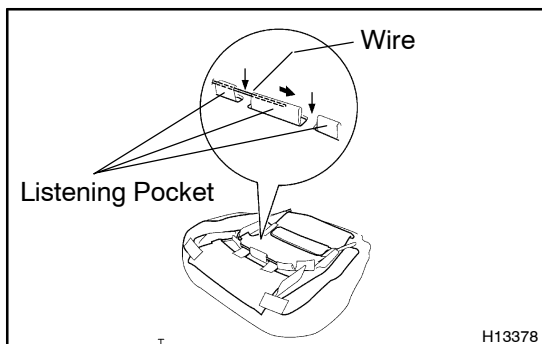


H13378

- (b) Thread the wire through the listing pocket after setting the seat heater to the seat cushion cover.

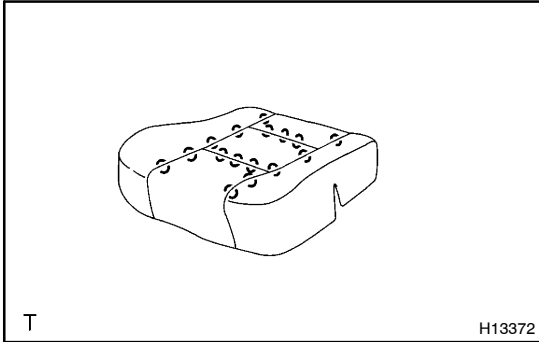

5. INSTALL SEAT CUSHION COVER TO SEAT CUSHION PAD


- (a) Thread the 6 wires through the listing pocket.
- (b) Install the seat cushion cover with 23 new hog rings.
- (c) Reverse turn the seat cushion cover back into its original position.

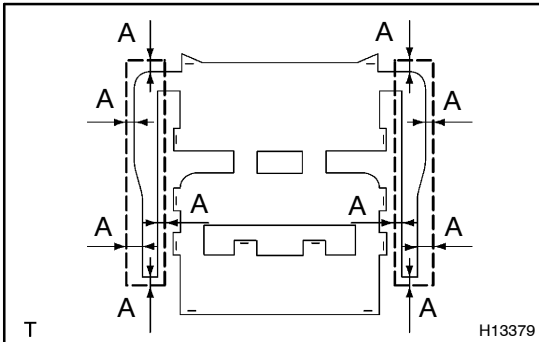

6. INSTALL SIDES OF NEW SEAT HEATER


Install the sides of new seat heater to the seat cushion pad with adhesive tapes.

A: 15 mm (0.59 in.) or more

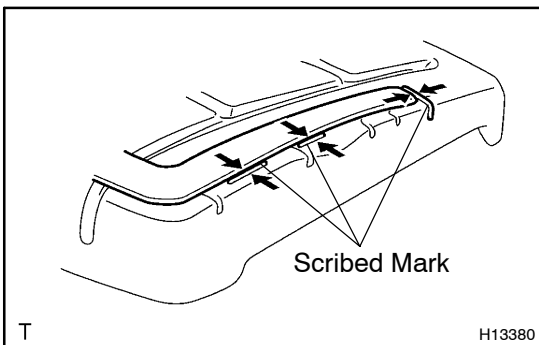

HINT:

Set the side of new seat heater, align its outline with the scribed marks.

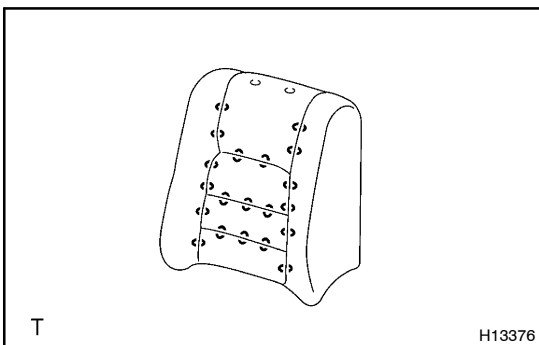

7. INSTALL SEATBACK COVER TO PAD

- (a) Thread the 7 wires through the listing pocket.
- (b) Reverse the seatback cover back to its original position.
- (c) Install the seatback cover to pad with 26 new hog rings.