


ACC Power Source Circuit

CIRCUIT DESCRIPTION

This is the power source for A/C amplifier and servomotors, etc.


WIRING DIAGRAM

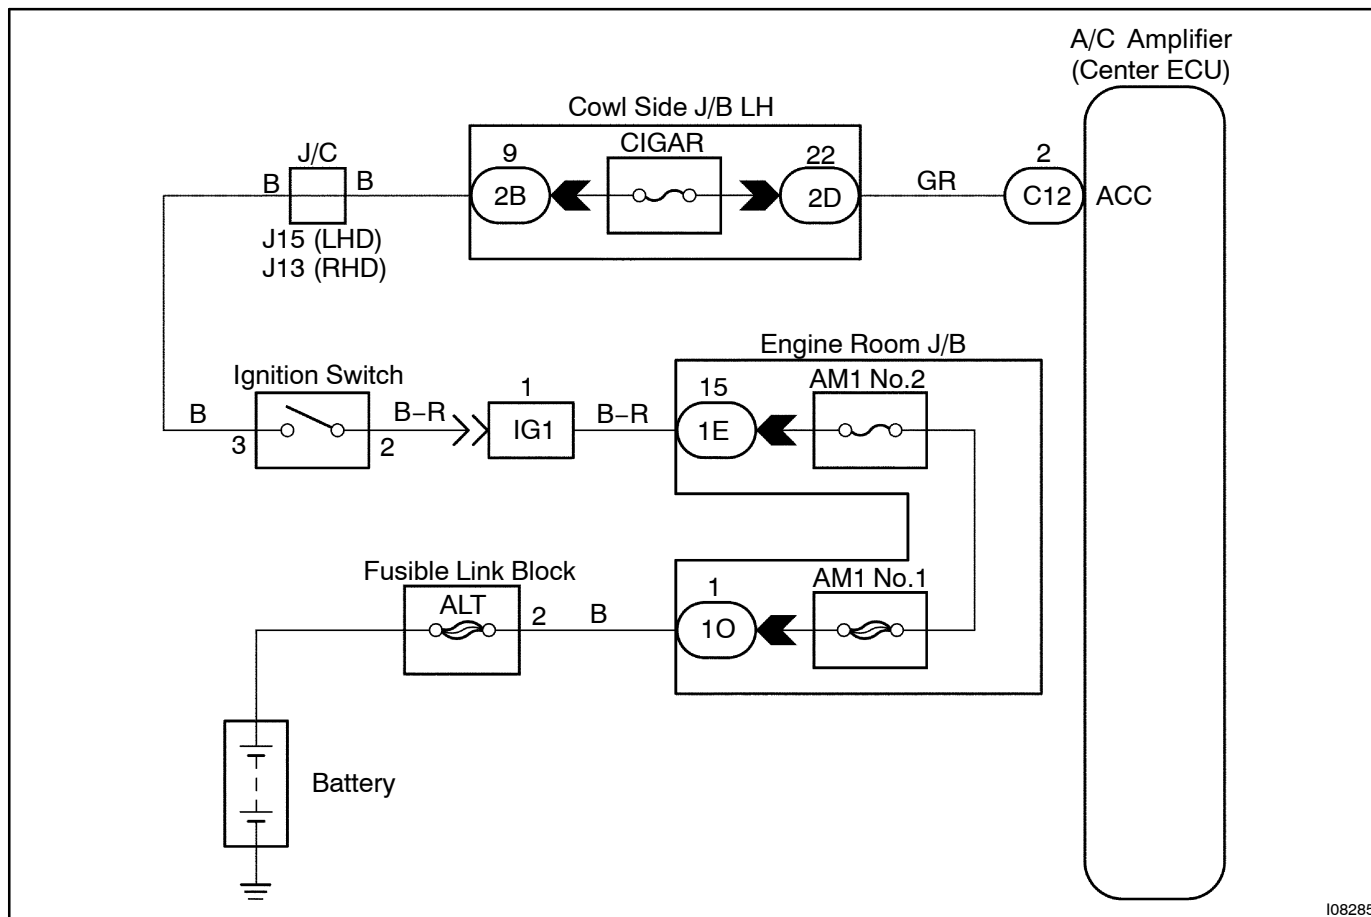

108285

INSPECTION PROCEDURE

1	Check voltage between terminals ACC and GND of A/C amplifier connector.
---	---

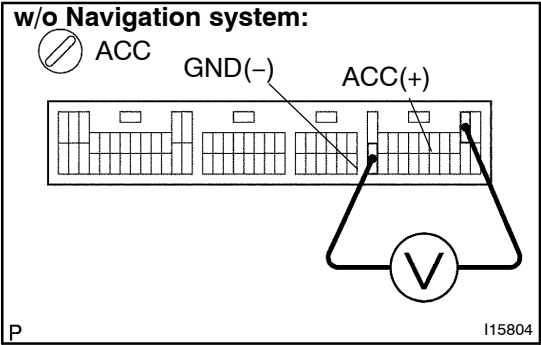

PREPARATION:


Remove A/C amplifier with connectors still connected.

CHECK:

- (a) Turn ignition switch ON.
- (b) Measure voltage between terminals ACC and GND of A/C amplifier.

OK:


Voltage : Battery positive voltage

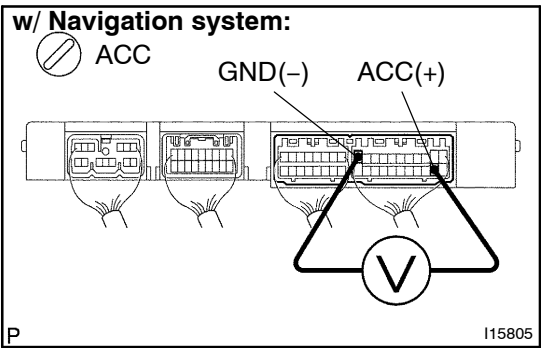

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-130](#)).


NG

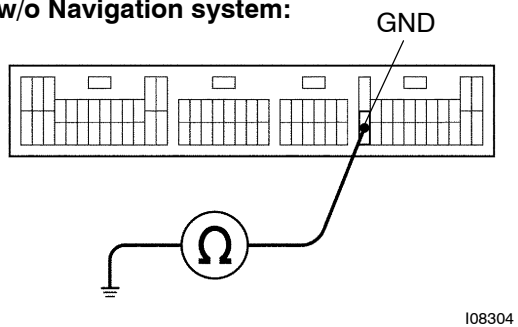2 Check continuity between terminal GND of A/C amplifier and body ground.**w/o Navigation system:****CHECK:**

Measure resistance between terminal GND of A/C amplifier and body ground.


OK:

Resistance : 0 Ω (continuity)

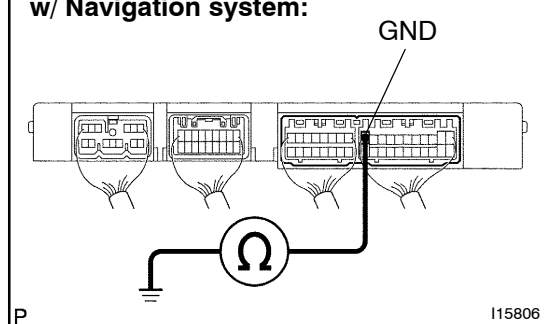NG**Repair or replace harness or connector.****w/ Navigation system:****OK**

3 Check IGN fuse.

Cowl Side J/B

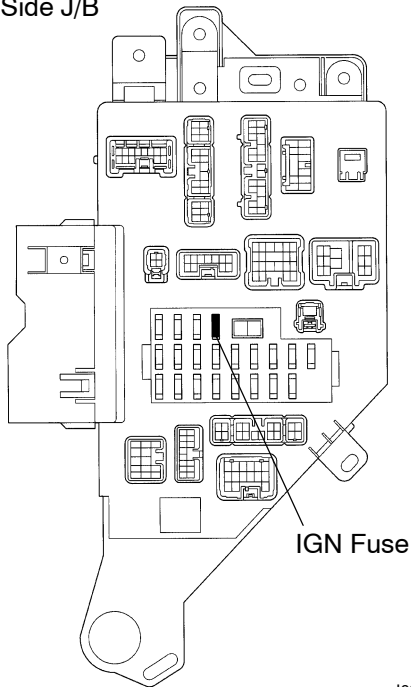**PREPARATION:**

Remove IGN fuse from cowl side J/B.

CHECK:

Check continuity of IGN fuse.

OK:**Continuity****NG****Check for short in all the harness and components connected to the IGN fuse (See attached wiring diagram).****OK****Check and repair harness and connector between A/C amplifier.**