


VEHICLE LIFT AND SUPPORT LOCATIONS

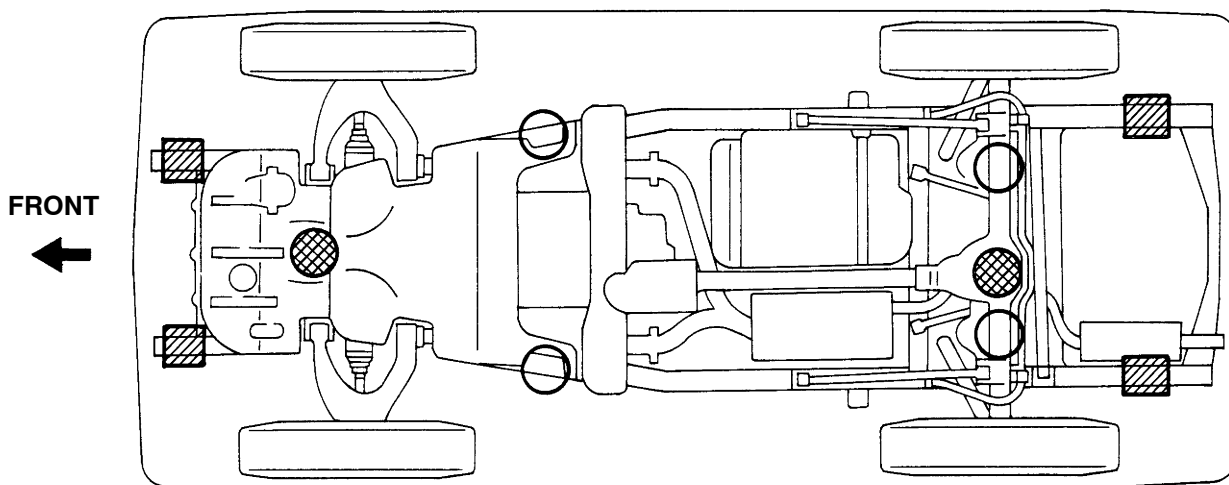

JACK POSITION ————— 

Front Engine under cover

Rear Rear differential carrier

CAUTION : When jacking-up the front and rear, make sure the car is not carrying any extra weight.


SCREW TYPE JACK POSITION ————— 

SUPPORT POSITION
Safety stand 

NOTICE: (w/ Active Height Control Suspension)
When jacking up the vehicle with the engine running, turn off the active height control suspension with the height control switch pushed.


B04208

SWING ARM TYPE LIFT

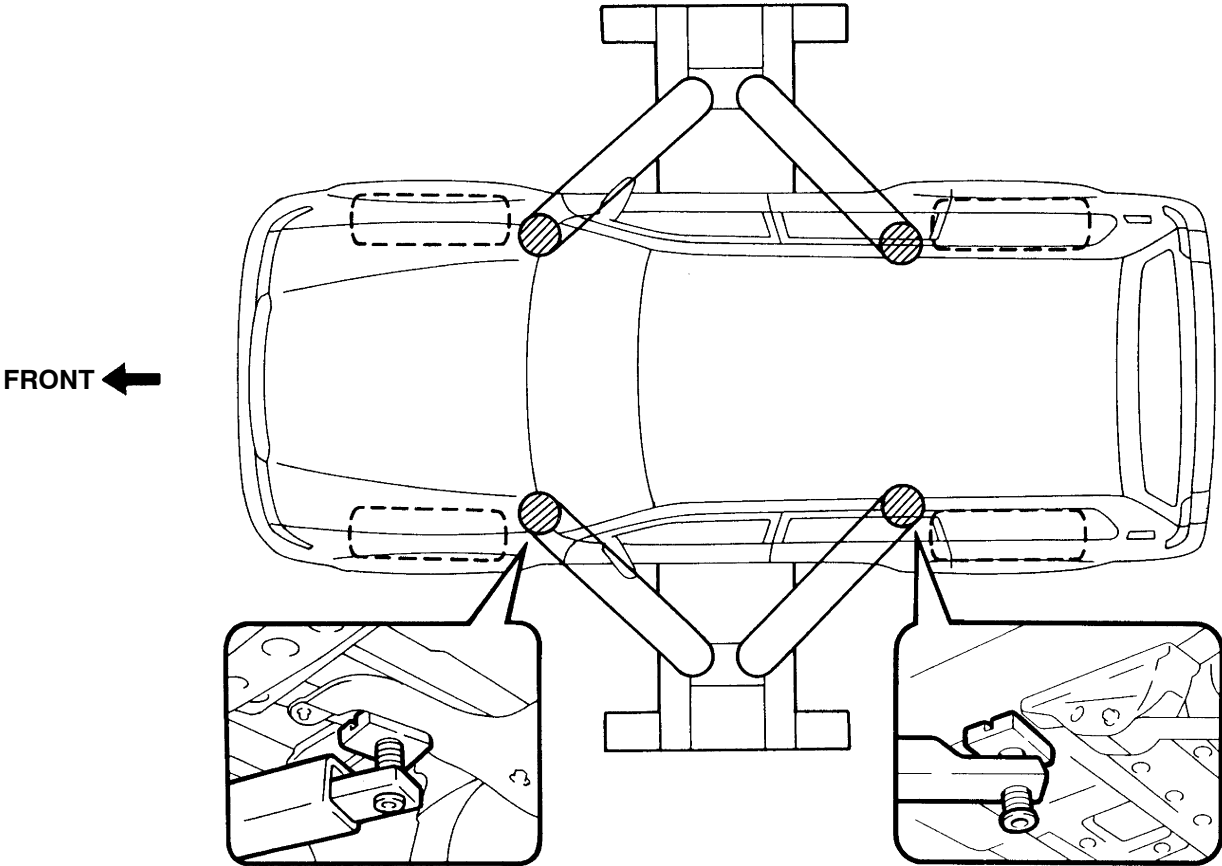

NOTICE: When lifting the vehicle, place the supports correctly at the positions shown above.

PLATE TYPE LIFT (DO NOT USE.)

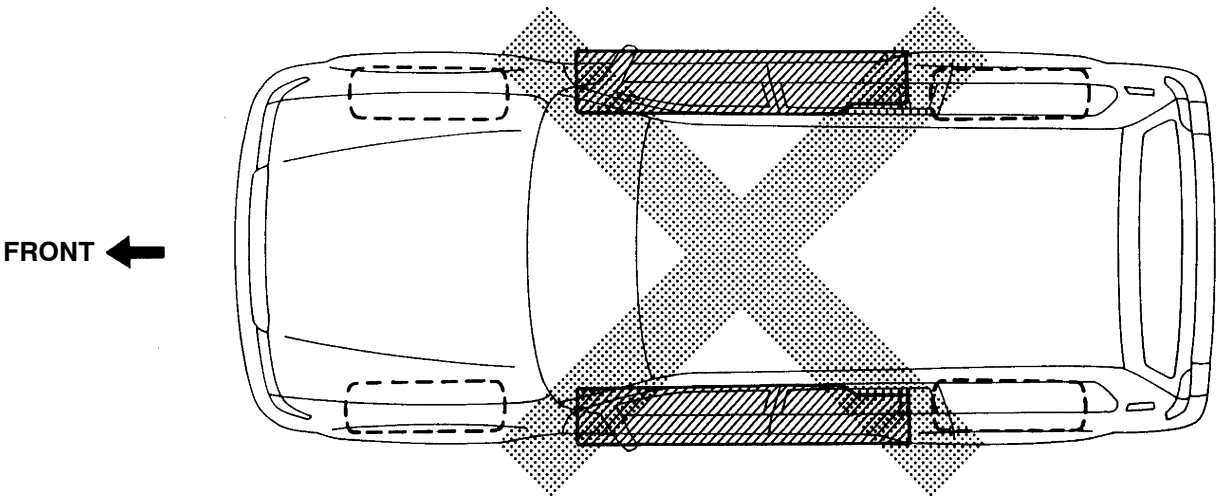

NOTICE: Never use the plate type lift—using it to lift up the vehicle will cause the body shape to warp.

B04209