



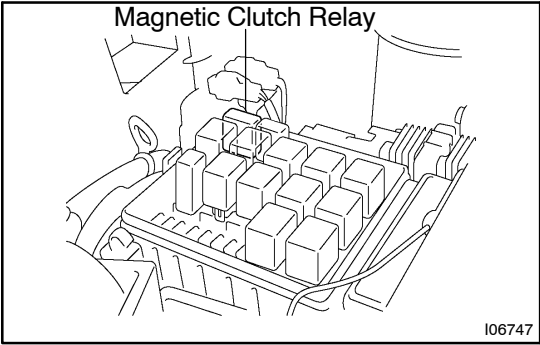

MAGNETIC CLUTCH RELAY INSPECTION

AC1LY-02

1. REMOVE MAGNETIC CLUTCH RELAY (Marking: MGCLT) FROM ENGINE ROOM RELAY BLOCK

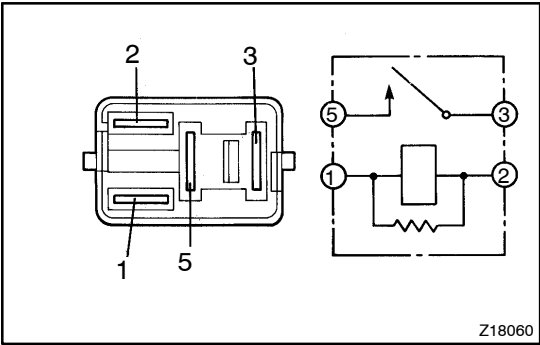

2. INSPECT MAGNETIC CLUTCH RELAY (Marking: MG CLT) CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the magnetic clutch relay.

3. INSTALL RELAY TO ENGINE ROOM RELAY BLOCK