


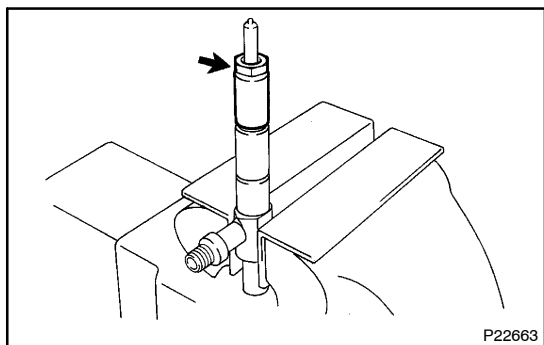

DISASSEMBLY

DISASSEMBLE INJECTION NOZZLES

- (a) Remove the nozzle holder retaining nut.

NOTICE:

When disassembling the nozzle, careful not to drop the inner parts.

- (b) Disassemble the injection nozzle.