
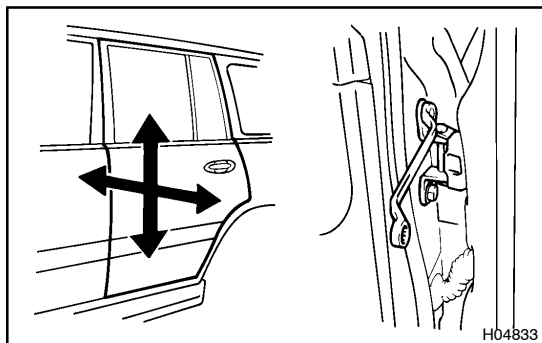


ADJUSTMENT


1. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS

- (a) Remove the front door scuff plate.
- (b) Remove the rear door scuff plate.
- (c) Remove the front door opening trim.
- (d) Remove the rear door opening trim.
- (e) Remove the center pillar lower garnish.
- (f) Loosen the body side hinge nuts to adjust.
Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)
- (g) Install the removed parts.

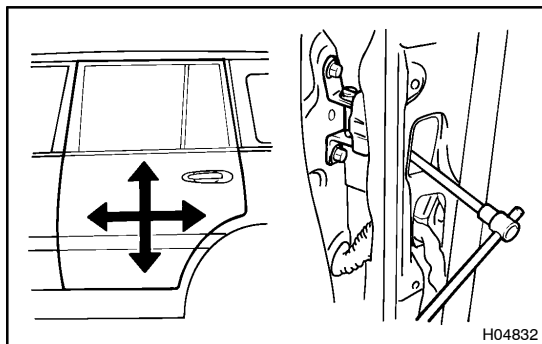

2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

- Loosen the door side hinge bolts to adjust.
Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)

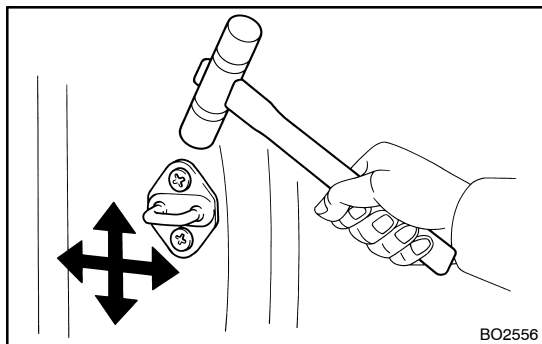

3. ADJUST DOOR LOCK STRIKER

- (a) Check that the door fit and door lock linkages are adjusted correctly.
- (b) Loosen the striker mounting screws to adjust.
Torque: 11 N·m (115 kgf·cm, 8 ft·lbf)
- (c) Using a plastic hammer, tap the striker to adjust it.