


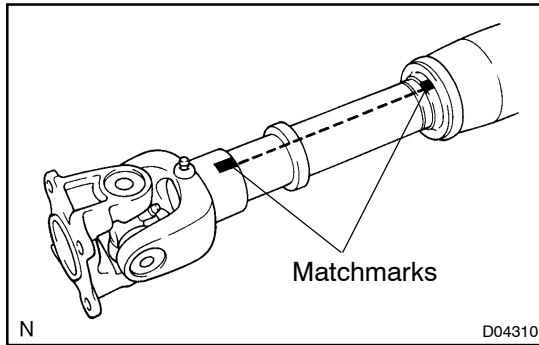


REPLACEMENT

NOTICE:

Be careful not to grip the propeller shaft tube too tightly in a vise as this will cause deformation.

REPLACE DUST COVER


- (a) Remove the sleeve yoke from the propeller shaft.
 - (1) Place matchmarks on the sleeve yoke and shaft.
 - (2) Pull out the sleeve yoke from the shaft.

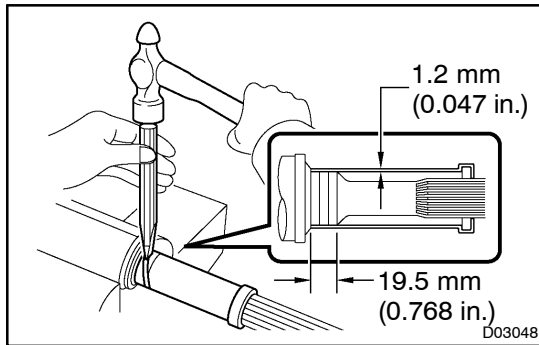

- (b) Remove the dust cover.
Cut the dust cover spirally at the pressing-in part with a saw and pry it off with a chisel and hammer.

NOTICE:

Do not damage the propeller shaft. If damaged, replace the shaft with a new one.

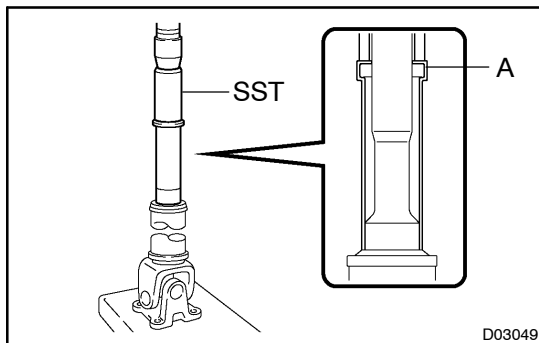

- (c) Install a new dust cover.
Using SST and press, press in a new dust cover.
SST 09636-20010

NOTICE:

Place the universal joint straight when pressing in the dust cover. Apply MP grease to the "A" part.

- (d) Insert the sleeve yoke into the propeller shaft.
 - (1) Apply MP grease to the propeller shaft spline and sleeve yoke sliding surface.
 - (2) Align the matchmarks on the sleeve yoke and propeller shaft.
 - (3) Install the propeller shaft into the sleeve yoke.