


## E ELECTRICAL WIRING ROUTING

### Position of Parts in Engine Compartment

[LHD : 2UZ-FE]

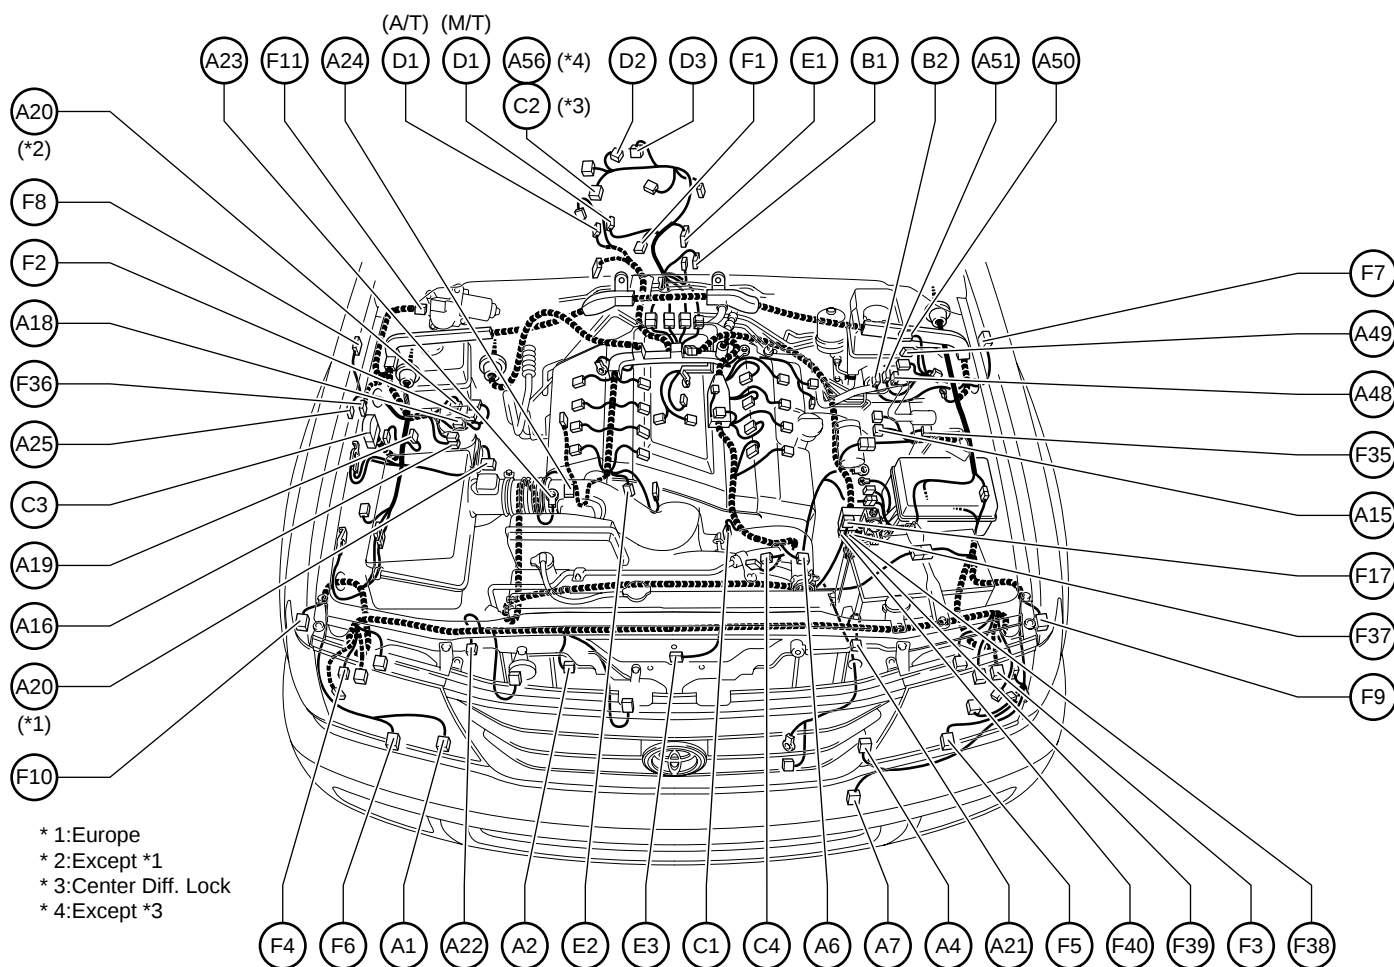

- \* 1: Europe
- \* 2: Except \*1
- \* 3: Center Diff. Lock
- \* 4: Except \*3

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Condenser Fan Motor
- A 4 Pressure SW
- A 6 A/C Magnetic Clutch and Lock Sensor
- A 7 A/C Magnetic Valve
- A 15 ABS Speed Sensor Front LH
- A 16 ABS Speed Sensor Front RH
- A 18 AHC Pump Motor
- A 19 Air Cleaner Warning Sensor
- A 20 Air Flow Meter
- A 21 Airbag Sensor Front LH
- A 22 Airbag Sensor Front RH
- A 23 Alternator
- A 24 Alternator
- A 25 Auto Antenna Motor
- A 48 ABS & BA & TRC & VSC Actuator
- A 49 ABS & BA & TRC & VSC Actuator
- A 50 ABS & BA & TRC & VSC Actuator
- A 51 ABS & BA & TRC & VSC Actuator
- A 56 ADD Control Motor
- B 1 Back-Up Light SW
- B 2 Brake Fluid Level Warning SW
- C 1 Camshaft Position Sensor
- C 2 Center Diff. Lock Control Motor
- C 3 Check Connector
- C 4 Crankshaft Position Sensor

- D 1 Detection SW (Center Diff. Lock)
- D 2 Detection SW (Transfer L Position)
- D 3 Detection SW (Transfer Neutral Position)
- E 1 ECT Solenoid
- E 2 EFI Water Temp. Sensor
- E 3 Engine Hood Courtesy SW
- F 1 First Position SW
- F 2 Fluid Pressure Sensor
- F 3 Front Clearance Light LH
- F 4 Front Clearance Light RH
- F 5 Front Fog Light LH
- F 6 Front Fog Light RH
- F 7 Front Side Turn Signal Light LH
- F 8 Front Side Turn Signal Light RH
- F 9 Front Turn Signal Light LH
- F 10 Front Turn Signal Light RH
- F 11 Front Wiper Motor
- F 17 Fusible Link Block
- F 35 Fuel Pump Resistor LH
- F 36 Fuel Pump Resistor RH
- F 37 Fusible Link Block
- F 38 Fusible Link Block
- F 39 Fusible Link Block
- F 40 Fusible Link Block