


Position of Parts in Engine Compartment

[RHD : 1HD-FTE]

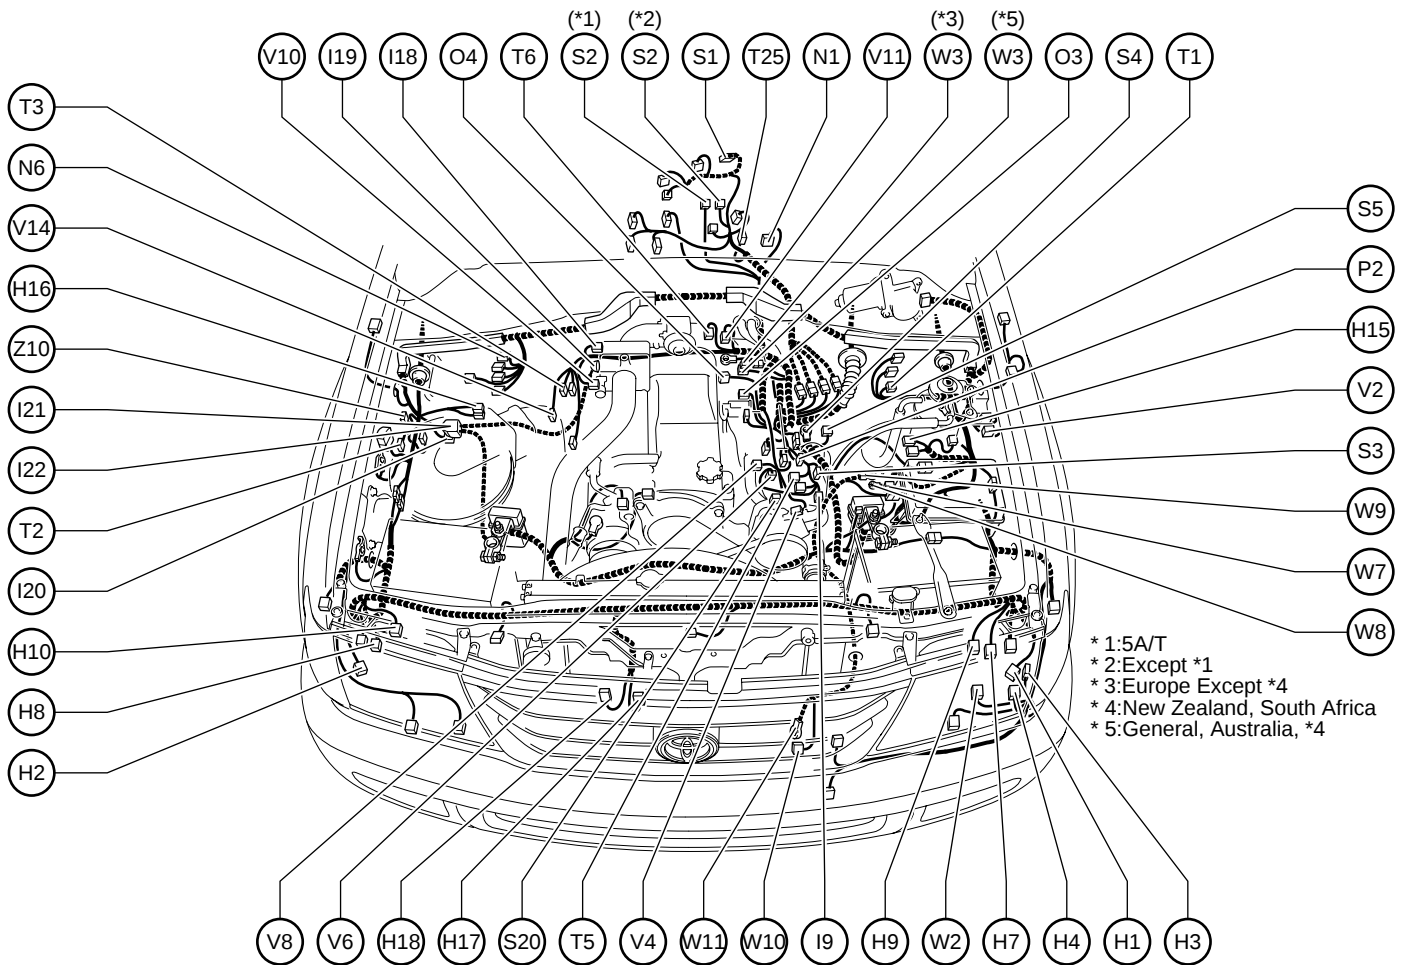

* 1:5A/T
 * 2:Except *1
 * 3:Europe Except *4
 * 4:New Zealand, South Africa
 * 5:General, Australia, *4

H 1 Headlight Beam Level Control Actuator LH
 H 2 Headlight Beam Level Control Actuator RH
 H 3 Headlight Cleaner Control Relay
 H 4 Headlight Cleaner Motor
 H 7 Headlight LH (High)
 H 8 Headlight RH (High)
 H 9 Headlight LH (Low)
 H10 Headlight RH (Low)
 H15 Height Control Sensor Front LH
 H16 Height Control Sensor Front RH
 H17 Horn LH
 H18 Horn RH

I 9 Injection Pump
 I 18 Intake Air Temp. Sensor
 I 19 Intake Heater
 I 20 Intake Heater Relay
 I 21 Intake Heater Relay
 I 22 Intake Heater Relay

N 1 A/T Indicator Light SW
 Neutral Start SW
 N 6 Noise Filter (ABS)

O 3 Oil Level Sensor
 O 4 Oil Pressure Sender

P 2 Power Steering Oil Pressure SW

S 1 Speed Sensor (Combination Meter)
 S 2 Speed Sensor (ECT)
 S 3 Spill Valve
 S 4 Starter
 S 5 Starter
 S20 Swirl Control Valve

T 1 Temp. Sensor (AHC)
 T 2 Theft Deterrent Horn
 T 3 Throttle Control Motor
 T 5 Timing Control Valve
 T 6 Turbo Pressure Sensor
 T 25 Turbine Speed Sensor

V 2 Vacuum SW
 V 4 Viscous Heater Magnetic Clutch
 V 6 VRV (EGR)
 V 8 VSV (EGR Cut)
 V10 VSV (Fully Closed)
 V11 VSV (Turbo Pressure Sensor)
 V14 VRV (EGR No.2)

W 2 Washer Motor
 W 3 Water Temp. Sender
 W 7 Winch Main Relay
 W 8 Winch Main Relay
 W 9 Winch Main Relay
 W10 Winch Motor and Magnetic SW
 W11 Winch Motor and Magnetic SW

Z10 Option Connector (Wireless Door Lock Buzzer)