


E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 1HZ]

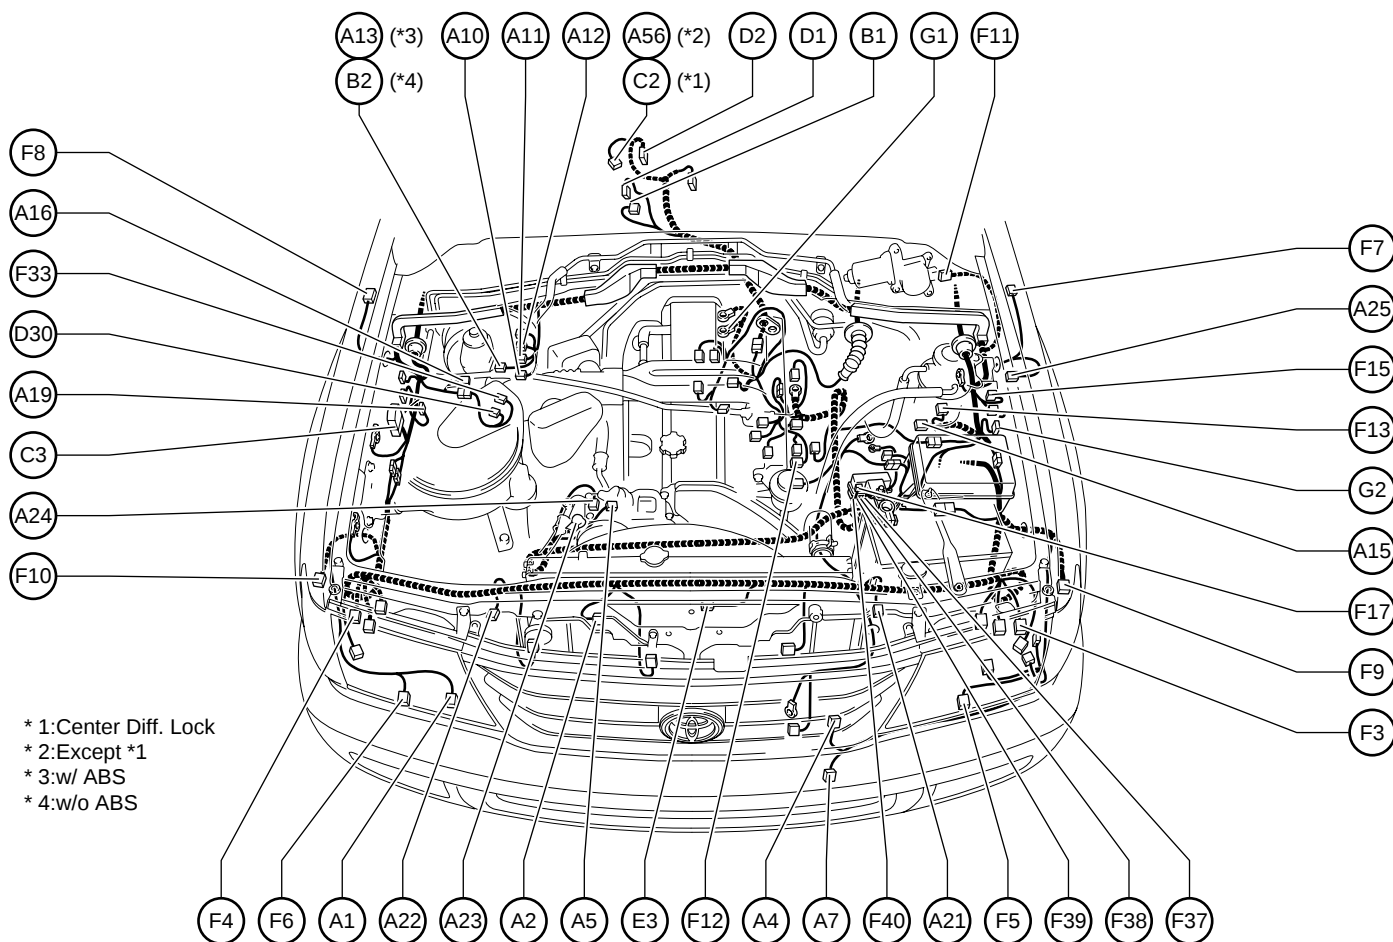

- * 1:Center Diff. Lock
- * 2:Except *1
- * 3:w/ ABS
- * 4:w/o ABS

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Condenser Fan Motor
- A 4 Pressure SW
- A 5 A/C Magnetic Clutch
- A 7 A/C Magnetic Valve
- A10 ABS Actuator
- A11 ABS Actuator
- A12 ABS Actuator
- A13 ABS Actuator
- A15 ABS Speed Sensor Front LH
- A16 ABS Speed Sensor Front RH
- A19 Air Cleaner Warning Sensor
- A21 Airbag Sensor Front LH
- A22 Airbag Sensor Front RH
- A23 Alternator
- A24 Alternator
- A25 Auto Antenna Motor
- A56 ADD Control Motor

- B 1 Back-Up Light SW
- B 2 Brake Fluid Level Warning SW

- C 2 Center Diff. Lock Control Motor
- C 3 Check Connector

- D 1 Detection SW (Center Diff. Lock)
- D 2 Detection SW (Transfer L Position)
- D30 Detection SW (Front Diff. Lock)

- E 3 Engine Hood Courtesy SW

- F 3 Front Clearance Light LH
- F 4 Front Clearance Light RH
- F 5 Front Fog Light LH
- F 6 Front Fog Light RH
- F 7 Front Side Turn Signal Light LH
- F 8 Front Side Turn Signal Light RH
- F 9 Front Turn Signal Light LH
- F10 Front Turn Signal Light RH
- F11 Front Wiper Motor
- F12 Fuel Cut Valve Controller
- F13 Fuel Heater SW
- F15 Fuel Sediment SW
- F17 Fusible Link Block
- F33 Front Diff. Lock Motor
- F37 Fusible Link Block
- F38 Fusible Link Block
- F39 Fusible Link Block
- F40 Fusible Link Block

- G 1 Glow Plug
- G 2 Glow Plug Relay