


Position of Parts in Engine Compartment

[RHD : 1HZ]

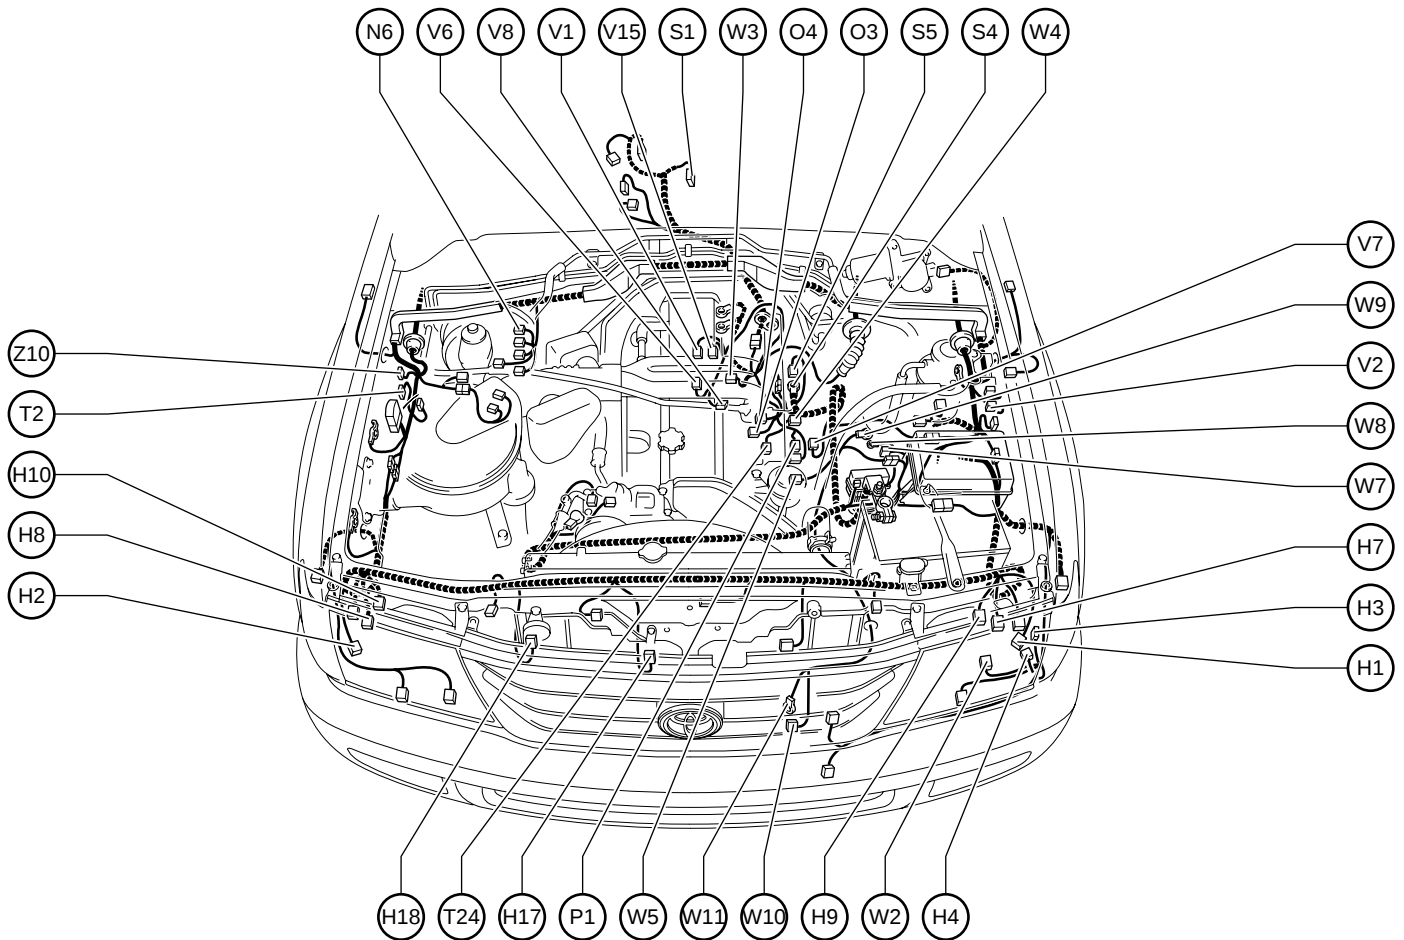

H 1 Headlight Beam Level Control Actuator LH
 H 2 Headlight Beam Level Control Actuator RH
 H 3 Headlight Cleaner Control Relay
 H 4 Headlight Cleaner Motor
 H 7 Headlight LH (High)
 H 8 Headlight RH (High)
 H 9 Headlight LH (Low)
 H10 Headlight RH (Low)
 H17 Horn LH
 H18 Horn RH

N 6 Noise Filter (ABS)

O 3 Oil Level Sensor
 O 4 Oil Pressure Sender

P 1 Pick-Up Sensor

S 1 Speed Sensor (Combination Meter)
 S 4 Starter
 S 5 Starter

T 2 Theft Deterrent Horn
 T 24 Throttle Position Sensor and Timing Control Valve

V 1 Vacuum Sensor
 V 2 Vacuum SW
 V 6 VRV (EGR)
 V 7 VSV (A/C Idle-UP)
 V 8 VSV (EGR Cut)
 V15 VSV (BACS)

W 2 Washer Motor
 W 3 Water Temp. Sender
 W 4 Water Temp. Sensor (Glow Plug)
 W 5 Water Temp. SW (A/C)
 W 7 Winch Main Relay
 W 8 Winch Main Relay
 W 9 Winch Main Relay
 W10 Winch Motor and Magnetic SW
 W11 Winch Motor and Magnetic SW

Z10 Option Connector (Wireless Door Lock Buzzer)