


Position of Parts in Body

[RHD : Swing Type]

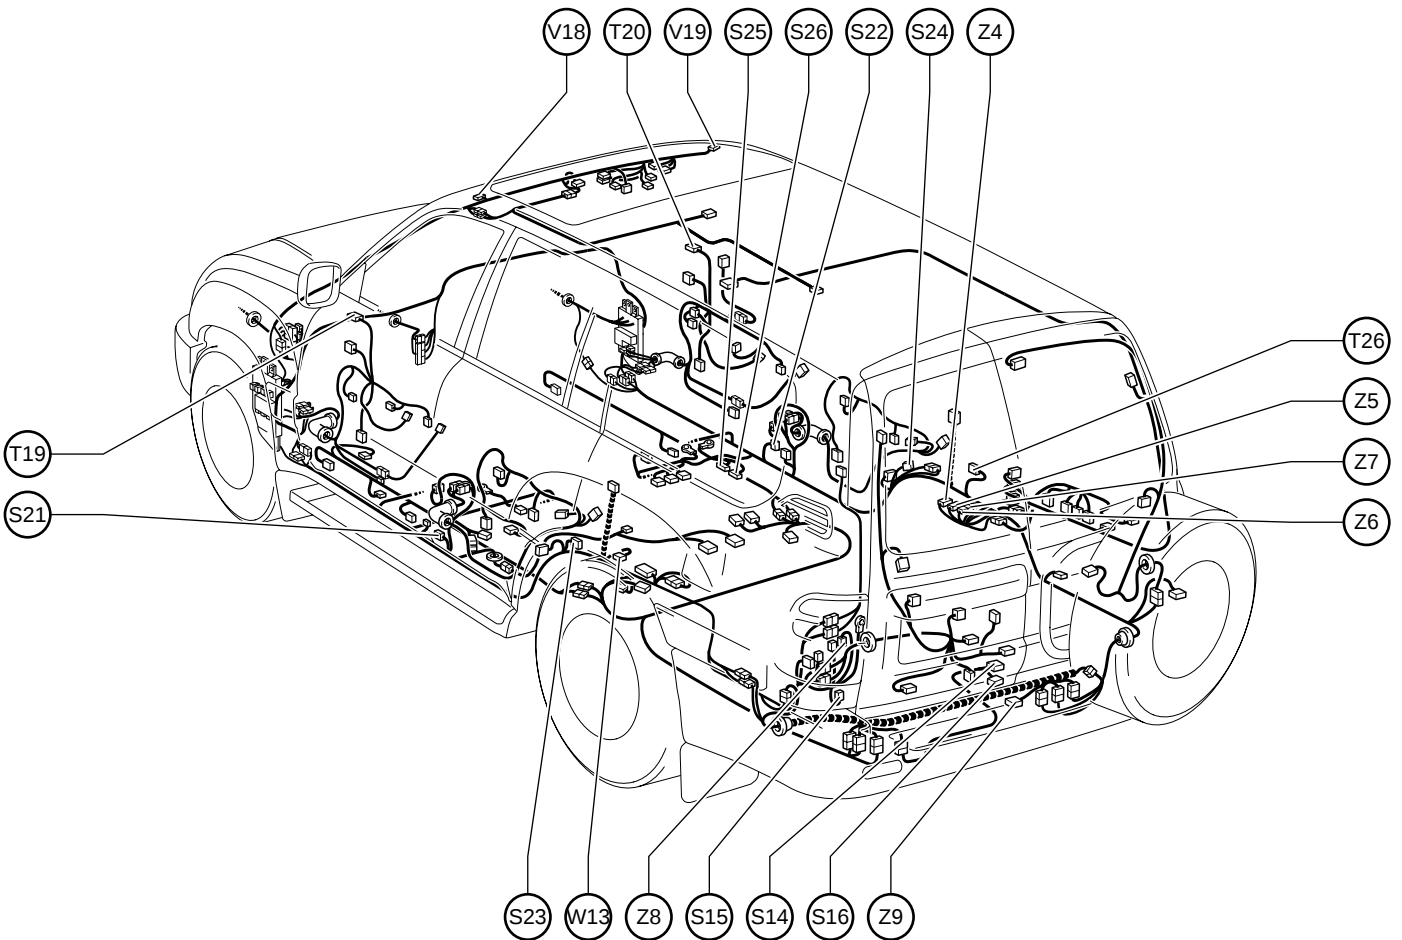

S14 Sub Fuel Pump
 S15 Sub Fuel Pump Forcing Driving Relay
 S16 Sub Fuel Sender
 S21 Side Airbag Sensor Front LH
 S22 Side Airbag Sensor Front RH
 S23 Side Airbag Sensor Rear LH
 S24 Side Airbag Sensor Rear RH
 S25 Stereo Component Amplifier
 S26 Stereo Component Amplifier

T19 Tweeter LH
 T20 Tweeter RH
 T26 Theft Deterrent Siren

V18 Vanity Light LH
 V19 Vanity Light RH

W13 Woofer (Speaker)

Z 4 Option Connector (Celular Mobile Telephone)
 Z 5 Option Connector (Celular Mobile Telephone)
 Z 6 Option Connector (Celular Mobile Telephone)
 Z 7 Option Connector (Celular Mobile Telephone)
 Z 8 Option Connector (Microphone)
 Z 9 Option Connector (Trailer Towing)