


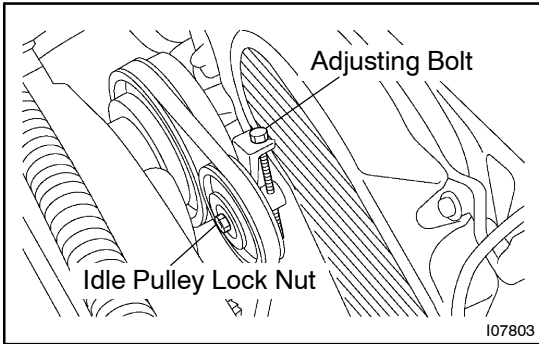

INSTALLATION

INSTALL DRIVE BELT

- (a) Tighten the idle pulley lock nut temporarily.
Torque: 2.5 N·m (25 kgf·cm, 22 in·lbf)
- (b) Install drive belt.
- (c) Using an adjusting bolt, adjust drive belt tension.

Drive belt tension:

New belt: 520 – 755 N (53 – 77 kgf)

Used belt: 343 – 539 N (35 – 55 kgf)

- (d) Tighten the idle pulley lock nut.
Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)