



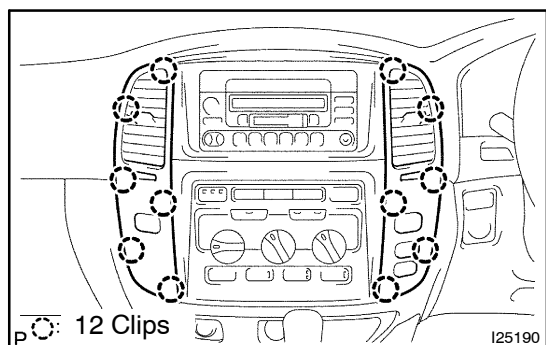

REMOVAL


1. REMOVE CENTER RESISTOR

Remove the 2 center resistors.

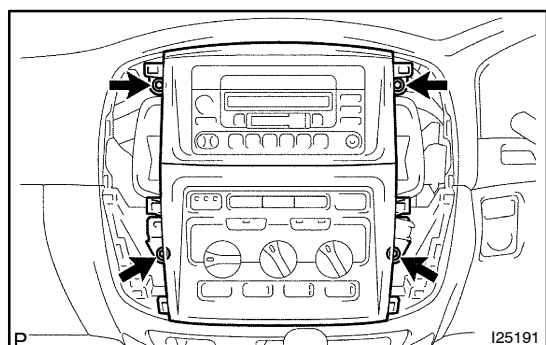


2. REMOVE INTEGRATION CONTROL PANEL ASSEMBLY

- Remove the 4 bolts.
- Remove the integration control panel assembly.
- Disconnect the connectors.

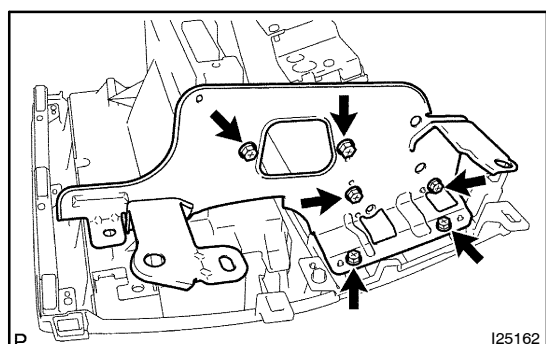

3. REMOVE RADIO RECEIVER BRACKET LH


Remove the 6 bolts and radio receiver bracket LH.

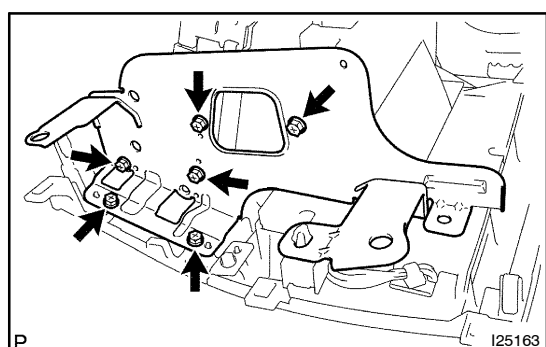

4. REMOVE RADIO RECEIVER BRACKET RH

Remove the 4 screws, 2 bolts and radio receiver bracket RH.

5. REMOVE RADIO RECEIVER

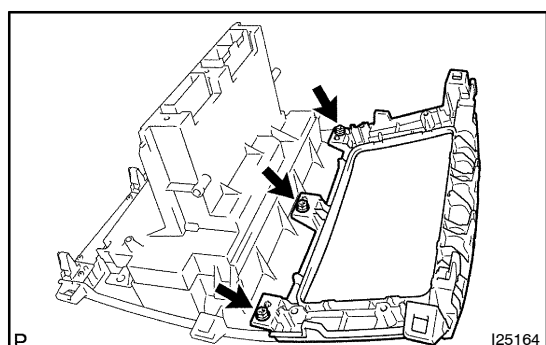

6. REMOVE CENTER CLUSTER FINISH PANEL

Remove the 3 screws and center cluster finish panel.