



REASSEMBLY

1. REASSEMBLE SHIFT LEVER PLATE

- (a) Install the 2 spring nuts.
- (b) Install the 4 collars.
- (c) Install the shift lever seal.

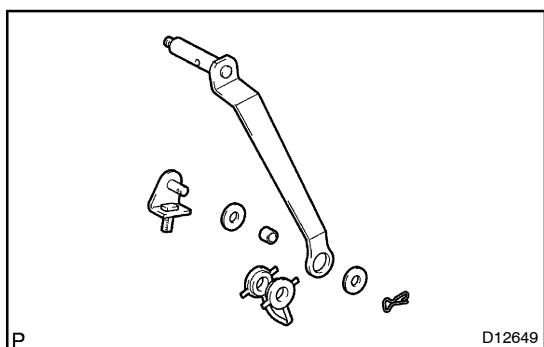

- (d) Install the shaft lower control bush, spacer, 2 plate washers and swivel.
- (e) Using pliers, install the clip.

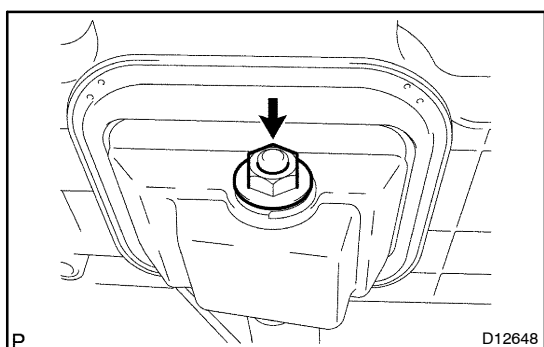

- (f) Apply MP grease to new 2 O-rings.
- (g) Install the 2 O-rings, 2 new spacers, plate washer, control lever and nut.

Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)

2. INSTALL SHIFT LEVER SUB-ASSEMBLY

- (a) Apply MP grease to the pin.
- (b) Install the shift lever sub-assembly and pin.
- (c) Install the shift lever ring.
- (d) Apply MP grease to the detent shift lever pin and spring.
- (e) Install the detent shift lever pin and spring.


3. REASSEMBLE SHIFT LEVER GUIDE HOUSING

- (a) Apply MP grease to the shift lever lock pin.
- (b) Install the shift lever lock pin, shift lock plate stopper and cushion to the shift lever guide housing.
- (c) Install a new shift lever nut to the shift lever lock pin by knocking them lightly via the 10 mm seated nut.

HINT:

Install the shift lever guide cushion of the shift lever nut in the same way.

- (d) Install the shift lever guide cushion with 3 new shift lever nuts.

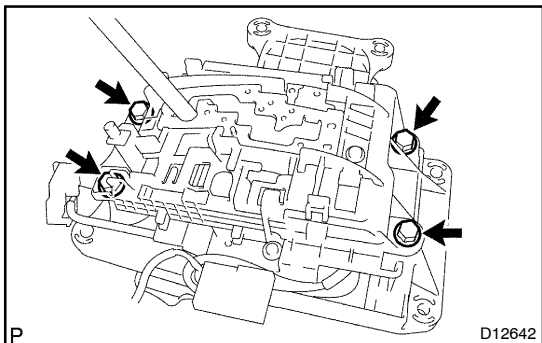**4. INSTALL SHIFT LEVER GUIDE HOUSING**

- (a) Install the shift lever guide housing assembly with the 4 bolts and nuts to the shift lever plate.

Torque: 4.9 N·m (50 kgf·cm, 43 in·lbf)

- (b) Install the 2 transmission control switches and shift lock control switch to the shift lever guide housing.
- (c) Connect the shift lock control ECU connector to the shift lever plate.

5. INSTALL SLIDE COVER AND NO. 2 SLIDE COVER**6. INSTALL POSITION INDICATOR LIGHT GUIDE**

- (a) Install the position indicator light guide.
- (b) Connect the indicator lamp wire to the position indicator light guide.

7. INSTALL POSITION INDICATOR HOUSING

- (a) Install the position indicator housing.
- (b) Install the shift lock release cover to the position indicator housing.

8. INSTALL SHIFT LEVER KNOB