


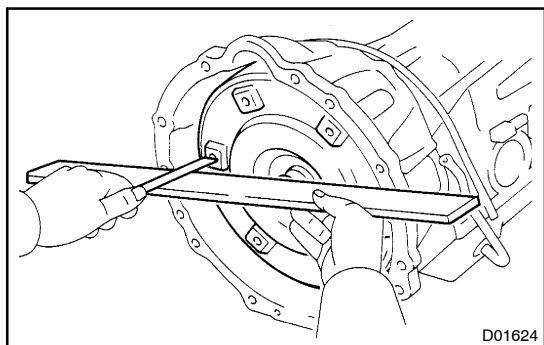

INSTALLATION

1. CHECK TORQUE CONVERTER CLUTCH INSTALLATION

Using calipers and a straight edge, measure the distance from the installed surface of the transmission housing to the installed surface of the torque converter clutch.

Correct distance: More than 17.1 mm (0.673 in.)

2. TRANSMISSION INSTALLATION

Installation is in the reverse order of removal ([See page AT-31](#)).

HINT:

- Transmission control rod and park/neutral position switch ([See page DI-4](#)).
- ATF level ([See page DI-4](#)).
- Conduct the road test of the vehicle ([See page DI-4](#)).