



POWER SOURCE LOCATION

BE2EI-02

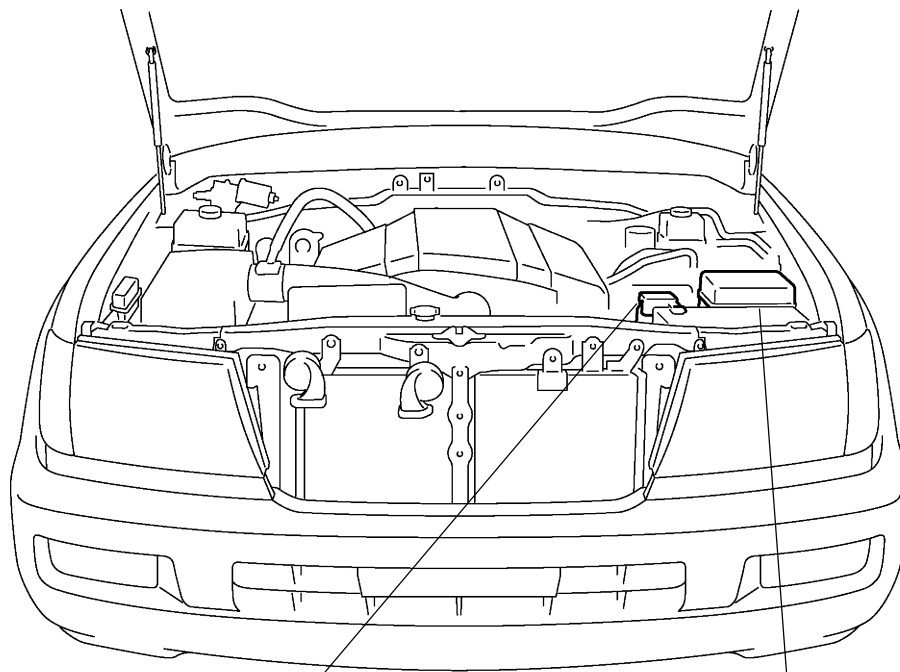

Engine Room R/B

Fusible Link Block




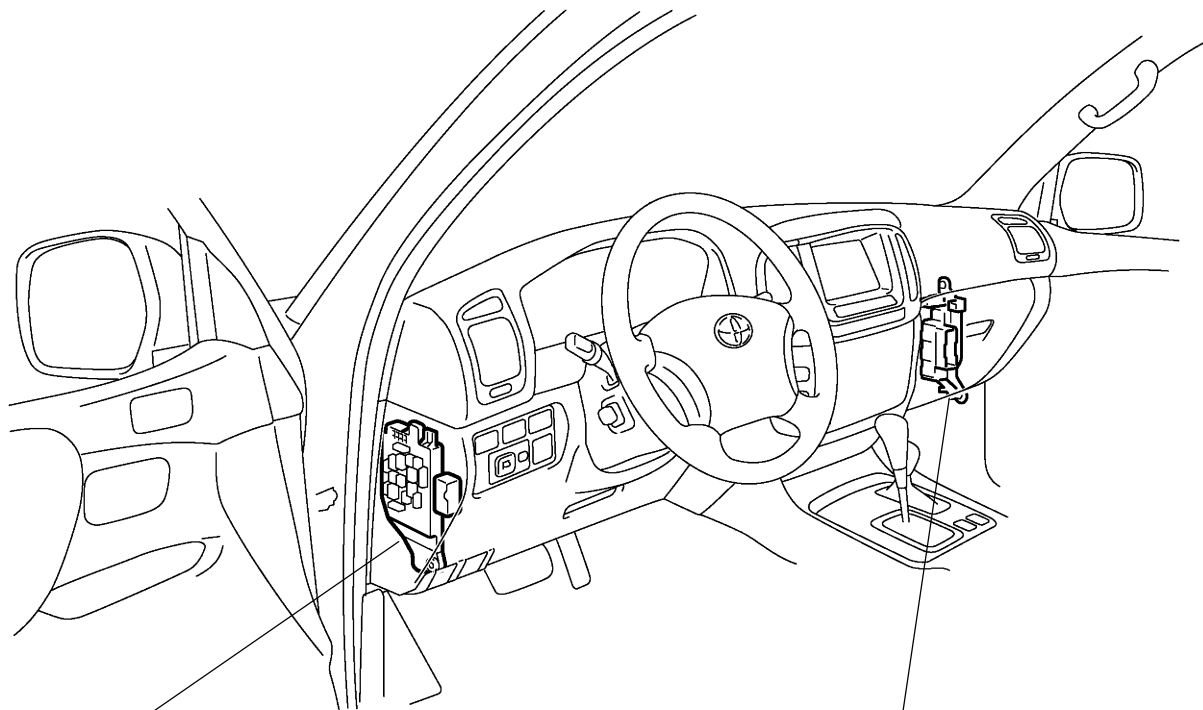


Cowl Side J/B LH

Cowl Side J/B RH

H

I24733

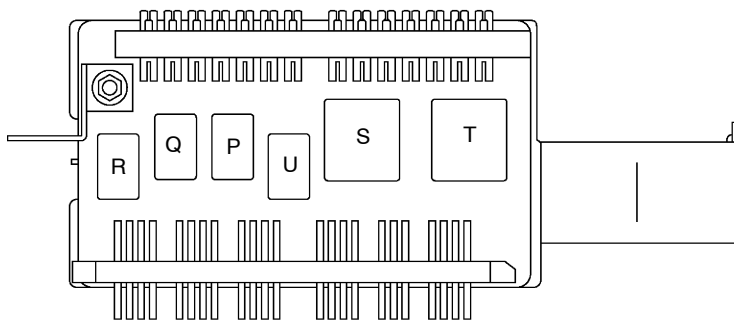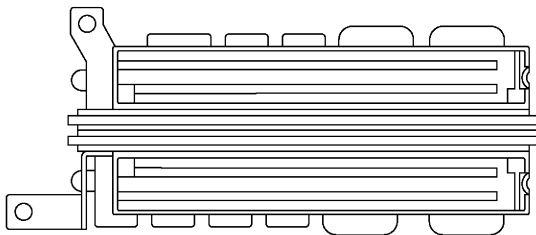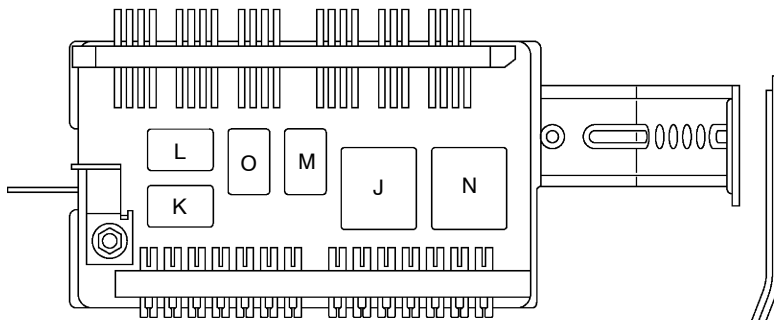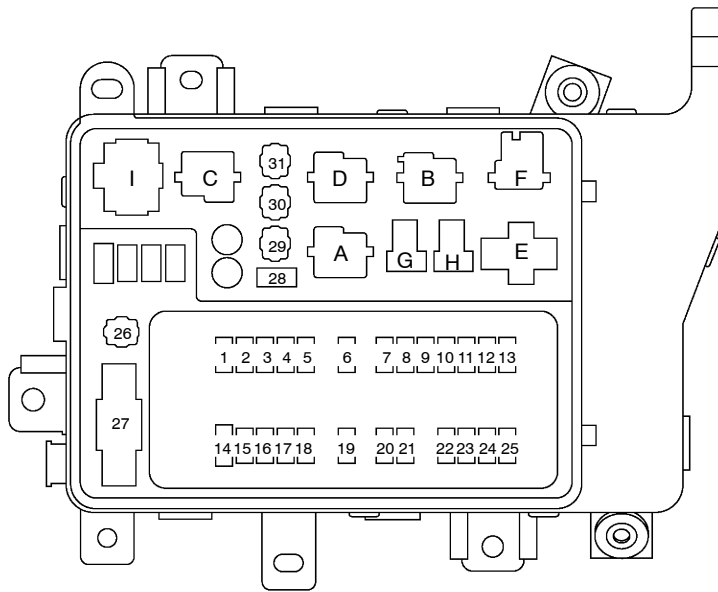
Engine Room R/B**Fuses:**

1. TOWING
2. MIR HTR
3. RR HTR
4. HAZ-TEN
5. ALT-S
6. NV-IR
7. FR FOG
8. BRK CTRL
9. HEAD CLNER
10. FR-IG
11. PANEL
12. TOWING TAIL
13. TAIL
14. -
15. BAT
16. TEL
17. AMP
18. EFI or ECD NO.1
19. AM2
20. ETCS
21. HORN
22. HEAD RH-LWR
23. HEAD LH-LWR
24. HEAD RH-UPR
25. HEAD LH-UPR
26. STARTER
27. GLOW
28. ST1
29. AHC
30. ABS NO.1
31. ABS NO.2

Relays:


- A. AHC
- B. ABS SOL
- C. ABS MTR1
- D. ABS MTR2
- E. STARTER
- F. EFI or ECD
- G. C/OPN
- H. F/PUMP
- I. HTR
- J. IG1 NO.1
- K. MIR HTR
- L. RR HTR
- M. FR FOG
- N. TAIL
- O. PANEL
- P. CDS FAN
- Q. MG CLT
- R. W/TEMP CUT
- S. HEAD
- T. HEAD HI
- U. HORN

Cowl Side J/B LH

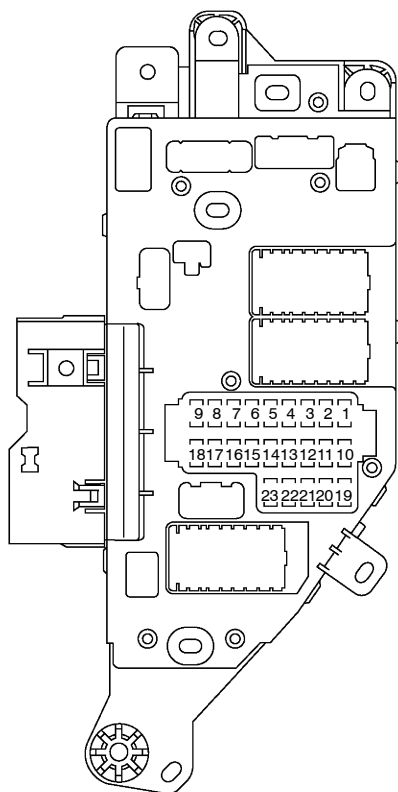

Fuses:


1. AHC-IG
2. POWER HTR
3. FUEL HTR
4. AHC-B
5. DEFOG
6. AM1
7. ACC
8. CIG
9. PWR OUTLET
10. OBD-2
11. STOP
12. A/C
13. BATT CHARGE
14. DBL LOCK
15. ECU-B1
16. ECU-IG1
17. GAUGE1
18. EFI or ECD NO.2
19. RR WIPER
20. SUN ROOF
21. DOOR
22. LH SEAT
23. IDLE UP

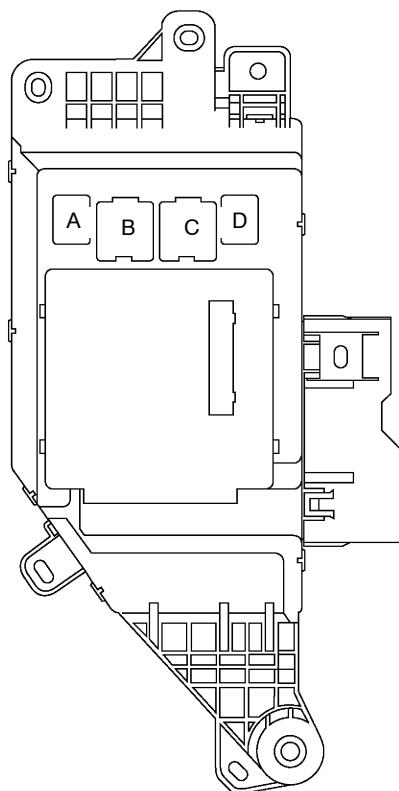

Relays:


- A. DEFOG
- B. IG1 No.2
- C. ACC
- D. DOME

Cowl Side J/B RH

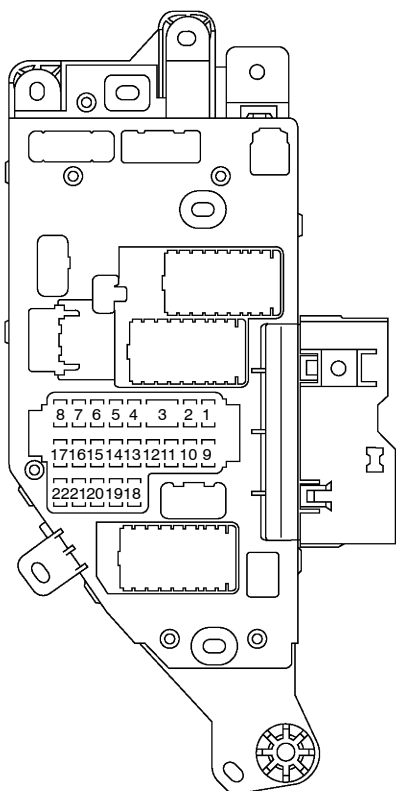

Fuses:

1. P/W (RL)
2. P/W (FL)
3. VGRS
4. DOME
5. RADIO
6. WASHER
7. DIFF
8. ECU-B2
9. P/W(FR)
10. P/W(RR)
11. SECURITY
12. IGN
13. MET
14. GAUGE 2
15. SEAT HTR
16. ECU-IG2
17. WIPER
18. RH SEAT
19. RR A/C
20. TIL&TEL

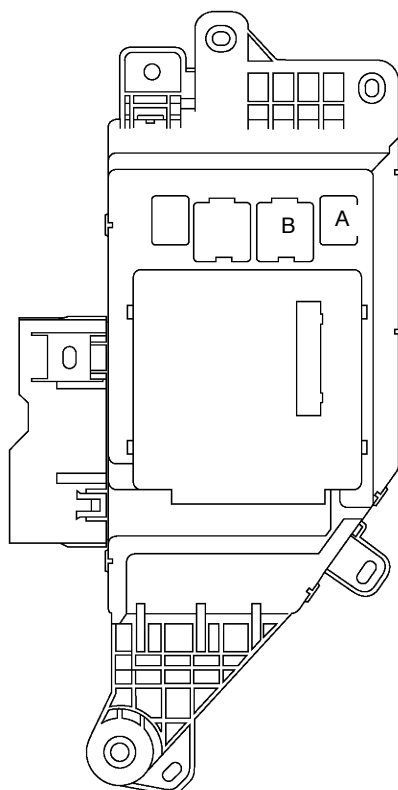

Relays:

- A. ACC CUT
- B. IG1 NO.3
- C. POWER MAIN