



CIRCUIT

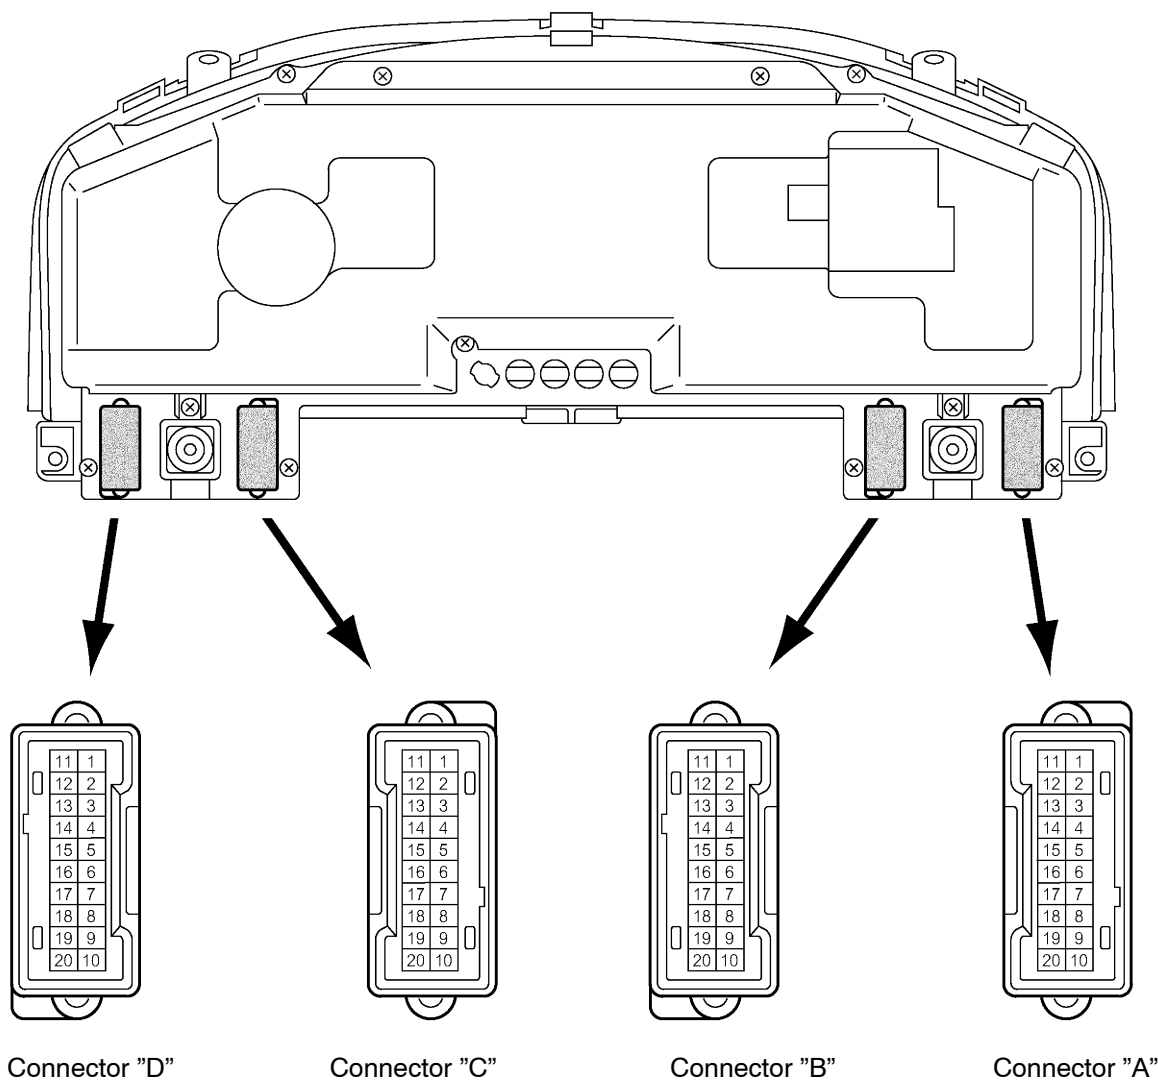

H


I25532

MULTIPLE:

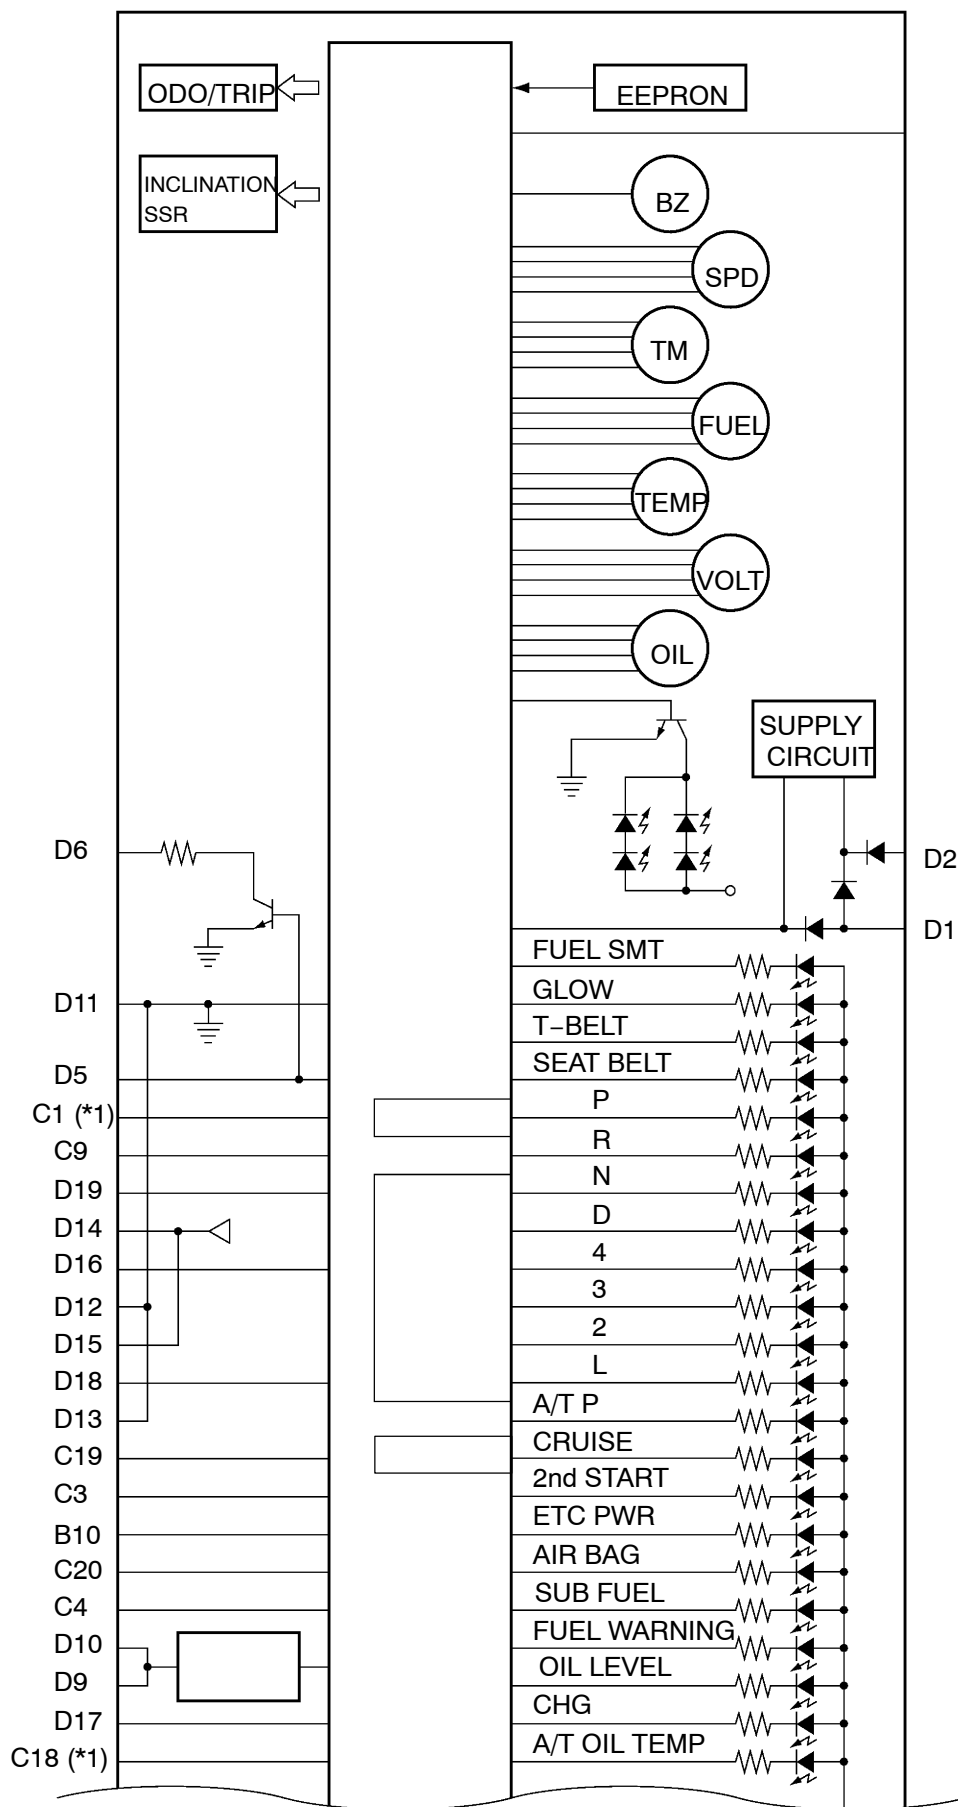

H (*1): Opti Meter

I24915

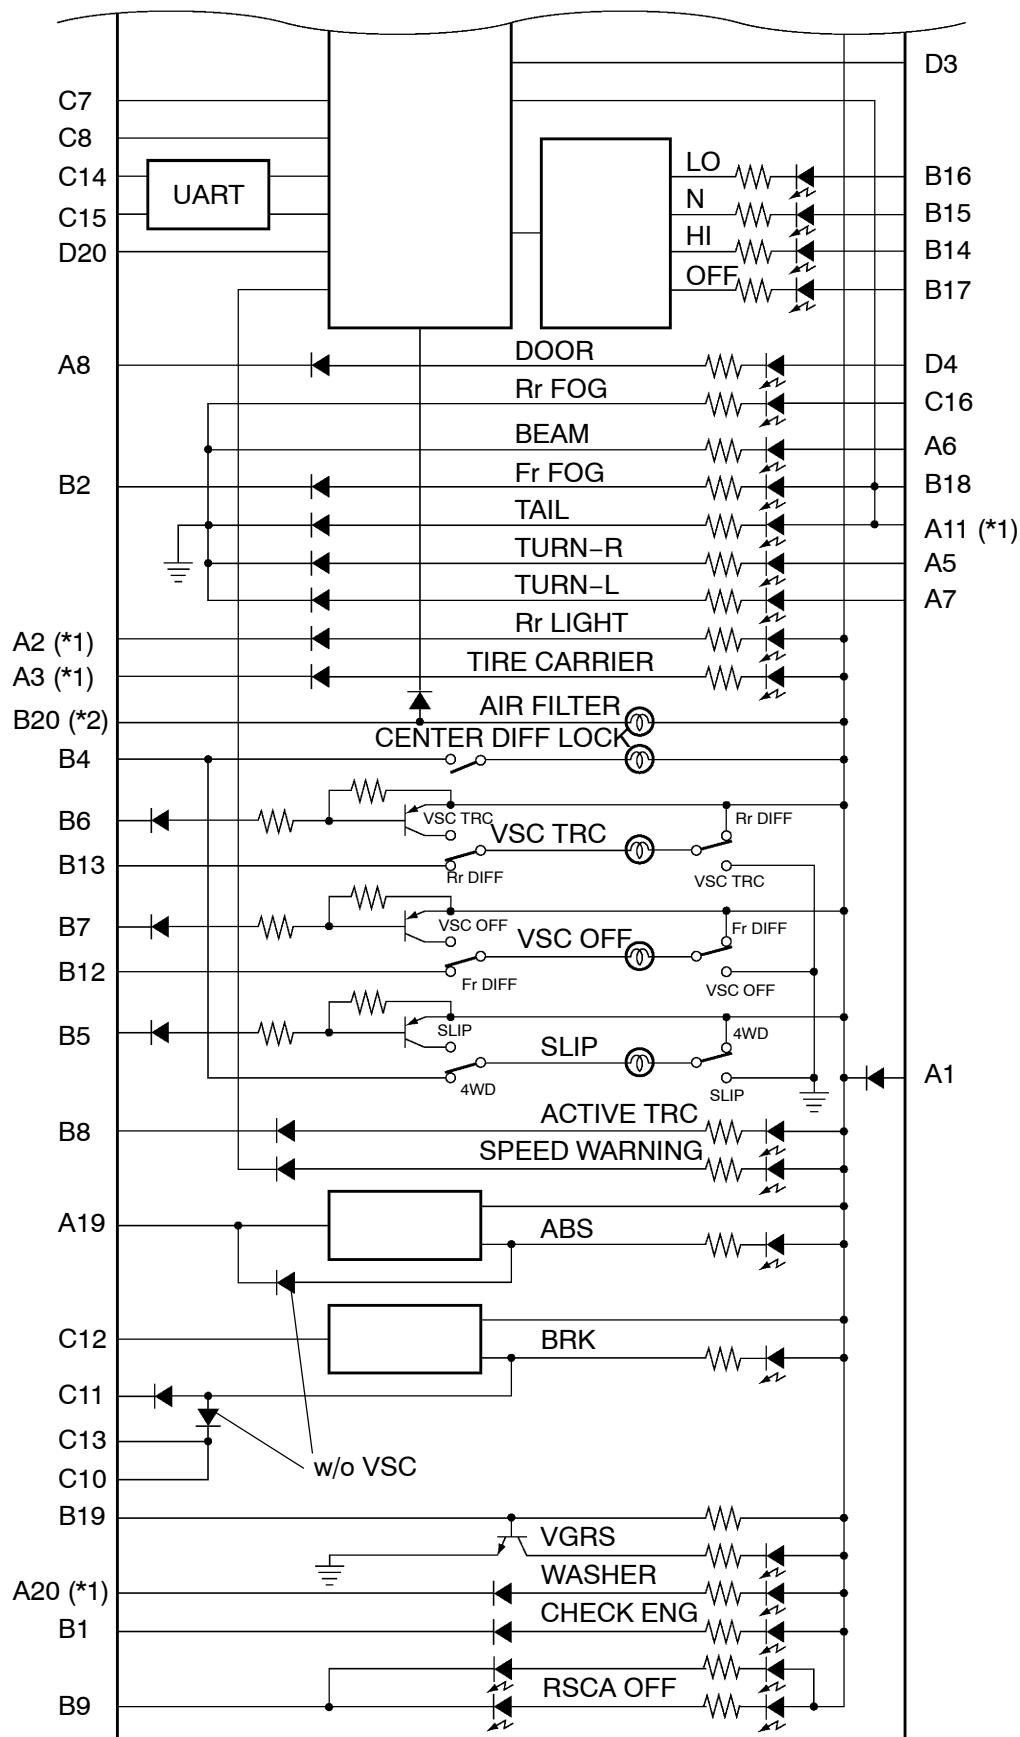


(*1): Opti Meter

(*2): Analog Meter

H


I24916

UN-MULTIPLE:

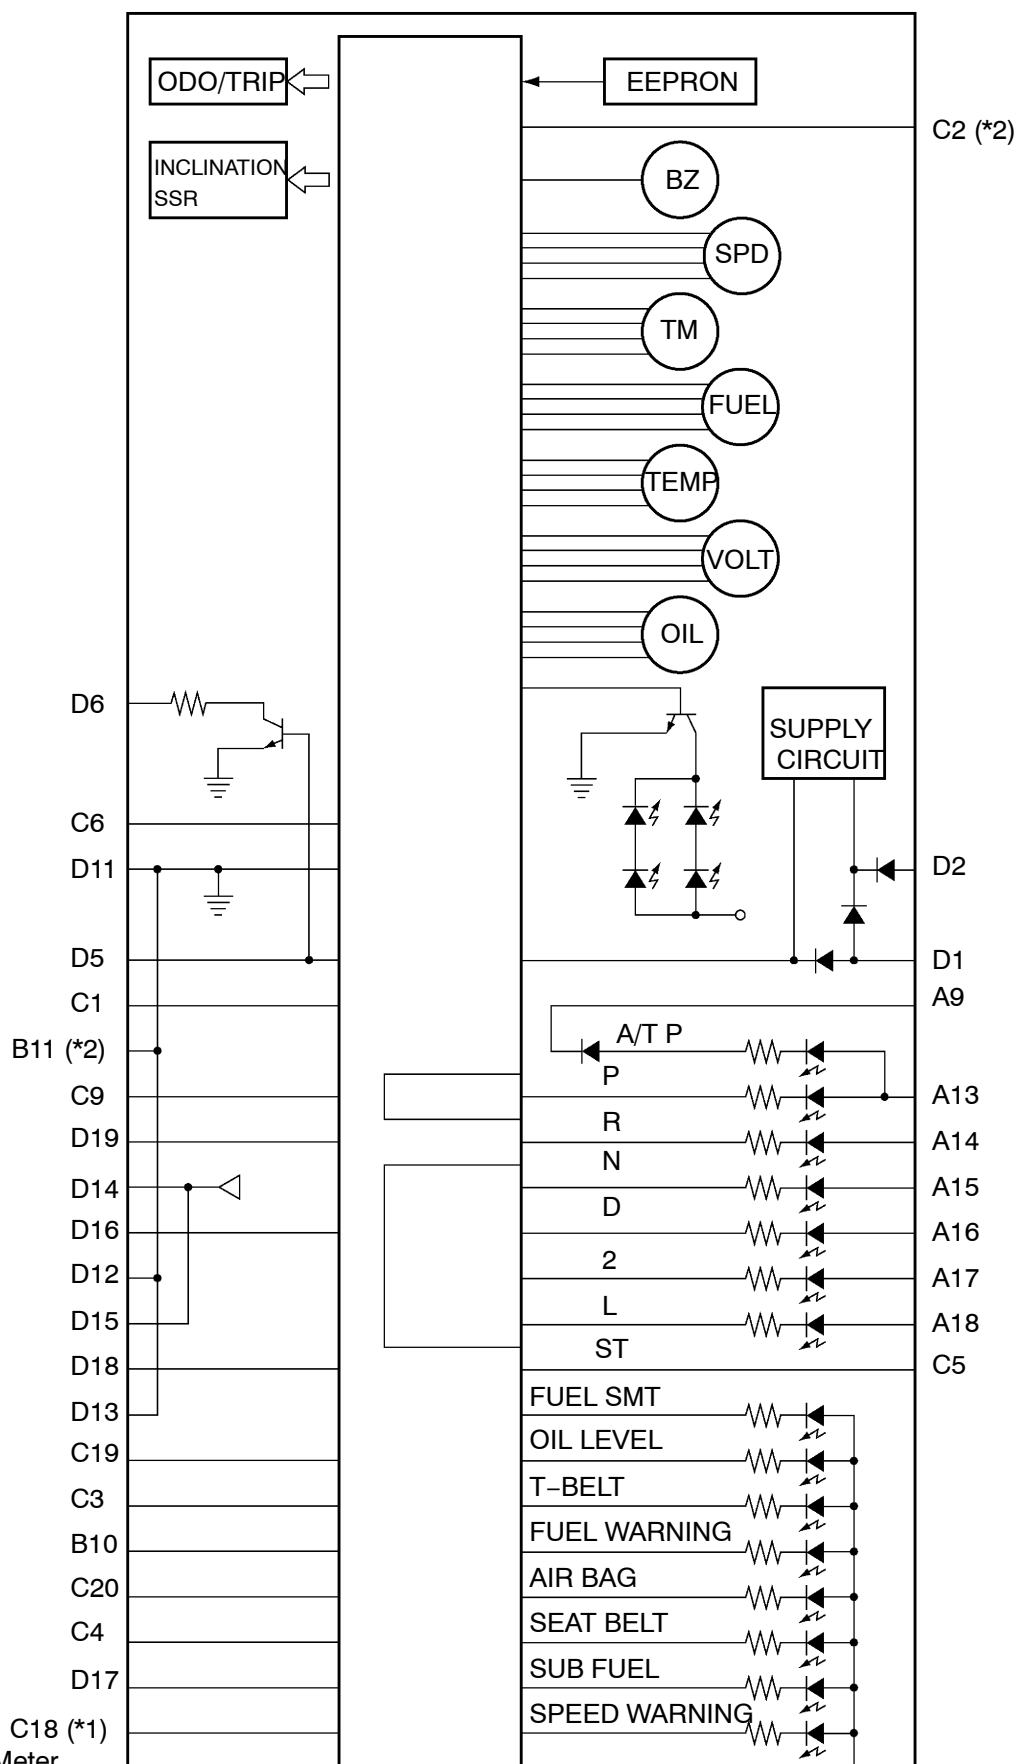

(*1): Opti Meter
 H (*2): Analog Meter

I24913

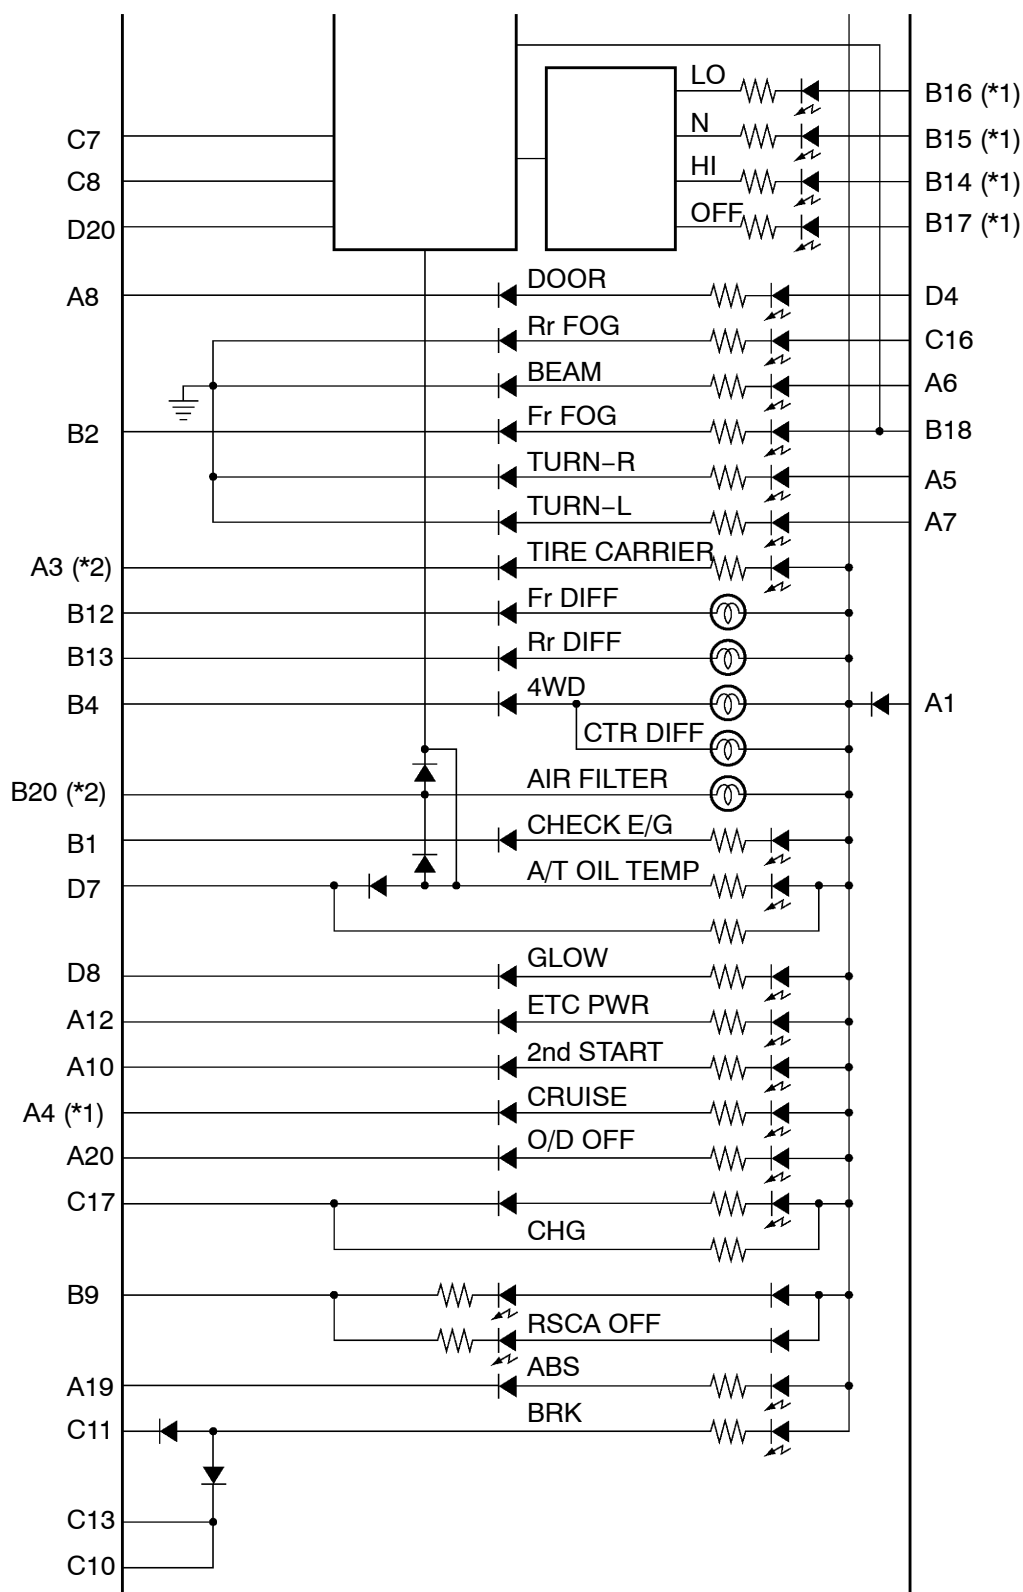

(*1): Opti Meter
 (*2): Analog Meter

UN-MULTIPLE:

No.	Wiring connector side
A	1 MET Fuse 3 Tire Carrier Switch (*2) 4 Light Control ECU (*1) 5 Flasher Relay 6 H/L R-HI Fuse 7 Flasher Relay 8 Body ECU 9 Detection Switch 10 ETC ECU 12 Select Switch 13 Park/Neutral Position Switch (P) 14 Park/Neutral Position Switch (R) 15 Park/Neutral Position Switch (N) 16 Park/Neutral Position Switch (D) 17 Park/Neutral Position Switch (2) 18 Park/Neutral Position Switch (L) 19 ABS, TRC, VSC ECU 20 O/D Switch
B	1 Engine ECU 2 FR Fog Switch 4 CTR DIFF Switch/4WD Switch 9 Airbag ECU 10 Inclination Sensor 12 FR DIFF Switch 13 RR DIFF Switch 14 AHC ECU (*1) 15 AHC ECU (*1) 16 AHC ECU (*1) 17 AHC ECU (*1) 18 PANEL Fuse 20 Air Filter Switch (*2)
C	1 Engine ECU 2 Sub Fuel Switch (*2) 3 Oil Level Sensor 4 Oil Pressure Sender Gauge 7 Airbag ECU 8 GND (*3) 9 Fuel Sediment Switch 10 Body ECU 11 Brake Oil Level Switch 13 Parking Brake Switch 16 RR Fog Switch 17 L Terminal 18 Body ECU (*1) 19 ABS ECU 20 Driver Seat Belt Buckle Switch
D	1 GAUGE1 Fuse 2 ECU-B2 Fuse 4 DOME Fuse 5 Speed Sensor 6 Speed Control Unit 7 A/T Oil Temp Switch 8 Preheating Timer or EGR ECU 11 Engine Earth 12 Main Fuel Sender Gauge 13 Sub Fuel Sender Gauge 14 Main Fuel Sender Gauge 15 Sub Fuel Sender Gauge 16 Main Fuel Sender Gauge 17 Light Control Rheostat 18 Sub Fuel Sender Gauge 19 Key Unlock Warning Switch 20 Door Courtesy Switch

(*1): Opti Meter
 (*2): Analog Meter
 (*3): w/o ABS

MULTIPLE:

No.		Wiring connector side
A	1	MET Fuse
	2	Sub ECU (*1)
	3	Tire Carrier Switch (*2)
	5	Flasher Relay
	6	H/L R-HI Fuse
	7	Flasher Relay
	8	Body ECU
	11	H/L R-lo Fuse
	19	ABS, TRC, VSC ECU
	20	Washer Level Switch
B	1	Engine ECU
	2	FR Fog Switch
	4	CTR DIFF Switch
	5	ABS, TRC, VSC ECU
	6	ABS, TRC, VSC ECU
	7	ABS, TRC, VSC ECU
	8	ABS, TRC, VSC ECU
	9	Airbag ECU
	12	FR DIFF Switch
	13	RR DIFF Switch
	14	AHC ECU (*1)
	15	AHC ECU (*1)
	16	AHC ECU (*1)
	17	AHC ECU (*1)
C	1	Engine ECU
	2	Sub Fuel Switch (*2)
	3	Oil Level Sensor
	4	Oil Pressure Sender Gauge
	7	Airbag ECU
	8	GND (*3)
	9	Fuel Sediment Switch
	10	Body ECU
	11	Brake Oil Level Switch
	13	Parking Brake Switch, ABS, TRC, VSC ECU
D	16	RR Fog Switch
	18	Body ECU (*1)
	19	ABS ECU
	20	Driver Seat Belt Buckle Switch
	1	GAUGE1 Fuse
	2	ECU-B2 Fuse
	3	ACC Fuse
	4	DOVE Fuse
	5	Speed Sensor
	9	Gateway ECU
	10	Engine ECU
	11	Engine Earth
	12	Main Fuel Sender Gauge
	13	Sub Fuel Sender Gauge
	14	Main Fuel Sender Gauge
	15	Sub Fuel Sender Gauge
	16	Main Fuel Sender Gauge
	17	Light Control Rheostat
	18	Sub Fuel Sender Gauge
	19	Key Unlock Warning Switch
	20	Door Courtesy Switch

(*1): Opti Meter
 (*2): Analog Meter
 (*3): w/o ABS