


INSPECTION

1. w/ Double locking system: INSPECT FRONT DOOR UNLOCK DETECTION SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF (Door Lock set to LOCK)	–	No continuity
ON (Door Lock set to UNLOCK)	1 – 5	Continuity

If continuity is not as specified, replace the door lock assembly.

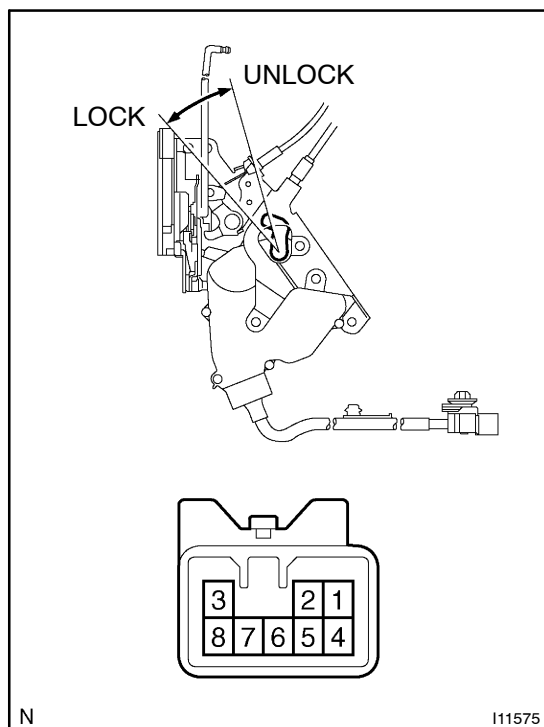



2. w/ Double locking system: INSPECT REAR DOOR UNLOCK DETECTION SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF (Door Lock set to LOCK)	–	No continuity
ON (Door Lock set to UNLOCK)	1 – 5	Continuity

If continuity is not as specified, replace the door lock assembly.

3. INSPECT DOOR UNLOCK DETECTION SWITCH CIR- CUIT (See page DI-1081)

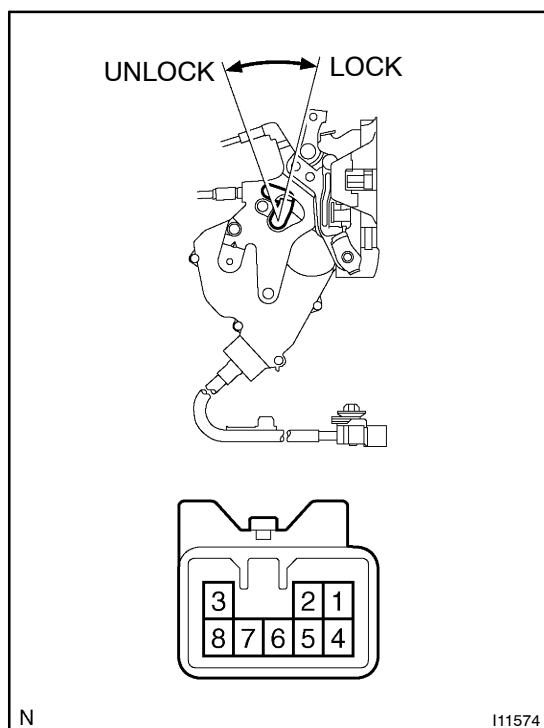

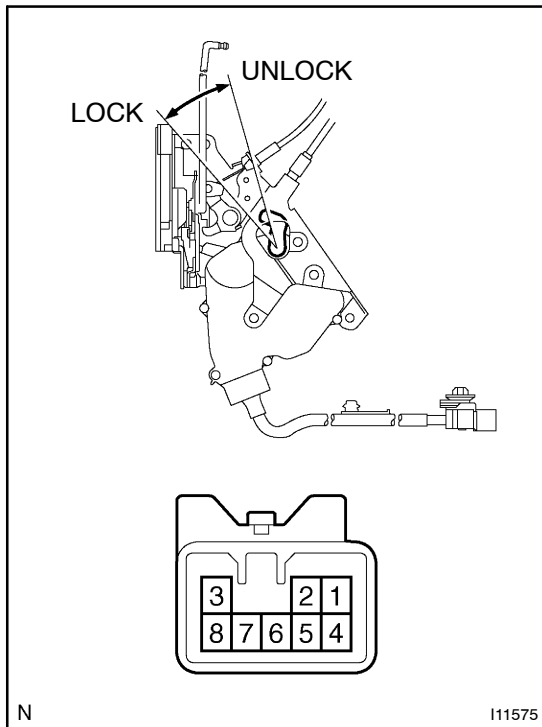


4. w/ Double locking system:

INSPECT FRONT DOOR LOCK MOTOR OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 3, and check that the door lock link moves to LOCK position.
- (b) Reverse the polarity and check that the door lock link moves to UNLOCK position.

If operation is not as specified, replace the door lock assembly.

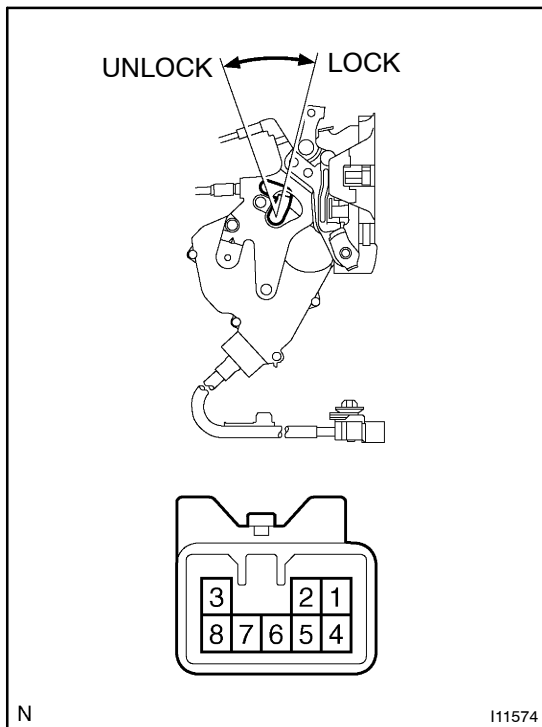

5. w/ Double locking system:

INSPECT REAR DOOR LOCK MOTOR OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 3, and check that the door lock link moves to LOCK position.
- (b) Reverse the polarity and check that the door lock link moves to UNLOCK position.

If operation is not as specified, replace the door lock assembly.