


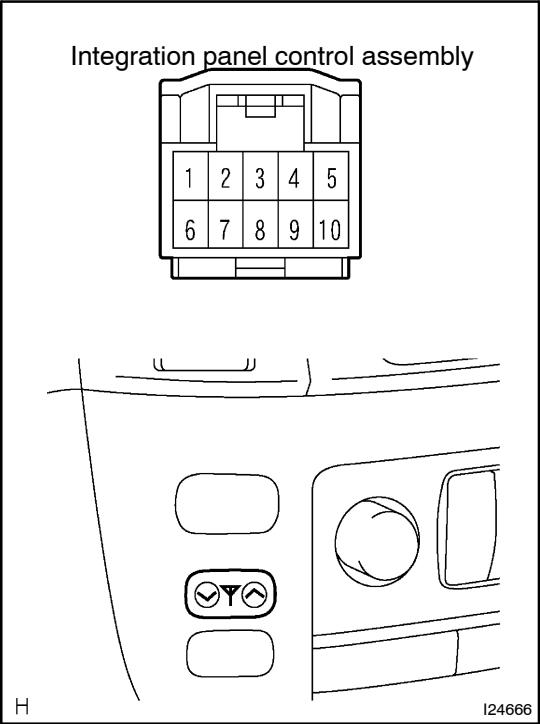

ANTENNA INSPECTION

BE2F3-01

INSPECT ANTENNA SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
UP button FREE	4 – 5	No continuity
UP button Pushed in	4 – 5	Continuity
DOWN button FREE	9 – 5	No continuity
DOWN button Pushed in	9 – 5	Continuity

If continuity is not as specified, replace the switch.