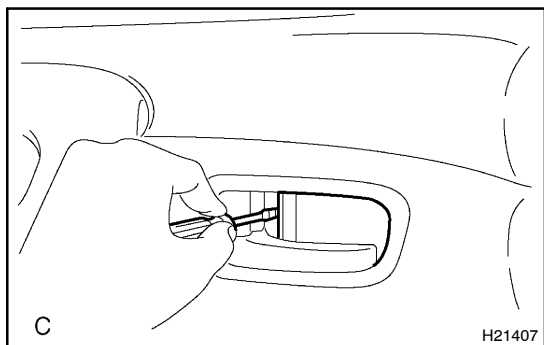




H21407

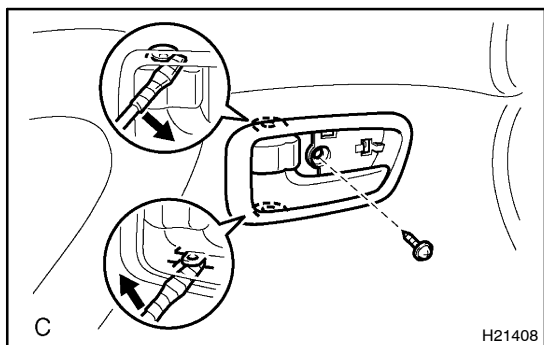
DISASSEMBLY

1. REMOVE DOOR INSIDE HANDLE BEZEL No. 2

Using a screwdriver, remove the door inside handle bezel No. 2 as shown in the illustration.

HINT:

Tape up the screwdriver tip before use.



H21408

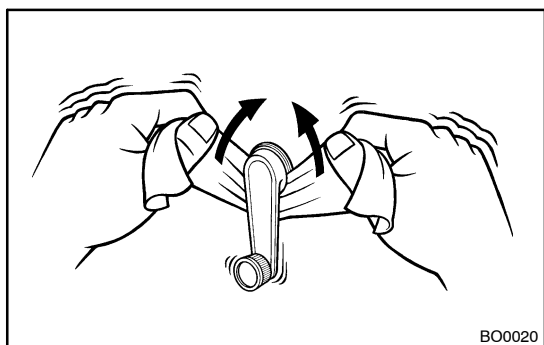
2. REMOVE DOOR INSIDE HANDLE BEZEL No. 1

(a) Remove the screw.

(b) Using a screwdriver, remove the door inside handle bezel No. 1 as shown in the illustration.

HINT:

Tape up the screwdriver tip before use.

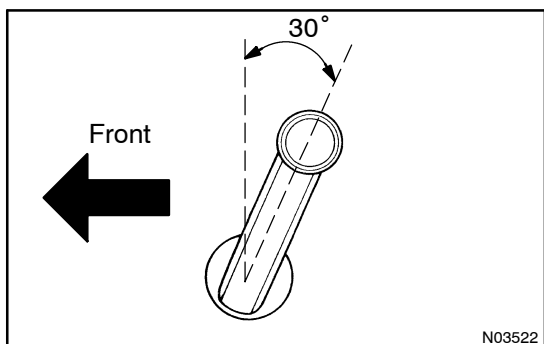


BO0020

3. w/o Power Window:

REMOVE REGULATOR HANDLE

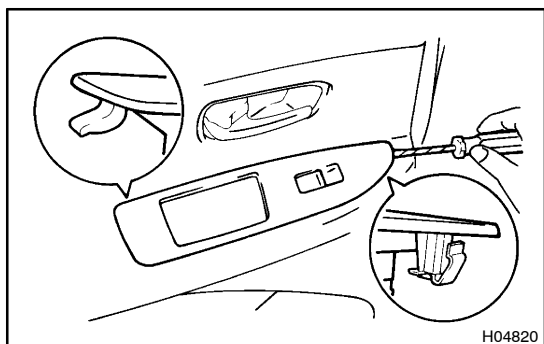
Pull off the snap ring with a shop rag and remove the regulator handle and the plate.



N03522

HINT:

At the time of assembly, with door window fully closed, install the plate and regulator handle with the snap ring.



H04820

4. w/ Power Window:

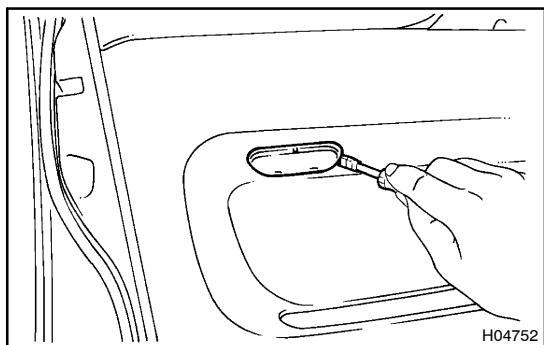
REMOVE POWER WINDOW SWITCH

(a) Using a screwdriver, remove the power window switch as shown in the illustration.

HINT:

Tape up the screwdriver tip before use.

(b) Disconnect the connector.

**5. w/ Door Courtesy Light:****REMOVE DOOR COURTESY LIGHT**

Using a screwdriver, remove the courtesy light, then disconnect the connector.

HINT:

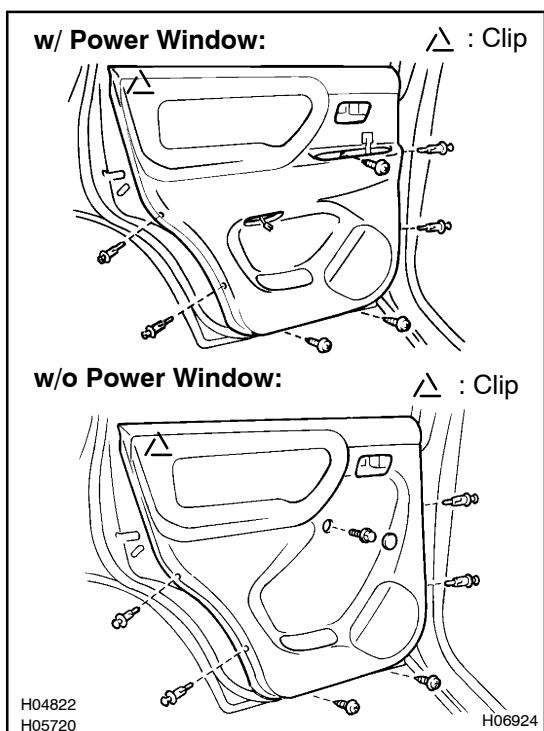
Tape up the screwdriver tip before use.

6. w/ Reflector:**REMOVE REFLECTOR**

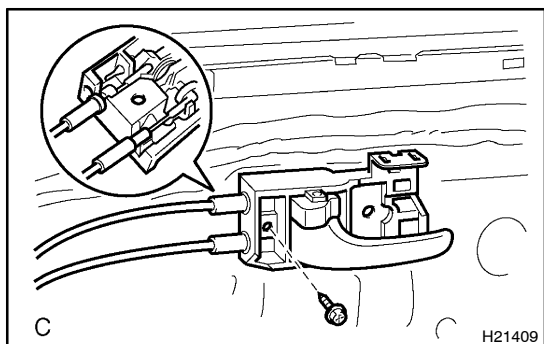
Using a screwdriver, remove the reflector.

HINT:

Tape up the screwdriver tip before use.

**7. REMOVE DOOR TRIM**

- (a) w/ Power Window:
Remove the 3 screws.
- (b) w/o Power Window:
Remove the cap and 3 screws.
- (c) Remove the 4 clips.
- (d) Pull the trim upward to remove it.

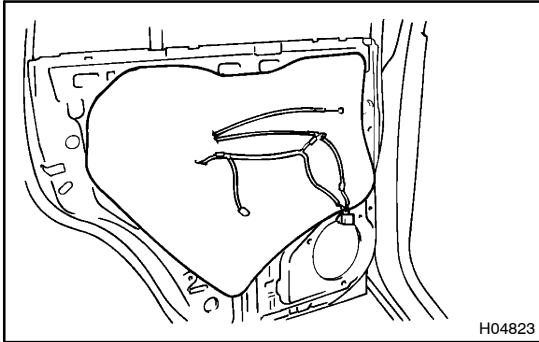
**8. REMOVE INSIDE HANDLE**

- (a) Remove the screw and the inside handle.
- (b) Disconnect the 2 control cables from the inside handle as shown in the illustration.

9. w/ Speaker:**REMOVE SPEAKER**

Remove the 3 screws and the speaker.

10. w/o Speaker:**REMOVE SPEAKER HOLE COVER**

**11. REMOVE SERVICE HOLE COVER**

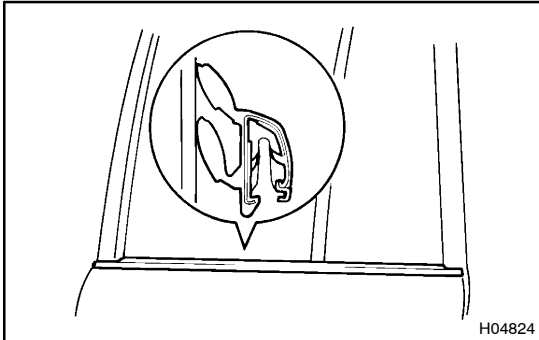
- (a) Remove the clamps and the wire harness.
- (b) Remove the service hole cover.

NOTICE:

Do not tear the cover.

HINT:

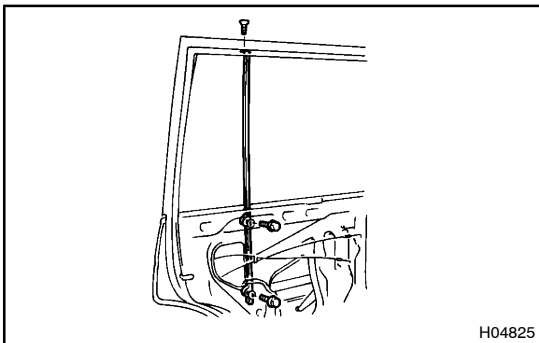
At the time of assembly, pull out the 2 control cables and the wire harness through the service hole cover.

**12. REMOVE DOOR BELT MOULDING**

Using a scraper, remove the door belt moulding.

HINT:

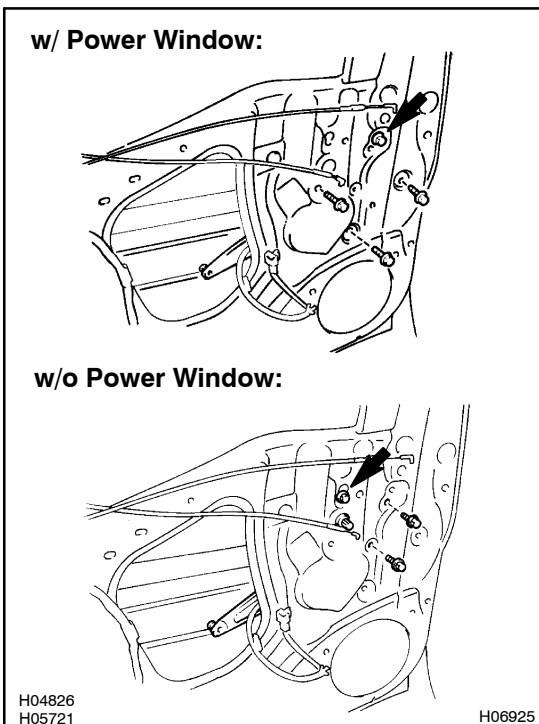
Tape up the scraper tip before use.

13. REMOVE DOOR GLASS RUN**14. REMOVE DIVISION BAR**

Remove the 2 bolts, the screw and the division bar.

15. REMOVE DOOR GLASS

Disconnect the glass from the regulator arm and remove the door glass by pulling it upward.

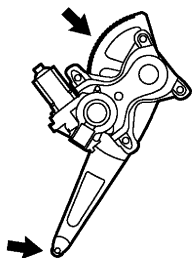
16. REMOVE QUARTER WINDOW GLASS WITH WEATHERSTRIP**17. REMOVE WINDOW REGULATOR**

- (a) w/ Power Window:
Disconnect the connector, then remove the 3 bolts.
Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)
- (b) w/o Power Window:
Remove the 2 bolts.
Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)
- (c) Loosen the bolt and the window regulator.
Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)

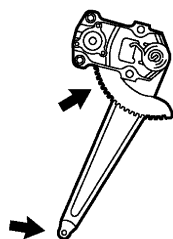
HINT:

- Remove the regulator through the service hole.

w/ Power Window:



w/o Power Window:

H21415
H21416

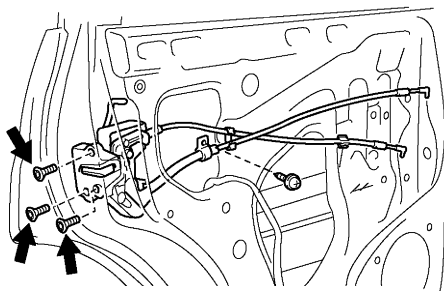
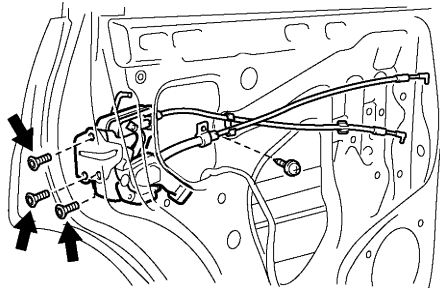
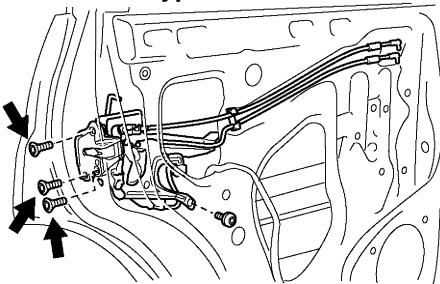
H21591

- At the time of assembly, apply MP grease to the window regulator.

NOTICE:

At the time of assembly, do not apply grease to the spring of the window regulator.

w/o Power Door Lock:

w/ Power Door Lock
Except Double Lock Type:w/ Power Door Lock,
Double Lock Type:

C

H21052

18. REMOVE DOOR LOCK

- Except Double Lock Type (w/ and w/o Power Door Lock): Remove the screw from the link protector.
- w/ Power Door Lock: Disconnect the connector.
- Disconnect the link from the outside handle.
- Double Lock Type: Remove the torx screw.
- Using a torx wrench, remove the 3 screws and the door lock through the service hole.

Torx wrench: T30 (Part No. 09042-00010 or locally manufactured tool)

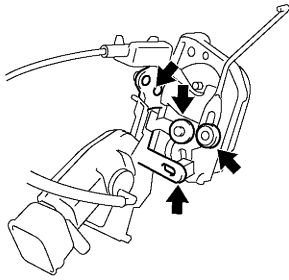
Torque: 5.0 N·m (51 kgf·cm, 44 in.-lbf)

HINT:

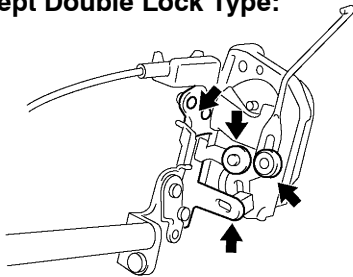
At the time of assembly:

- Apply adhesive to 3 screws.
Part No. 08833-00070, THREE BOND 1324 or equivalent.

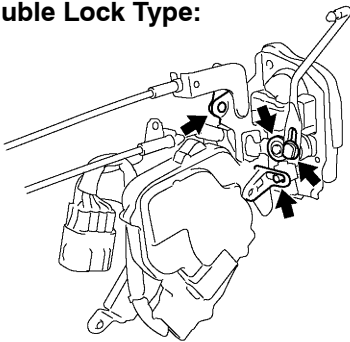
w/o Power Door Lock:



**w/ Power Door Lock,
Except Double Lock Type:**



**w/ Power Door Lock,
Double Lock Type:**



C

H21053

- Remove the protector, and apply MP grease to the sliding and rotating parts of the door lock.

19. REMOVE OUTSIDE HANDLE

Remove the 2 bolts and the outside handle.