


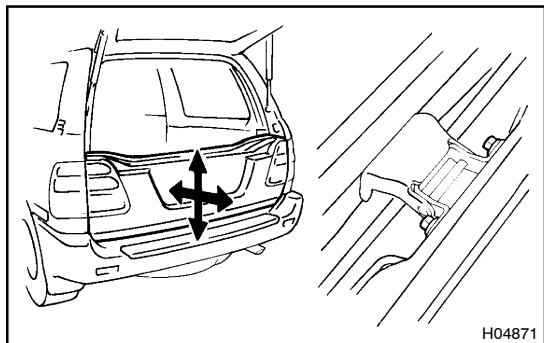


ADJUSTMENT

1. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust.


Torque: 28 N·m (286 kgf·cm, 21 ft·lbf)

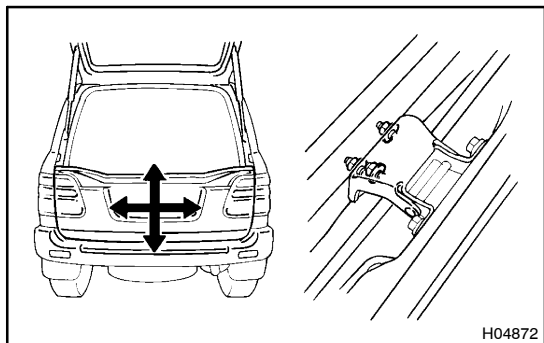

2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Loosen the body side hinge bolts and nut to adjust.

Torque: 31 N·m (316 kgf·cm, 23 ft·lbf)

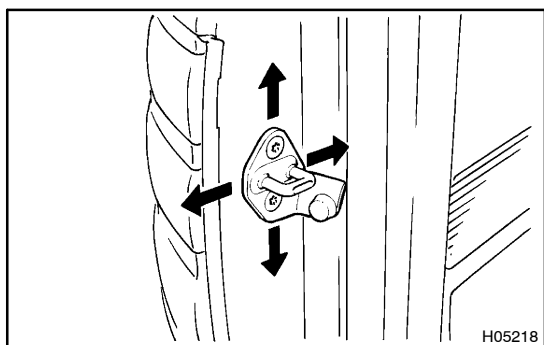

3. ADJUST DOOR LOCK STRIKER

- Check that the door fit and door linkages are adjusted correctly.
- Using a torx wrench, loosen the door lock striker mounting screws.

Torx wrench: T40 (Part No. 09042-00020 or locally manufactured tool)

Torque: 11.5 N·m (117 kgf·cm, 8 ft·lbf)

- Using a plastic hammer, tap the striker to adjust it.