


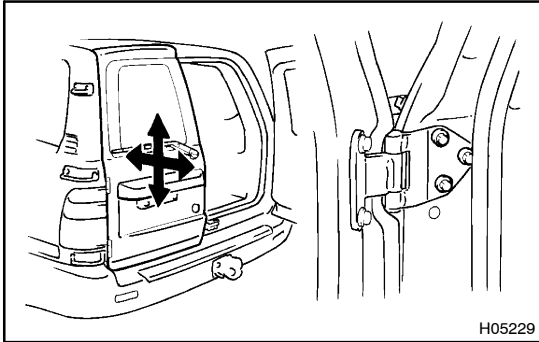


ADJUSTMENT

1. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS

Loosen the body side hinge bolts to adjust.


Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

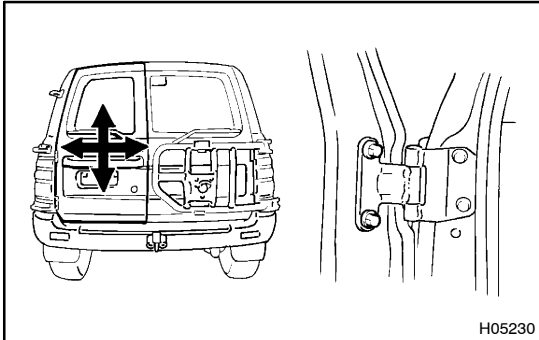

2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust.

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

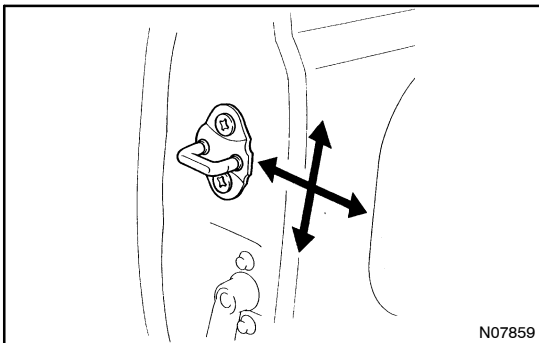

3. ADJUST DOOR LOCK STRIKER

- Check that the door fit and door lock linkages are adjusted correctly.
- Check that the right back door is adjusted correctly.
- Using a torx wrench, loosen the door lock striker mounting screws.

Torx wrench: T40 (Part No.09042-00020 or locally manufactured tool)

Torque: 11 N·m (115 kgf·cm, 8 ft·lbf)

- Using a plastic hammer, tap the striker to adjust.