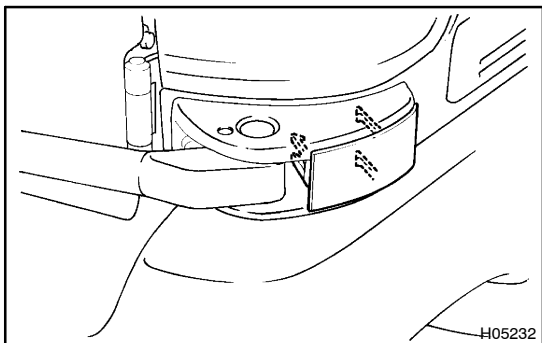


DISASSEMBLY

1. w/ Spare Wheel Carrier:
REMOVE SPARE WHEEL

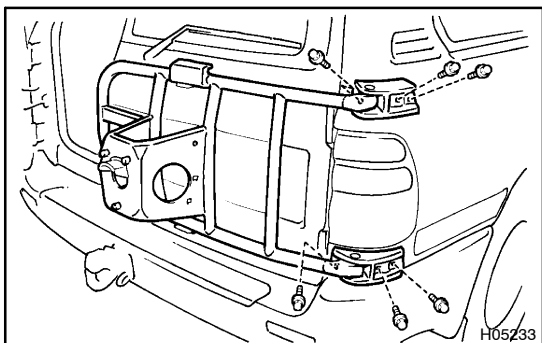


2. w/ Spare Wheel Carrier:
REMOVE SPARE WHEEL CARRIER

- (a) Using a screwdriver, remove the No.1 and No.2 hinge cover.

HINT:

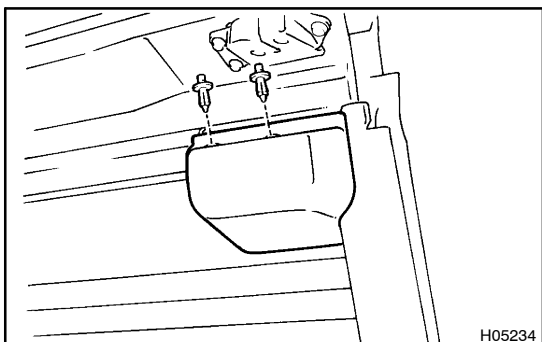
Tape up the screwdriver tip before use.



- (b) Remove the 6 bolts and spare wheel carrier.

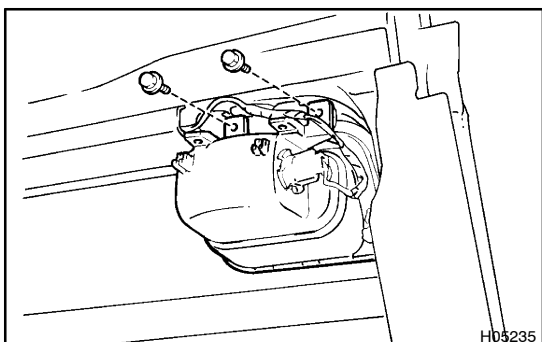
3. w/ Spare Wheel Carrier:
REMOVE No.1 SPARE WHEEL GUIDE STAY

4. w/ Spare Wheel Carrier:
REMOVE SPARE WHEEL AUXILIARY STOPPERS



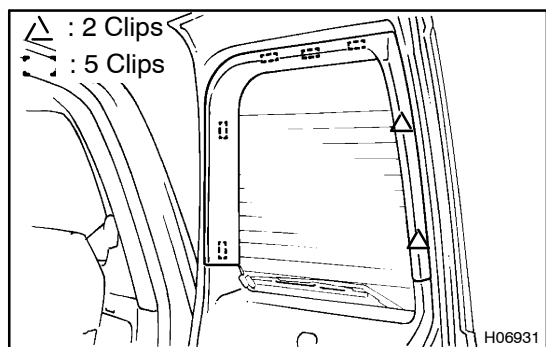
5. w/ High-Mount Stop Light:
REMOVE HIGH-MOUNT STOP LIGHT

- (a) Remove the 2 clips and high-mount stop light cover.



- (b) Disconnect the connector, then remove the 2 bolts and high-mount stop light.

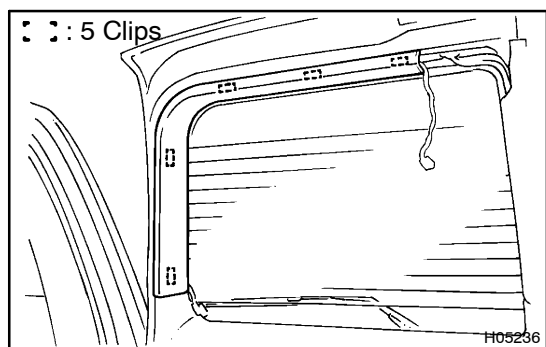
- (c) Remove the 2 bolts and high-mount stop light bracket.

**6. REMOVE BACK DOOR GARNISH**

- (a) Using a screwdriver, remove the back door garnish.

HINT:

Tape up the screwdriver tip before use.

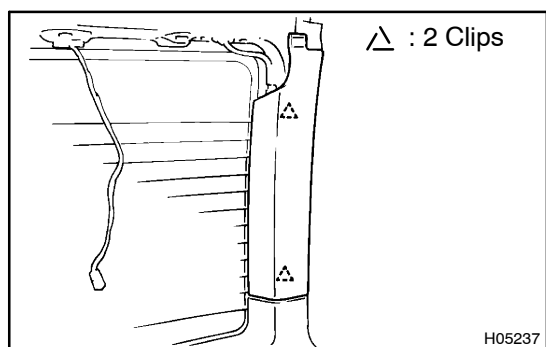


- (b) w/ High-Mount Stop Light:

Using a screwdriver, remove the back door garnish.

HINT:

Tape up the screwdriver tip before use.

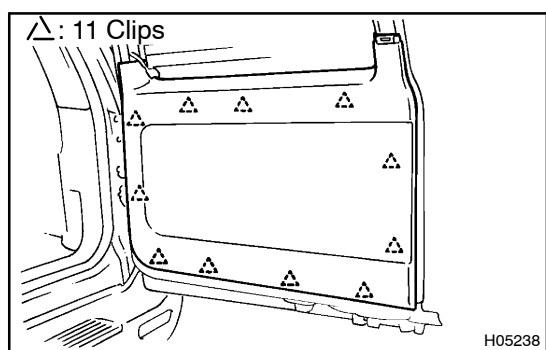


- (c) w/ High-Mount Stop Light:

Using a screwdriver, remove the center back door garnish.

HINT:

Tape up the screwdriver tip before use.

**7. REMOVE BACK DOOR TRIM**

- (a) Insert a screwdriver between the door and door trim to pry out.

HINT:

Tape up the screwdriver tip before use.

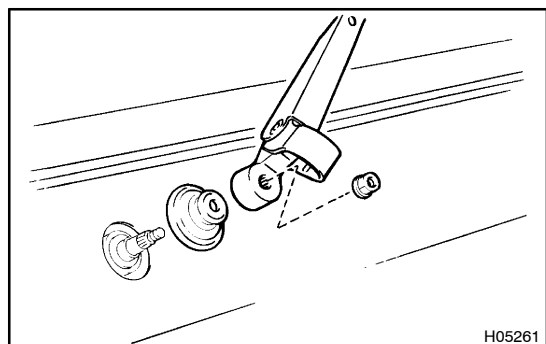
- (b) Remove the back door trim.

8. REMOVE SERVICE HOLE COVER

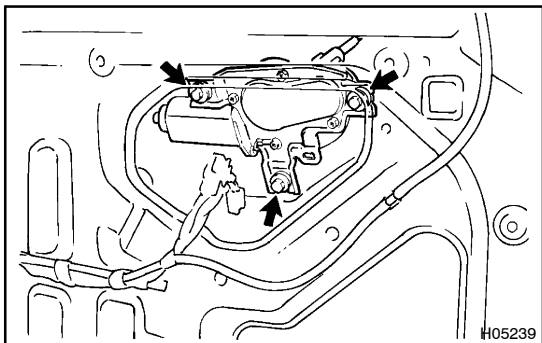
Remove the service hole cover.

HINT:

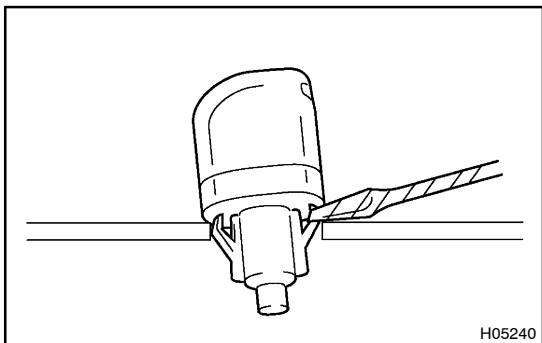
Tape up the screwdriver tip before use.

**9. REMOVE REAR WIPER ARM**

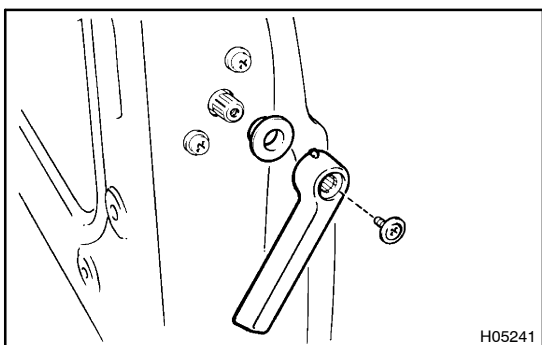
- (a) Open the cover.
(b) Remove the nut, wiper arm and grommet.

**10. REMOVE REAR WIPER MOTOR**

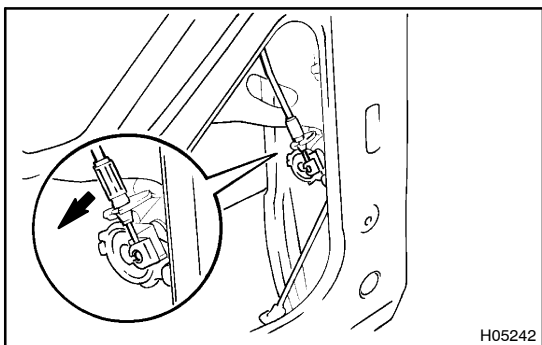
- (a) Disconnect the connector.
- (b) Unfasten the 3 bolts and remove the rear wiper motor.

**11. REMOVE WASHER NOZZLE**

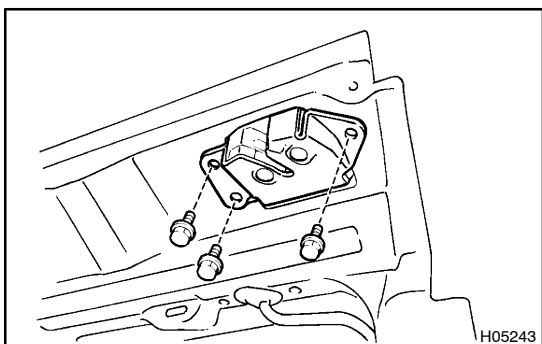
- (a) Using a screwdriver, remove the washer nozzle.
- (b) Disconnect the washer nozzle.

12. REMOVE BACK DOOR CENTER WEATHERSTRIP**13. REMOVE BACK DOOR INSIDE HANDLE**

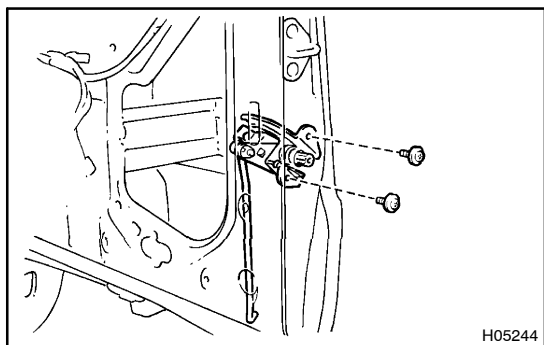
- (a) Remove the screw and inside handle.
- (b) Remove the spacer.

**14. REMOVE BACK DOOR UPPER LOCK**

- (a) Disconnect the control cable from the back door lock control.



- (b) Remove the 3 bolts and back door upper lock.
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

**15. REMOVE DOOR LOCK CONTROL**

- (a) Disconnect the control link.
- (b) Remove the 2 screws and door lock control.

Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)

16. REMOVE BACK DOOR LOWER LOCK

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

17. REMOVE No.2 BACK DOOR STOPPER