


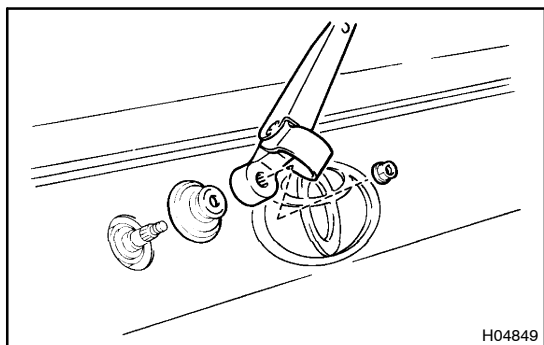

REMOVAL

1. REMOVE REAR WIPER ARM

- (a) Open the cover.
- (b) Remove the nut and the rear wiper arm.
- (c) Remove the grommet.

2. REMOVE ASSIST GRIP


- (a) Using a screwdriver, remove the 2 assist grip plugs.

HINT:

Tape up the screwdriver tip before use.

- (b) Remove the 2 screws and the assist grip.

3. REMOVE INSIDE HANDLE BEZEL

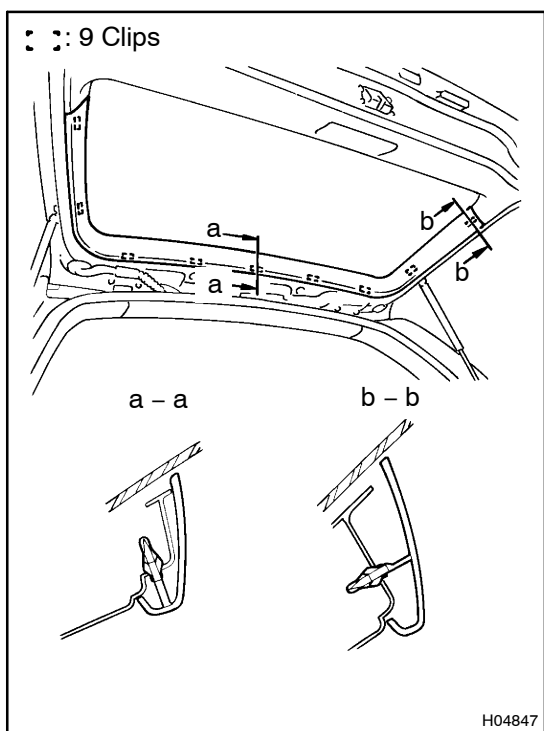


4. REMOVE CENTER BACK DOOR GARNISH

Using a screwdriver, remove the center back door garnish.

HINT:

Tape up the screwdriver tip before use.

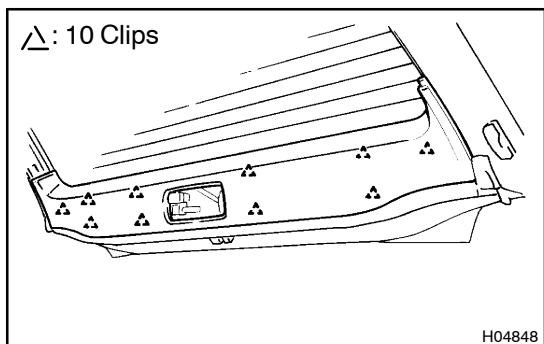


5. REMOVE BACK DOOR GARNISH

Using a screwdriver, remove the back door garnish.

HINT:

Tape up the screwdriver tip before use.

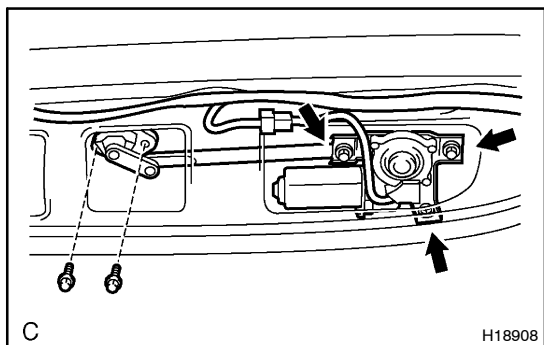

6. REMOVE REAR WIPER MOTOR AND LINK ASSEMBLY

- (a) Disconnect the connector
- (b) Remove the 2 bolts.
- (c) Unfasten the 3 bolts and remove the rear wiper motor with the link assembly.