

REMOVAL

1. REMOVE FRONT DOOR OPENING TRIMS


2. REMOVE FRONT ASSIST GRIP

- Using a screwdriver, remove the 2 assist grip plugs, then remove the 2 screws and the front assist grip.

HINT:

Tape up the screwdriver tip before use.

- Use the same manner described above to the other side.

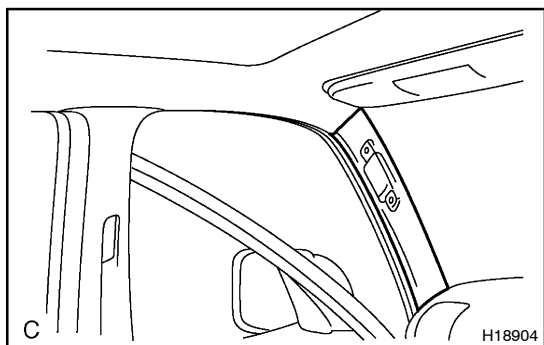

3. REMOVE FRONT PILLAR GARNISH

- Using a screwdriver, remove the front pillar garnish.

HINT:

Tape up the screwdriver tip before use.

- Use the same manner described above to the other side.

4. REMOVE SUN VISOR

- Using a screwdriver, remove the caps.

HINT:

Tape up the screwdriver tip before use.

- Remove the screws, then disconnect the connectors.


- Remove the sun visors.

5. REMOVE DOUBLE VISOR

Remove the screws and the double visors.

6. REMOVE HOLDER

Remove the screws and the holders.

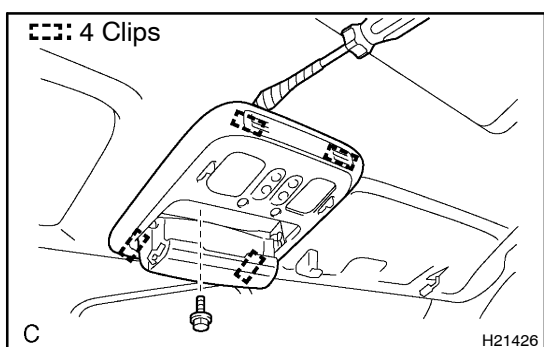


7. w/ Sliding roof:

REMOVE OVERHEAD CONSOLE BOX

- Remove the bolt.
- Using a screwdriver, remove the overhead console box, then disconnect the connector.

HINT:

Tape up the screwdriver tip before use.

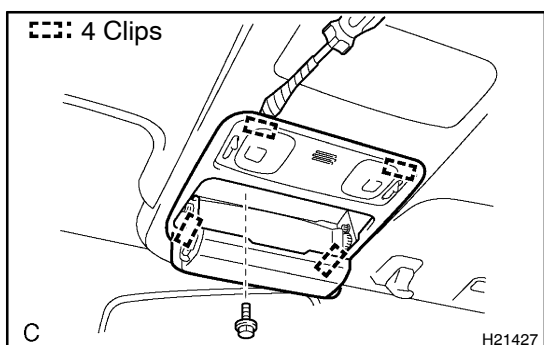


8. w/o Sliding roof:

REMOVE OVERHEAD CONSOLE BOX

- Remove the bolt.
- Using a screwdriver, remove the map lamp assembly, then disconnect the connector.

HINT:


Tape up the screwdriver tip before use.

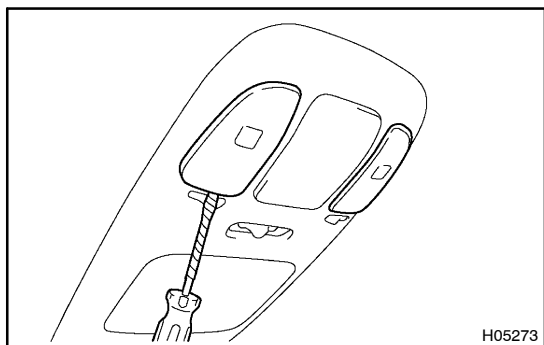

(c) Using a screwdriver, remove the 2 lenses.

HINT:

Tape up the screwdriver tip before use.

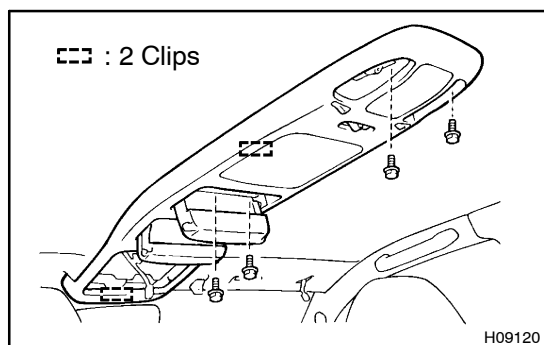


(d) Remove the 4 bolts.

(e) Using a screwdriver, remove the overhead console box, then disconnect the connector.

HINT:

Tape up the screwdriver tip before use.

9. REMOVE ASSIST GRIPS

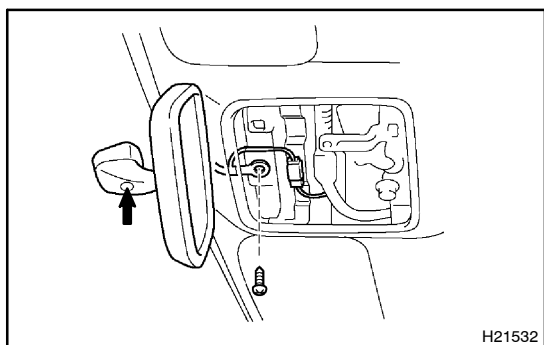

10. w/ Electrochromic rear view mirror:

REMOVE INNER REAR VIEW MIRROR

(a) Pull down the front side of the roof headlining.

(b) Disconnect the connector.

(c) Unfasten a screw, and remove the other screw and the inner rear view mirror.

11. w/o Electrochromic rear view mirror:

REMOVE INNER REAR VIEW MIRROR



(a) Unfasten the screw and remove the inner rear view mirror.

(b) Pull down the front side of the roof headlining.

12. Normal roof:


REMOVE INNER REAR VIEW MIRROR

(a) Using a moulding remover, remove the cover as shown in the illustration.

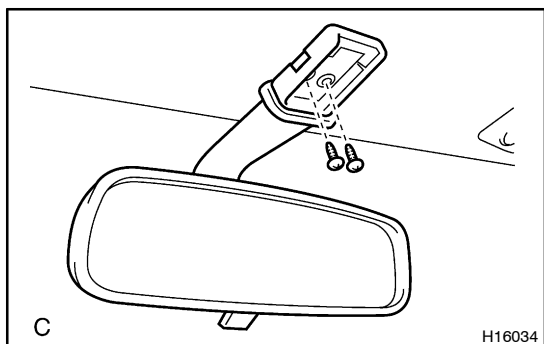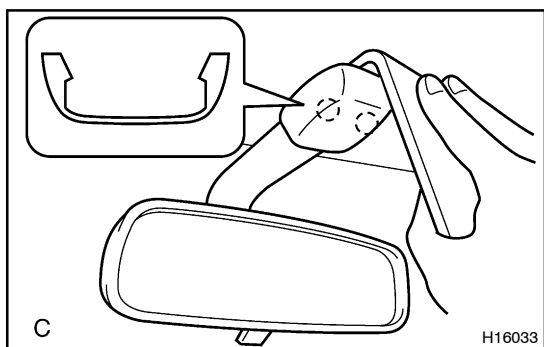

(b) Remove the 2 screws and the inner rear view mirror.

(c) Pull down the front side of the roof headlining.

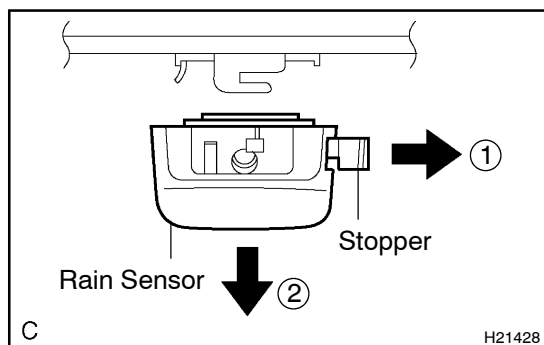**13. w/ Rain sensor:****REMOVE RAIN SENSOR**

- (a) Remove the screw then disconnect the connector.
- (b) Pull the stopper to release it as shown in the illustration, and remove the rain sensor.

14. REMOVE WIPER ARMS

- (a) Remove the 2 wiper arm head caps and the 2 nuts.
- (b) Remove the 2 wiper arms.

15. REMOVE HOOD TO COWL TOP SEAL**16. REMOVE COWL TOP VENTILATOR LOUVERS**

- (a) Remove the cowl top ventilator louver RH.
- (b) Remove the cowl top ventilator louver LH.


17. REMOVE OUTSIDE NO. 2 MOULDING

- (a) Using a screwdriver, remove the outside No. 2 moulding.

HINT:

Tape up the screwdriver tip before use.

- (b) Using a drill of less than $\varnothing$ 4 mm (0.16 in.).

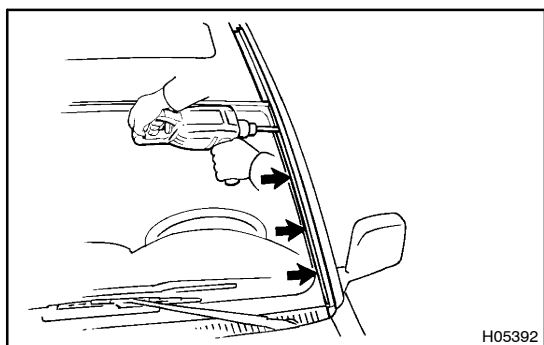

- (c) Gently and vertically put the drill to the rivet and cut the rivet flanges.


NOTICE:

- **Prizing the hole with a drill can lead to damage to the rivet hole or breaking the drill.**
 - **Take care as the cut rivet is hot.**
- (d) Even if flange is taken off, continue drilling and push out remaining fragments with the drill.
 - (e) Using a heat light, heat the moulding to 40 – 60 °C (104 – 140 °F).

NOTICE:

Do not heat the moulding excessively.

- (f) Tie both piano wire ends to wooden blocks or similar objects.

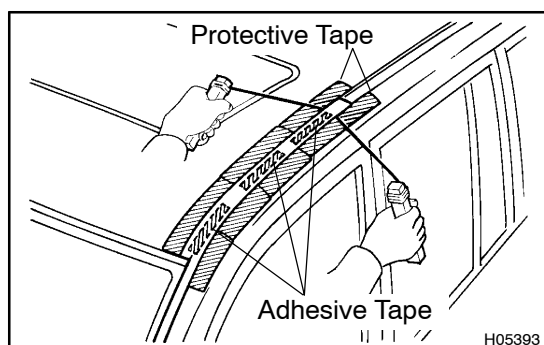

- (g) Cut the adhesive tape by pulling the piano wire as shown.


NOTICE:

- **If reusing the moulding, take care not to damage the moulding.**
- **Do not damage the body.**

HINT:

Apply protective tape to the outer surface to keep the surface from being scratched.


- (h) Remove the moulding.
- (i) Use the same manner described above to the other side.

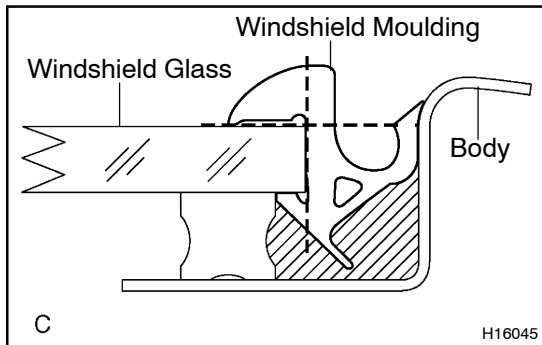**18. REMOVE OUTSIDE UPPER MOULDING**

Using a knife, cut off the moulding as shown in the illustration.

NOTICE:

Do not damage the body with the knife.

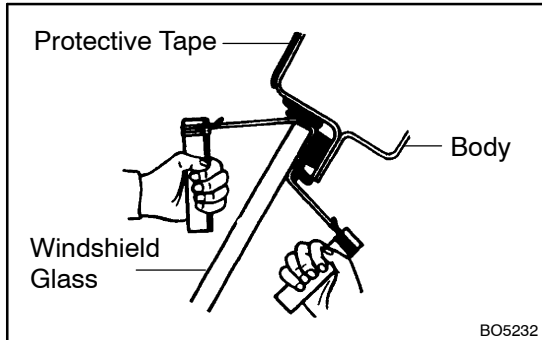
**19. REMOVE WINDSHIELD GLASS**

(a) Push piano wire through between the body and glass from the interior.

(b) Tie both wire ends to wooden blocks or similar objects.

HINT:

Apply protective tape to the outer surface to keep the surface from being scratched.

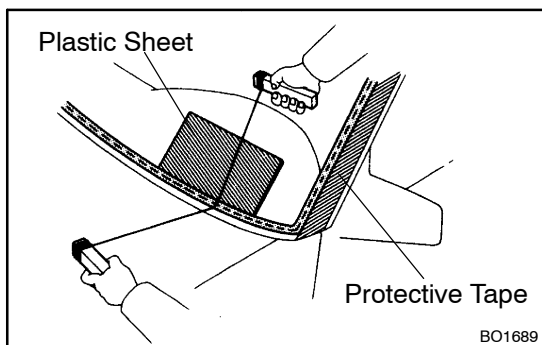**NOTICE:**

When separating the glass, take care not to damage the paint and interior and exterior ornaments. To prevent the safety pad from scratching when removing the windshield, place a plastic sheet between the piano wire and the safety pad.

(c) Cut the adhesive by pulling the piano wire around it.

(d) Remove the windshield glass.

NOTICE:

Leave as much adhesive on the body as possible when cutting the glass.