


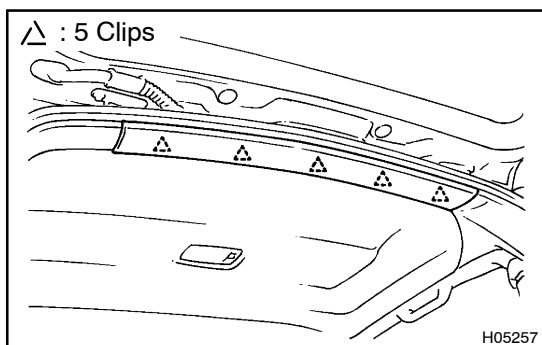

REMOVAL

1. REMOVE ROOF HEADLINING REAR TRIM


Using a screwdriver, remove the roof headlining rear trim.

HINT:

Tape up the screwdriver tip before use.

2. w/ Rear No.2 Seat:

REMOVE REAR NO.2 SEAT

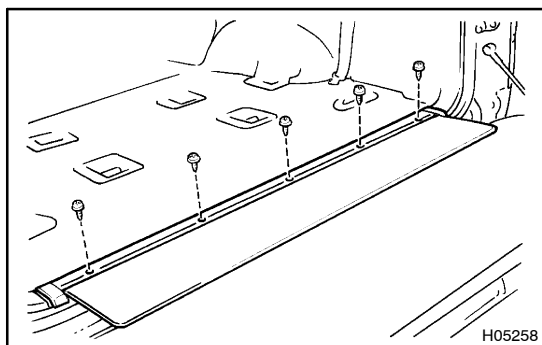


3. REMOVE REAR MAT SET PLATE

(a) Remove the 5 screws.

(b) Using a screwdriver, remove the rear mat set plate.

HINT:

Tape up the screwdriver tip before use.

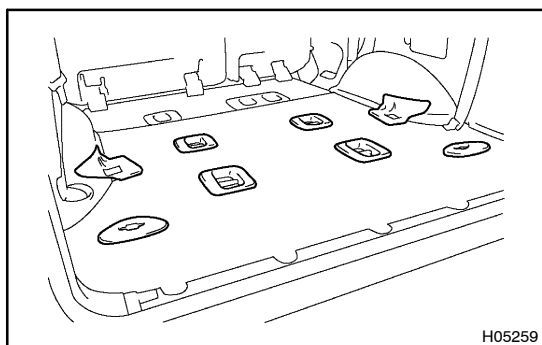

4. w/ Rear No.2 Seat (Forward-Facing Type):

REMOVE STRIKER PLATE

(a) Remove the 6 screws.

(b) Using a screwdriver, remove the striker plates.

HINT:

Tape up the screwdriver tip before use.

5. w/ TONNEAU COVER:

REMOVE TONNEAU COVER

6. REMOVE REAR MAT

7. w/ Rear No.2 Seat (Forward-Facing Type):

REMOVE REAR NO. 2 SEAT OUTER BELT FLOOR ANCHOR


Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

8. REMOVE REAR NO. 1 SEAT OUTER BELT FLOOR ANCHOR

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

9. REMOVE REAR DOOR SCUFF PLATE

10. REMOVE REAR DOOR OPENING TRIM

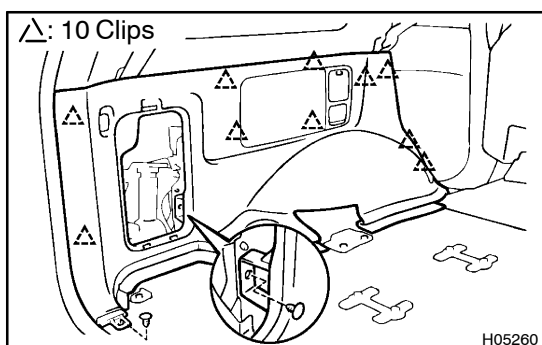


11. REMOVE QUARTER TRIM PANEL

(a) Remove the quarter trim jack cover.

(b) Using a clip remover, remove the 2 clips.

(c) Remove the quarter trim panel, then disconnect the connector.

12. **w/ Rear No.2 Seat (Forward-Facing Type):**
REMOVE REAR NO. 2 SEAT OUTER BELT SHOULDER ANCHOR
 Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)
13. **REMOVE REAR NO. 1 SEAT OUTER BELT SHOULDER ANCHOR**
 Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

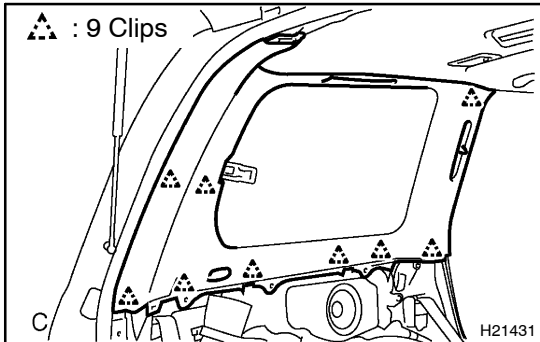

14. REMOVE UPPER ROOF SIDE INNER GARNISH

- (a) **w/ Rear No.2 Seat (Forward-Facing Type):**
 Using a screwdriver, remove the assist grip plugs, then remove the 2 screws and the rear assist grip.


HINT:

Tape up the screwdriver tip before use.

- (b) Using a clip remover, remove the clip.
- (c) Using a screwdriver, remove the upper roof side inner garnish.

HINT:


Tape up the screwdriver tip before use.

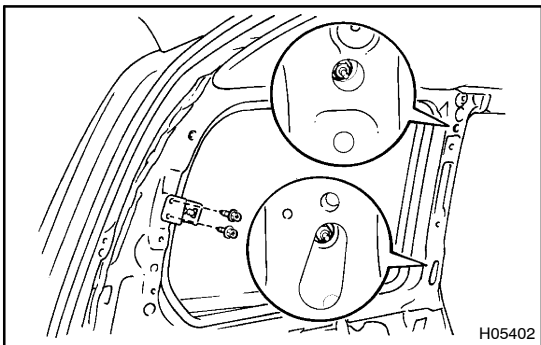

15. REMOVE QUARTER WINDOW GLASS

- (a) **w/ Power Vent:**
 Disconnect the connector.
- (b) **w/ Antenna:**
 Disconnect the connector.
- (c) Remove the 2 bolts, the 2 nuts and the quarter window glass.

16. REMOVE QUARTER WINDOW GLASS WEATHERSTRIP

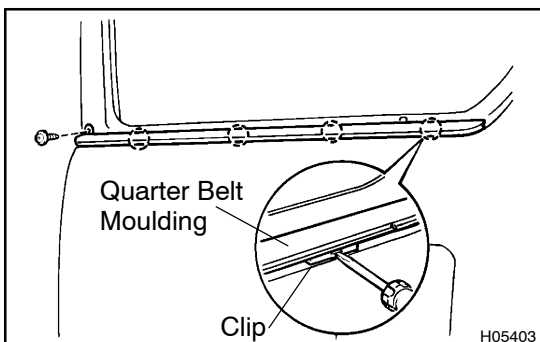

17. REMOVE QUARTER BELT MOULDING

- (a) Remove the screw.
- (b) Using a screwdriver, remove the quarter belt moulding.

HINT:

Tape up the screwdriver tip before use.

18. REMOVE QUARTER WINDOW LOCK

Remove the screw and the quarter window lock.