


TERMINALS OF ECU

1. w/o Side Airbag:

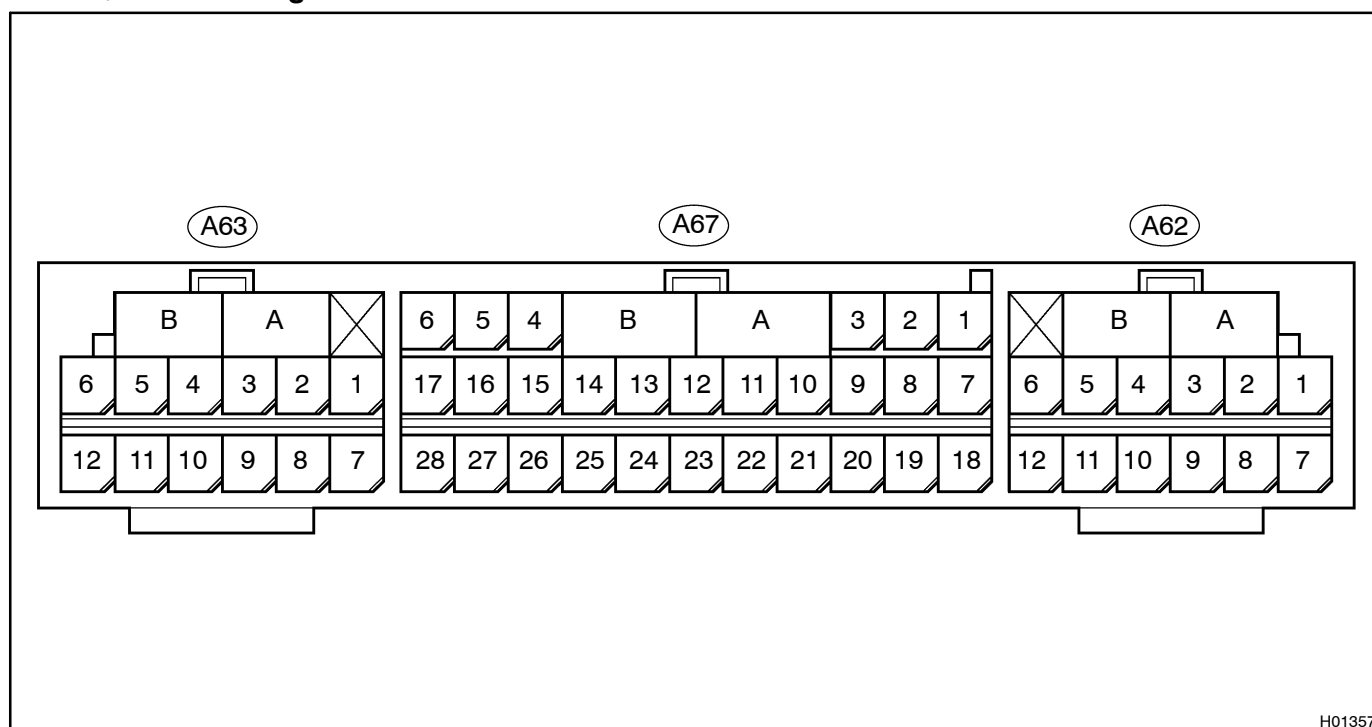


H01357

No.	Symbol	Terminal Name
A	–	Electrical Connector Check Mechanism
B	–	Electrical Connector Check Mechanism
A67 – 3	LA	SRS Warning Light
A67 – 5	IG2	Power Source
A67 – 7 (*1)	P2–	Squib (Passenger, 2nd step)
A67 – 8 (*1)	P2+	Squib (Passenger, 2nd step)
A67 – 9	+SR	Front Airbag Sensor RH
A67 – 10	P+	Squib (Passenger)
A67 – 11	P–	Squib (Passenger)
A67 – 12	SIL	Diagnosis
A67 – 13	D–	Squib (Driver)
A67 – 14	D+	Squib (Driver)
A67 – 15	+SL	Front Airbag Sensor LH
A67 – 16 (*1)	D2+	Squib (Driver, 2nd step)
A67 – 17 (*1)	D2–	Squib (Driver, 2nd step)
A67 – 19	TC	Diagnosis
A67 – 20	–SR	Front Airbag Sensor RH
A67 – 23	GSW2	Engine ECU
A67 – 26	–SL	Front Airbag Sensor LH
A67 – 27	E1	Ground
A67 – 28	E2	Ground
A63 – 1	PL–	Squib (Seat Belt Pretensioner, LH)
A63 – 2	PL+	Squib (Seat Belt Pretensioner, LH)
A63 – 3 (*1)	LSP+	Seat Position Sensor Assembly (LHD)

No.	Symbol	Terminal Name
A63 - 8 (*1)	LSP-	Seat Position Sensor Assembly (LHD)
A63 - 11 (*1)	LBE+	Seat Belt Buckle Switch LH (LHD)
A62 - 4 (*1)	RSP+	Seat Position Sensor Assembly (RHD)
A62 - 5	PR+	Squib (Seat Belt Pretensioner, RH)
A62 - 6	PR-	Squib (Seat Belt Pretensioner, RH)
A62 - 8 (*1)	RBE+	Seat Belt Buckle Switch RH (RHD)
A62 - 11 (*1)	RSP-	Seat Position Sensor Assembly (RHD)

*1: Dual Stage Airbag

2. w/ Side Airbag:

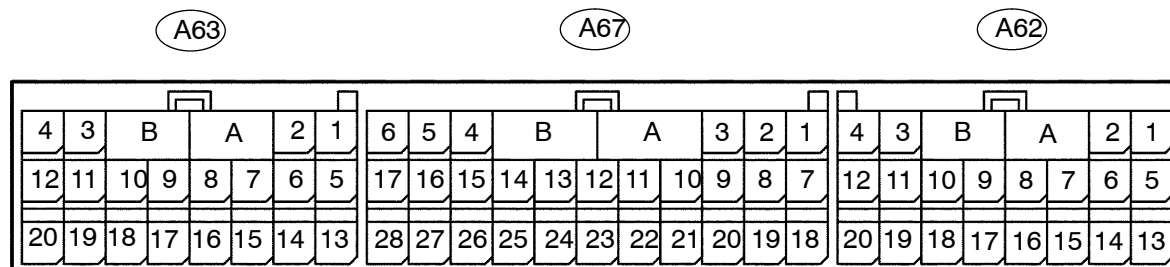

P

H16828

No.	Symbol	Terminal Name
A	–	Electrical Connector Check Mechanism
B	–	Electrical Connector Check Mechanism
A67 – 3	LA	SRS Warning Light
A67 – 5	IG2	Power Source
A67 – 7	P2–	Squib (Passenger, 2nd step)
A67 – 8	P2+	Squib (Passenger, 2nd step)
A67 – 9	+SR	Front Airbag Sensor RH
A67 – 10	P+	Squib (Passenger)
A67 – 11	P–	Squib (Passenger)
A67 – 12	SIL	Diagnosis
A67 – 13	D–	Squib (Driver)
A67 – 14	D+	Squib (Driver)
A67 – 15	+SL	Front Airbag Sensor LH
A67 – 16	D2+	Squib (Driver, 2nd step)
A67 – 17	D2–	Squib (Driver, 2nd step)
A67 – 19	TC	Diagnosis
A67 – 20	–SR	Front Airbag Sensor RH
A67 – 21	RMSW	RSCA Off Switch
A67 – 22	MPX2	Body ECU
A67 – 23	GSW2	Diagnosis
A67 – 25	RMIL	RSCA Off Switch Indicator
A67 – 26	–SL	Front Airbag Sensor LH
A67 – 27	E1	Ground
A67 – 28	E2	Ground

No.	Symbol	Terminal Name
A63 – 1	CSL–	Curtain Shield Airbag Sensor Assembly LH
A63 – 3	LSP–	Seat Position Sensor Assembly (LHD)
A63 – 4	LSP+	Seat Position Sensor Assembly (LHD)
A63 – 7	PL–	Squib (Seat Belt Pretensioner, LH)
A63 – 8	PL+	Squib (Seat Belt Pretensioner, LH)
A63 – 9	ICL+	Squib (Curtain Shield, LH)
A63 – 10	ICL–	Squib (Curtain Shield, LH)
A63 – 11	SFL–	Squib (Side, LH)
A63 – 12	SFL+	Squib (Side, LH)
A63 – 13	ESCL	Curtain Shield Airbag Sensor Assembly LH
A63 – 14	VUCL	Curtain Shield Airbag Sensor Assembly LH
A63 – 15	CSL+	Curtain Shield Airbag Sensor Assembly LH
A63 – 16	VUPL	Side and Curtain Shield Airbag Sensor Assembly LH
A63 – 17	SSL+	Side and Curtain Shield Airbag Sensor Assembly LH
A63 – 18	ESL	Side and Curtain Shield Airbag Sensor Assembly LH
A63 – 19	LBE+	Seat Belt Buckle Switch LH (LHD)
A63 – 20	SSL–	Side and Curtain Shield Airbag Sensor Assembly LH
A62 – 1	RSP+	Seat Position Sensor Assembly (RHD)
A62 – 2	RSP–	Seat Position Sensor Assembly (RHD)
A62 – 4	CSR–	Curtain Shield Airbag Sensor Assembly RH
A62 – 5	SFR+	Squib (Side, RH)
A62 – 6	SFR–	Squib (Side, RH)
A62 – 7	ICR–	Squib (Curtain Shield, RH)
A62 – 8	ICR+	Squib (Curtain Shield, RH)
A62 – 9	PR+	Squib (Seat Belt Pretensioner, RH)
A62 – 10	PR–	Squib (Seat Belt Pretensioner, RH)
A62 – 13	SSR–	Side and Curtain Shield Airbag Sensor Assembly RH
A62 – 14	RBE+	Seat Belt Buckle Switch RH (RHD)
A62 – 15	ESR	Side and Curtain Shield Airbag Sensor Assembly RH
A62 – 16	SSR+	Side and Curtain Shield Airbag Sensor Assembly RH
A62 – 17	VUPR	Side and Curtain Shield Airbag Sensor Assembly RH
A62 – 18	CSR+	Curtain Shield Airbag Sensor Assembly RH
A62 – 19	VUCR	Curtain Shield Airbag Sensor Assembly RH
A62 – 20	ESCR	Curtain Shield Airbag Sensor Assembly RH