


Front Washer Switch Circuit

CIRCUIT DESCRIPTION

This circuit sends a front washer switch ON or OFF signal to ECU.

WIRING DIAGRAM


LHD Models:

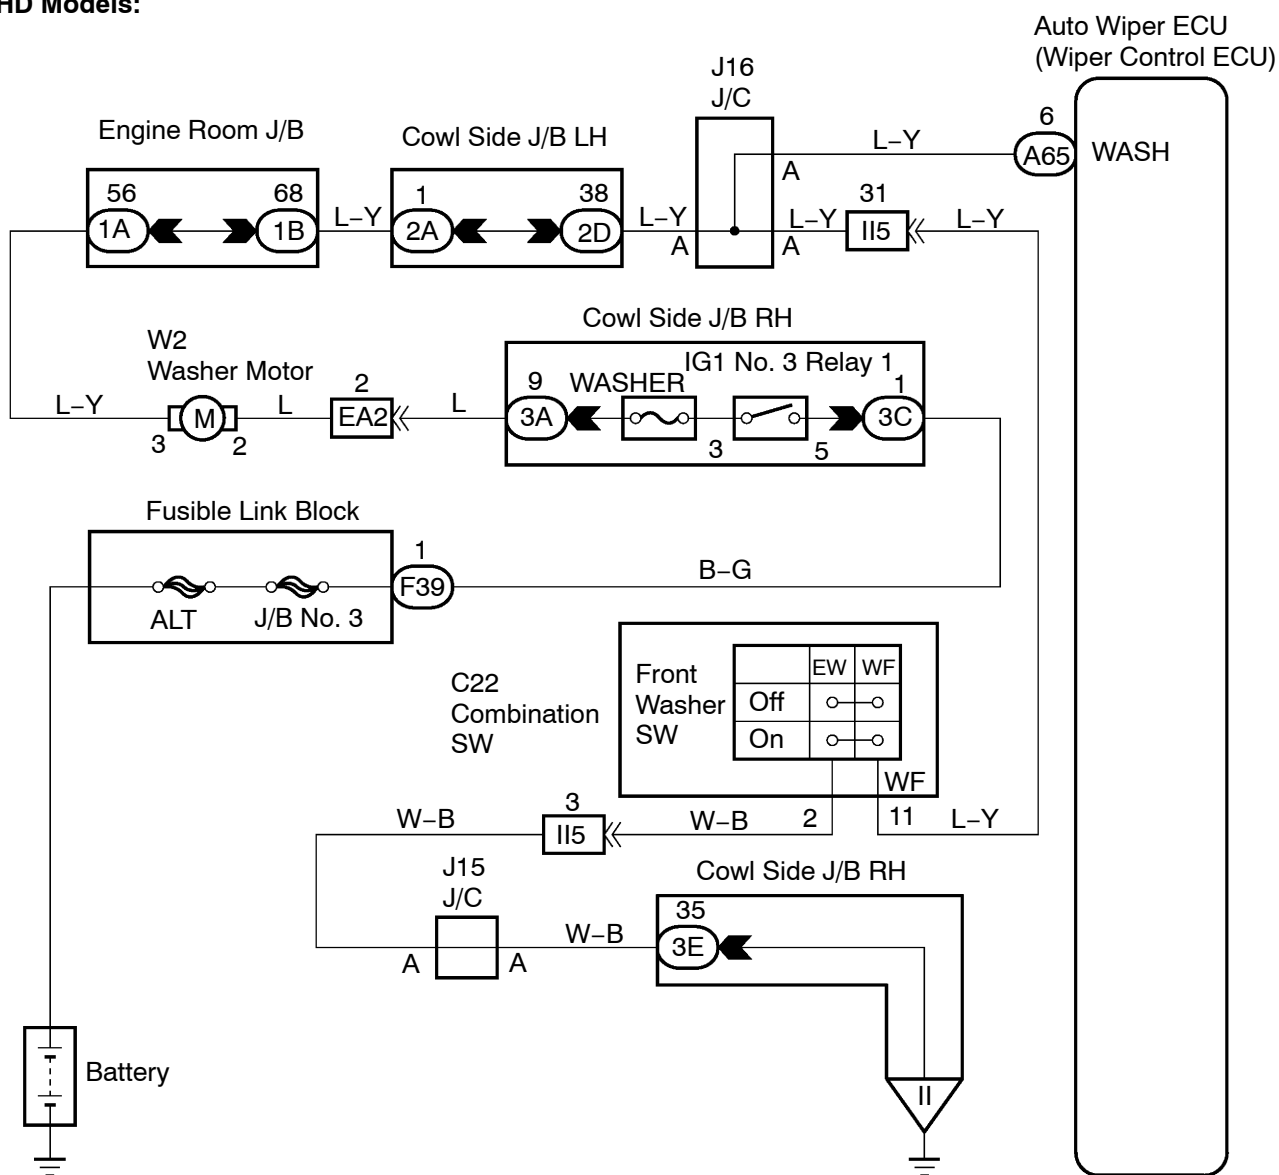

C

I25580

RHD Models:

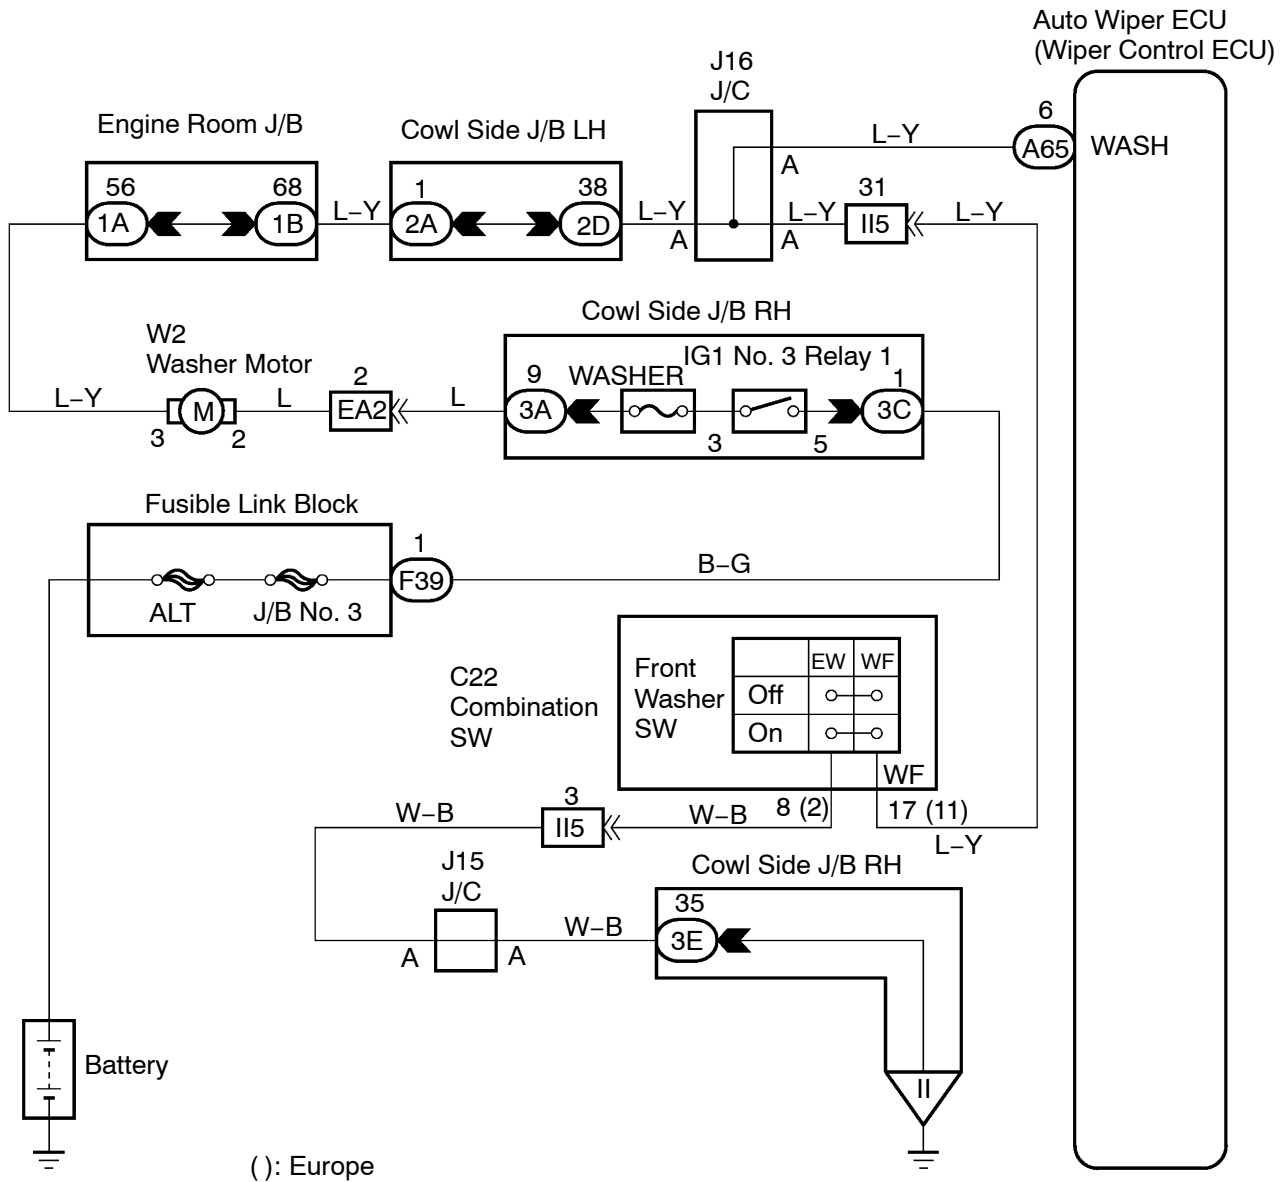

C

I25580

INSPECTION PROCEDURE

1	Check WASHER fuse.
---	--------------------

CHECK:

Check continuity of WASHER fuse.

OK:

Continuity

NG

Replace WASHER fuse.

OK

2	Check wire harness between combination switch and wiper control ECU (See page IN-38).
---	---

NG

Repair or Replace wire harness.

OK

Proceed next circuit inspection shown on problem symptom table (See page DI-930).
