


TERMINALS OF ECU

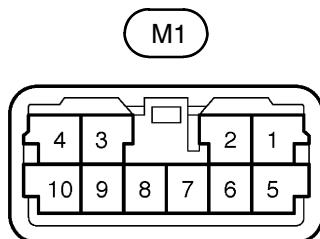

I04611

Symbols (Terminals No.)	Wiring Color	Condition	Specified Condition
BUS *1, PWR *2 (M1-2)	L	Multiplex communication circuit signals	-
DOWN ↔ E (M1-3 ↔ M1-7)	R-W ↔ W-B	Sliding roof control switch TILT DOWN	10 - 14 V
		Others	Below 1 V
UP ↔ E (M1-4 ↔ M1-7)	R-Y ↔ W-B	Sliding roof control switch TILT UP	10 - 14 V
		Others	Below 1 V
+B ↔ E (M1-5 ↔ M1-7)	B ↔ W-B	Always	10 - 14 V
E ↔ Body ground (M1-7 ↔ Body ground)	W-B ↔ Body Ground	Always	10 - 14 V
IG ↔ E (M1-8 ↔ M1-7)	B-W ↔ W-B	Ignition switch ON	10 - 14 V
		Ignition switch OFF or ACC	Below 1 V
OPEN ↔ E (M1-9 ↔ M1-7)	R ↔ W-B	Sliding roof control switch OPEN	10 - 14 V
		Others	Below 1 V
CLOSE ↔ E (M1-10 ↔ M1-7)	G-Y ↔ W-B	Sliding roof control switch CLOSE	10 - 14 V
		Others	Below 1 V

*1: 2UZFE, 1HD-FTE Except Europe

*2: Except *1