


Door courtesy switch circuit

CIRCUIT DESCRIPTION


The door courtesy light goes on when the door is opened and goes off when closed.

WIRING DIAGRAM

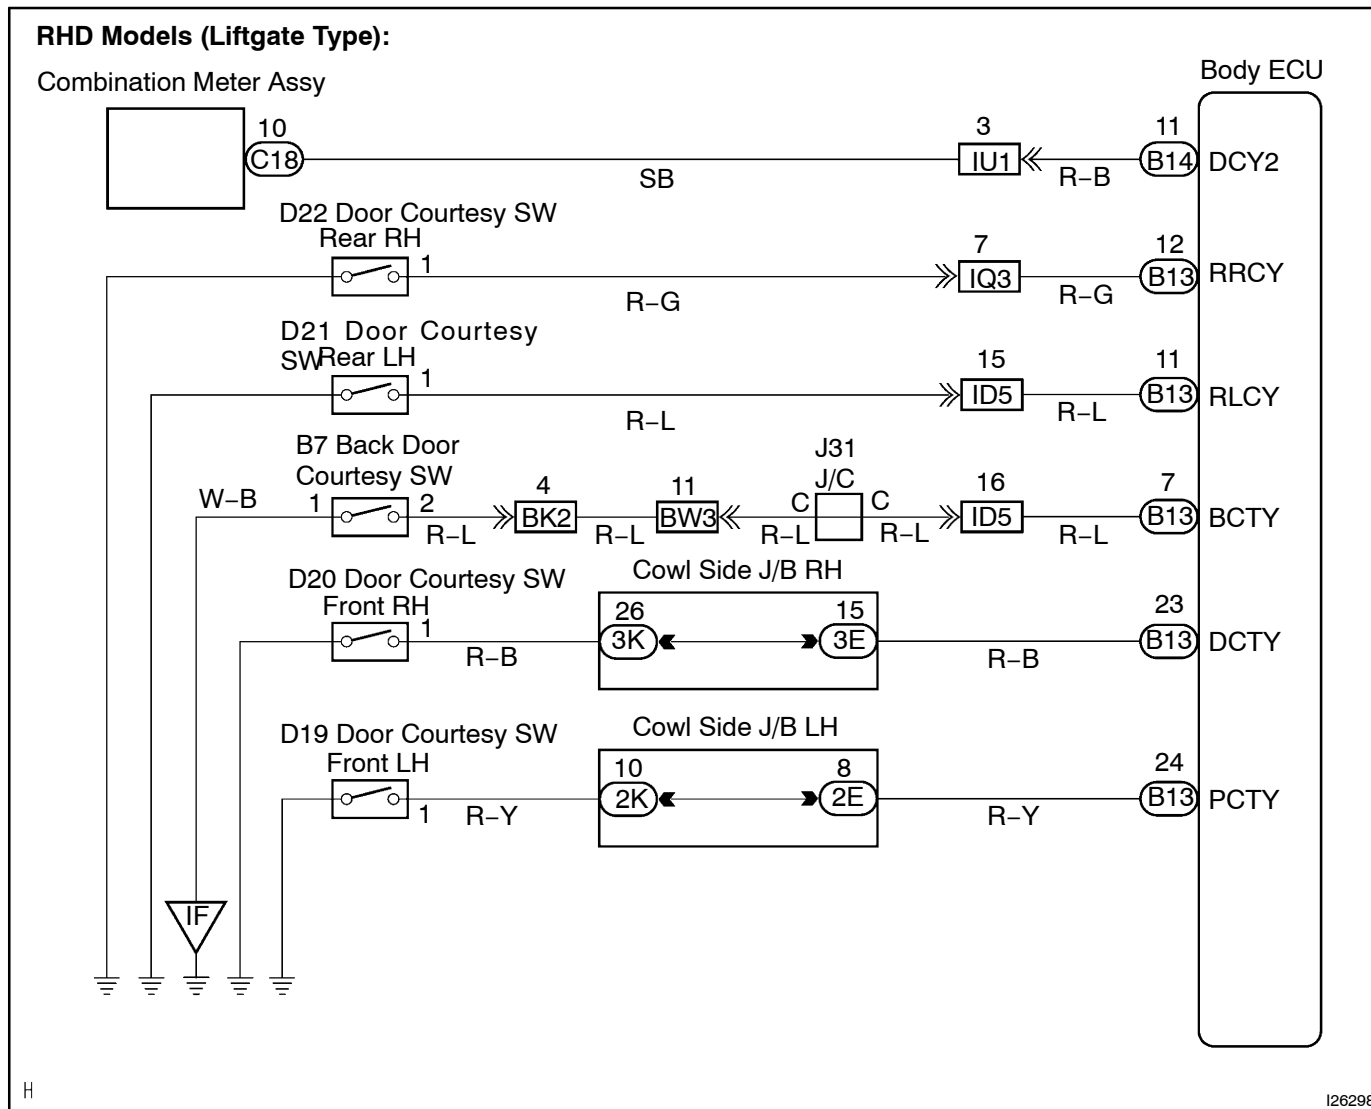

RHD Models (Swing Type):

Combination Meter Assy

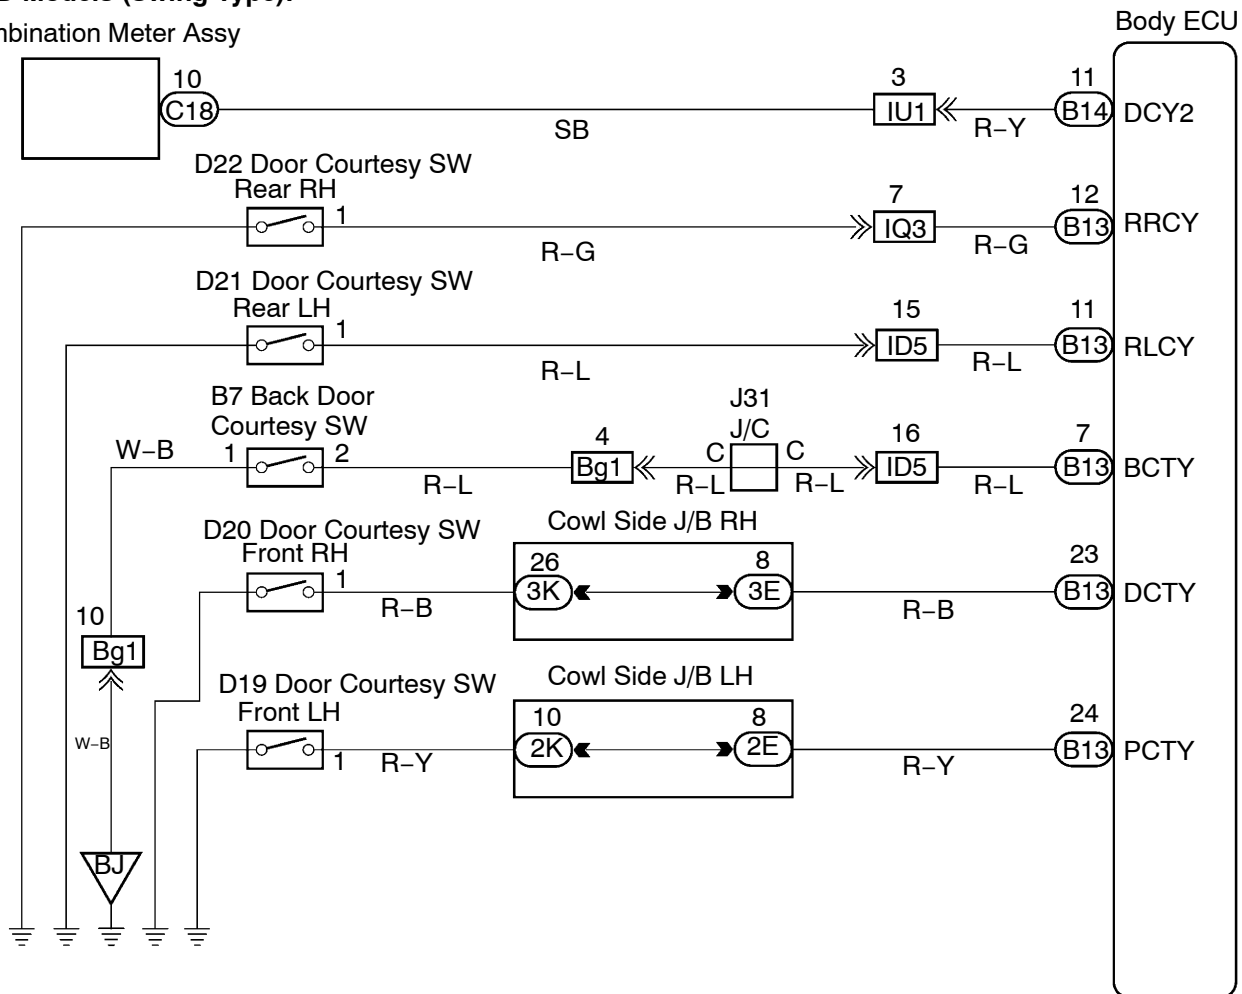


H

I26299

LHD Models (Liftgate Type):

Combination Meter Assy

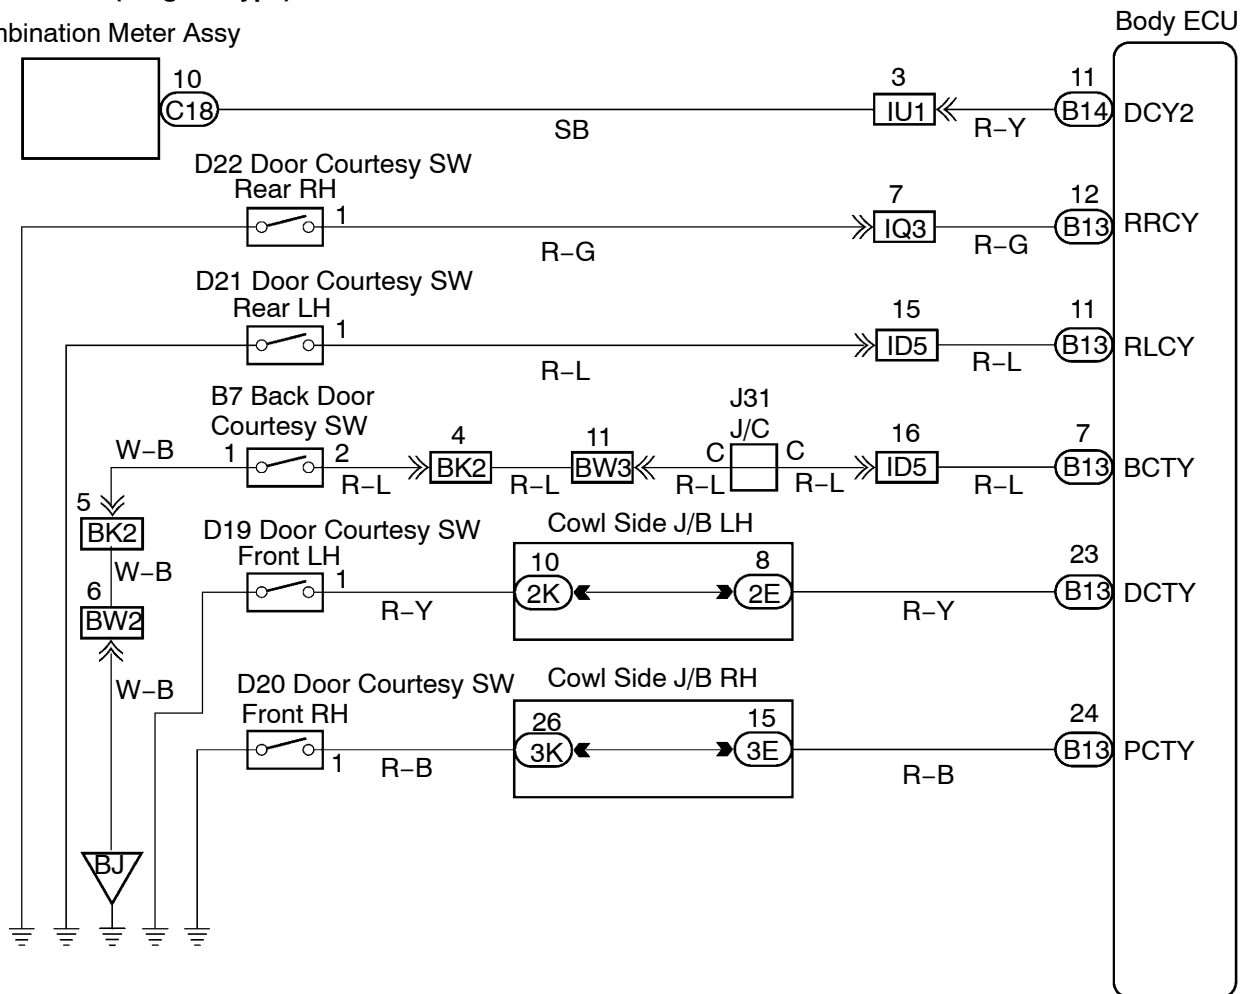


H

I26297

LHD Models (Swing Type):

Combination Meter Assy

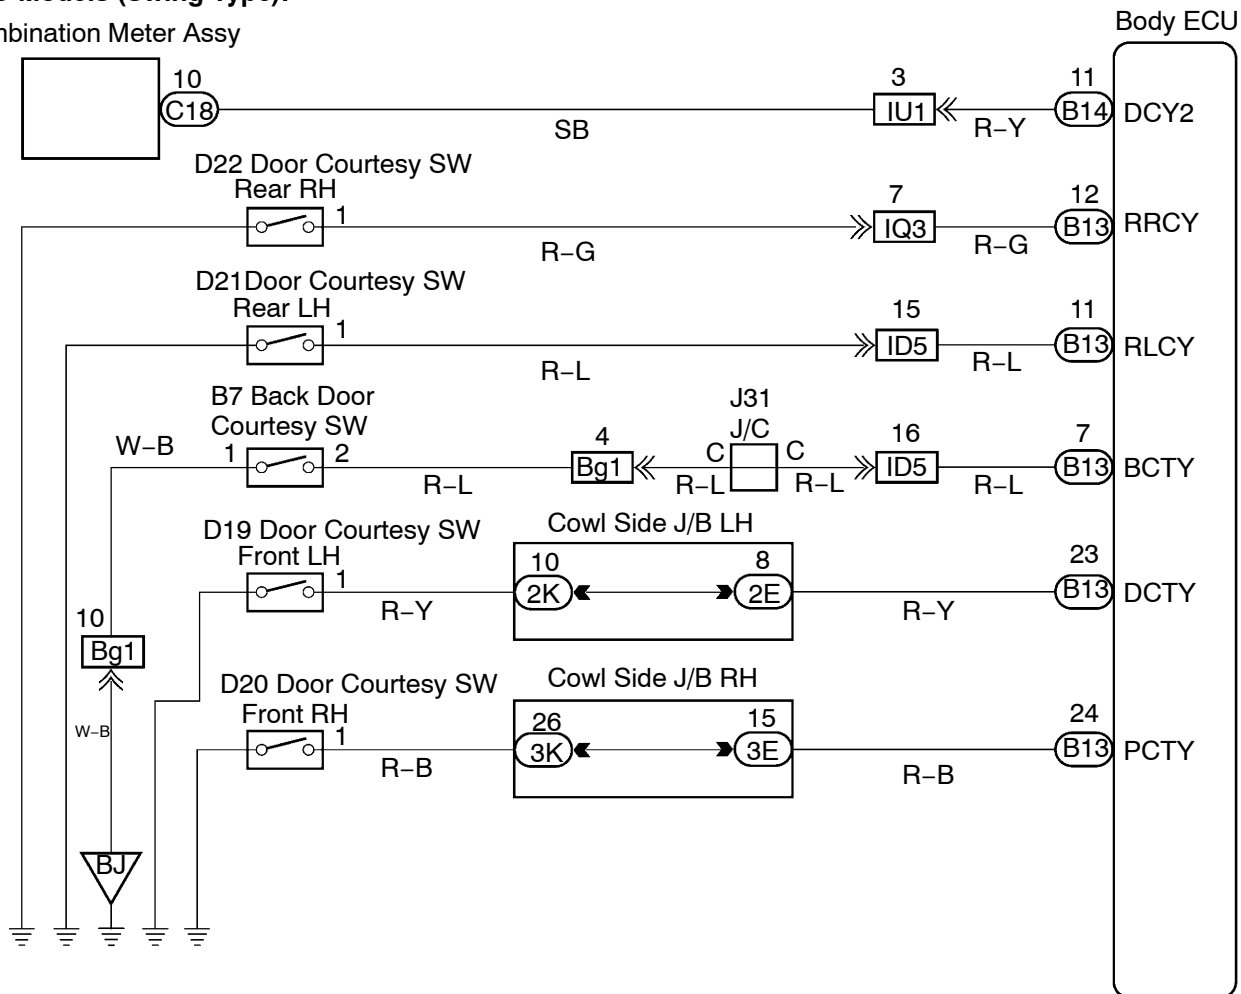**INSPECTION PROCEDURE****HINT:**

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check door courtesy switch using hand-held tester.
----------	---

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the door courtesy switch operate in DATA LIST (See page DI-981).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-992).

NG

2 Check the door courtesy switch.

NG

Replace the door courtesy switch.

OK

3 Check wire harness and connector between door courtesy switch and Body ECU (IN-38).

NG

Repair or replace wire harness or connector.

OK

**Proceed to next circuit inspection shown on problem symptoms table
([See page DI-992](#)).**