



Headlight dimmer switch circuit

WIRING DIAGRAM

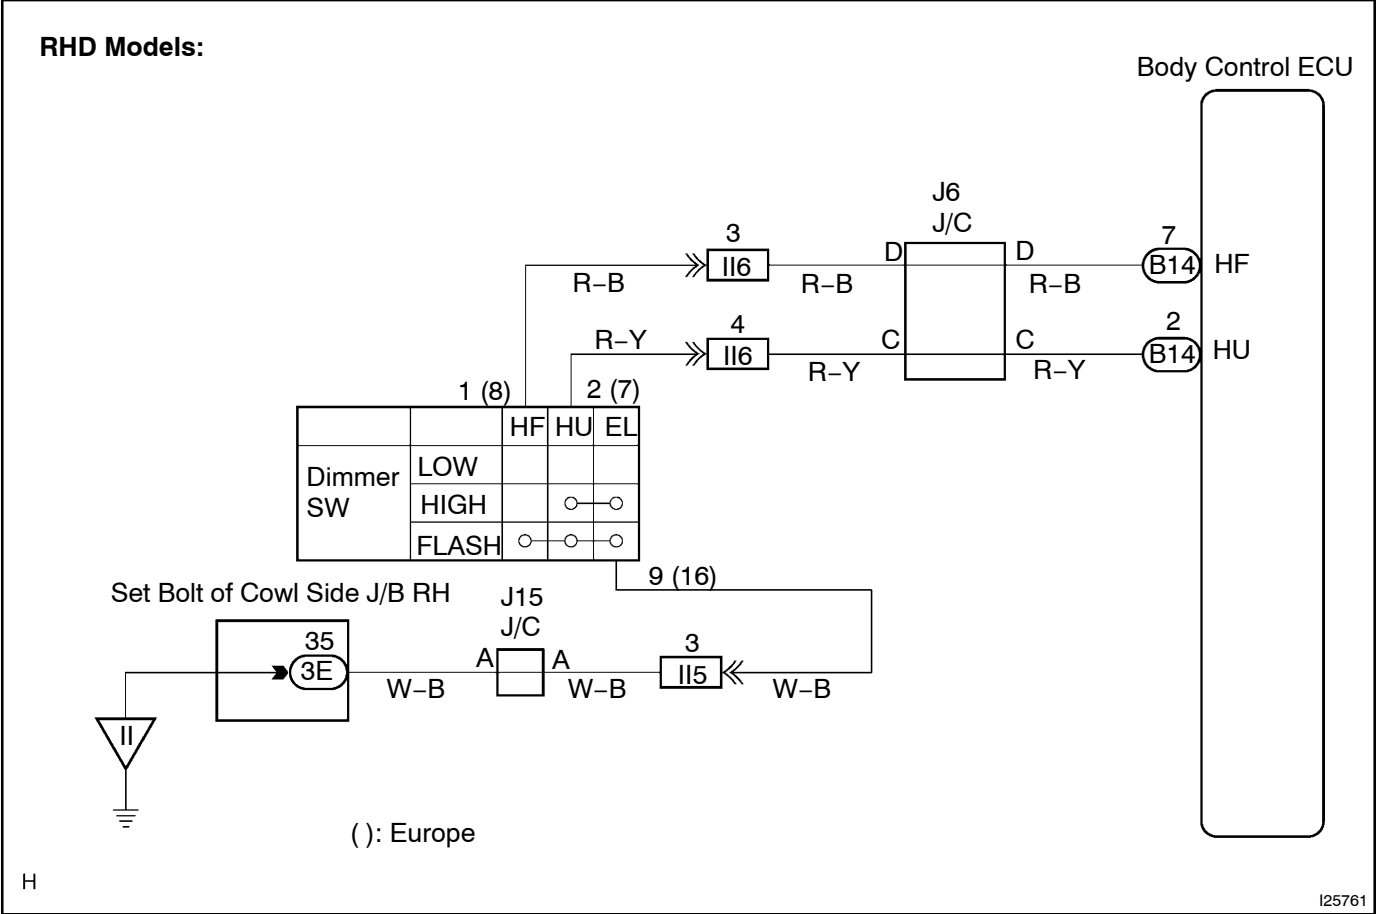

LHD Models:

Body Control ECU

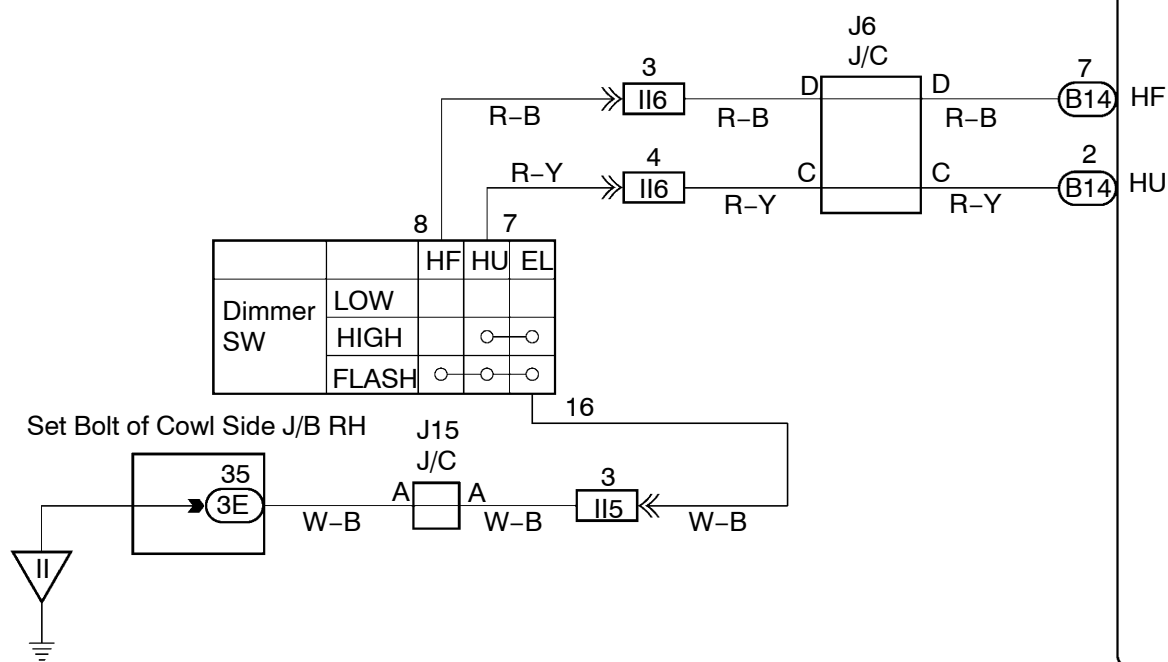

H

I25761

INSPECTION PROCEDURE**HINT:**

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check light control switch using hand-held tester.
----------	---

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the light control switch operate in ACTIVE TEST (See page DI-981).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-992).

NG

2 Check headlight control switch ([See page BE-23](#)).

NG

Replace the headlight control switch.

OK

3 Check wire harness and connector between headlight control switch and Body ECU ([See page IN-38](#)).

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).