


Parking brake switch circuit

WIRING DIAGRAM


LHD Models:

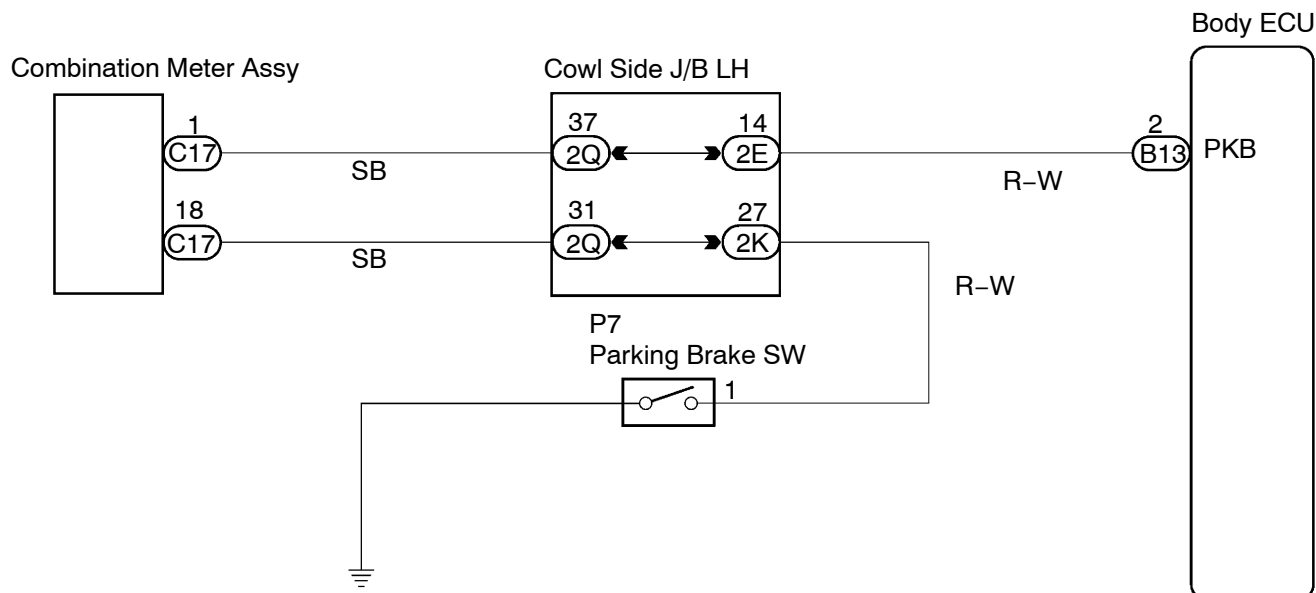

H

I25762

RHD Models:

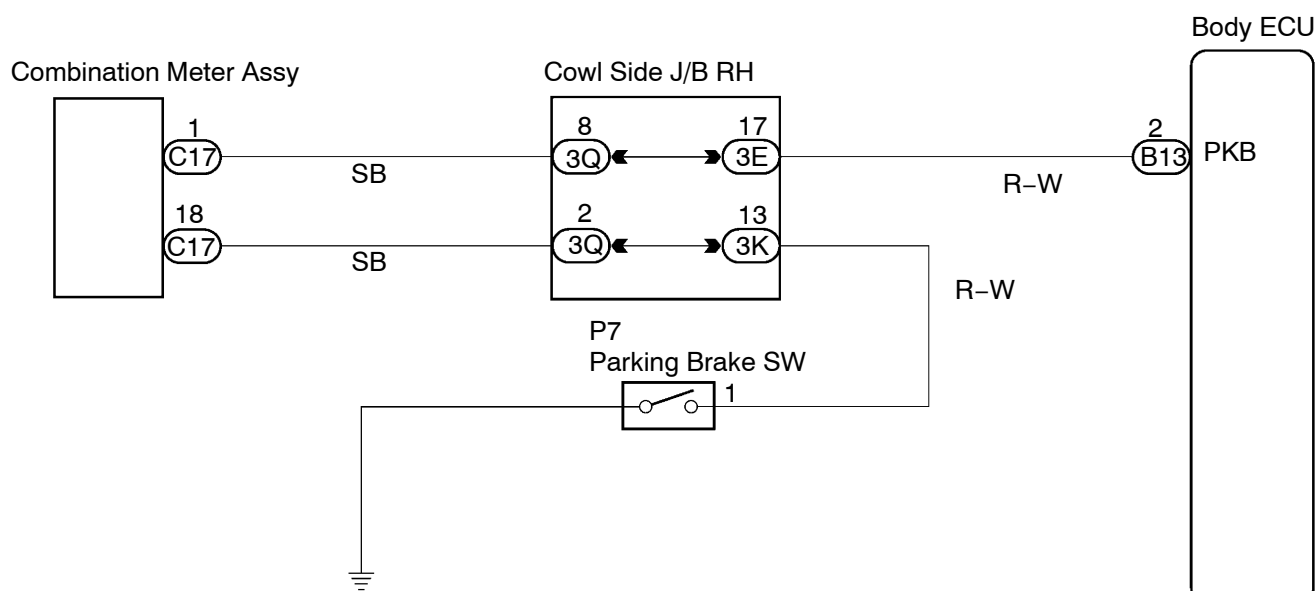

H

I25762

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check parking brake switch using hand-held tester.
---	--

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the parking brake switch operate in DATA LIST ([See page DI-981](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).

NG

2	Check parking brake switch.
---	-----------------------------

NG

Replace the parking brake switch.

OK

3	Check wire harness and connector between parking brake switch and Body ECU(See page IN-38).
---	---

OK

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).