


Driver seat buckle switch circuit

WIRING DIAGRAM


LHD Models w/ Driving Position Memory:

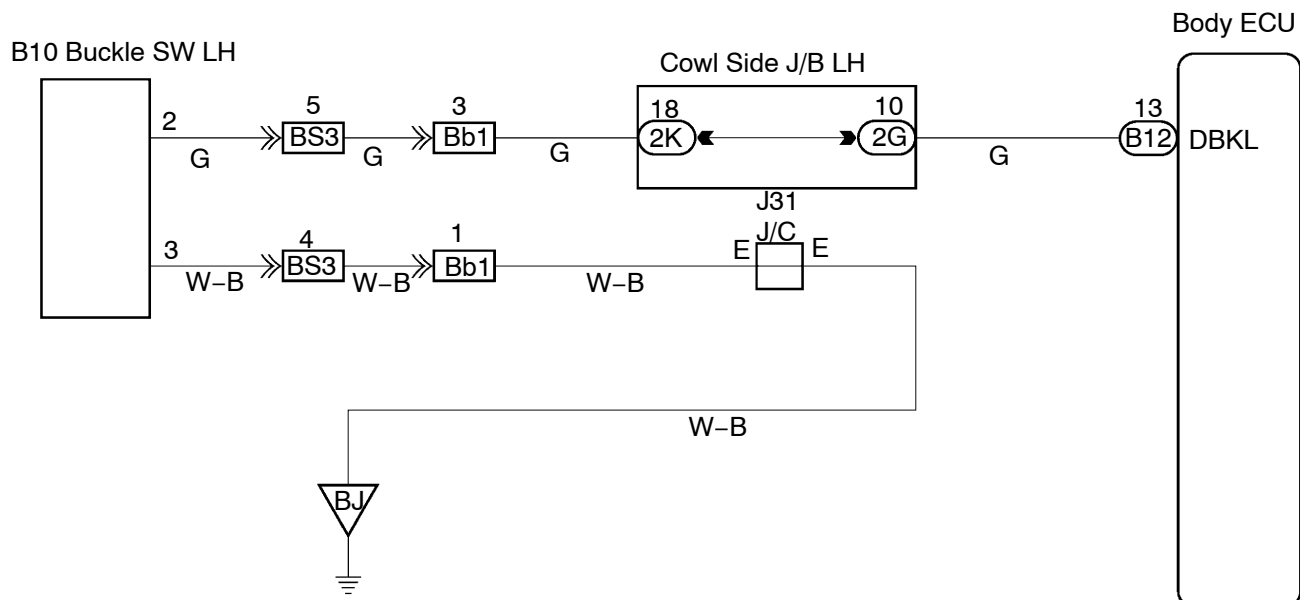

H

I26301


RHD Models w/ Driving Position Memory:

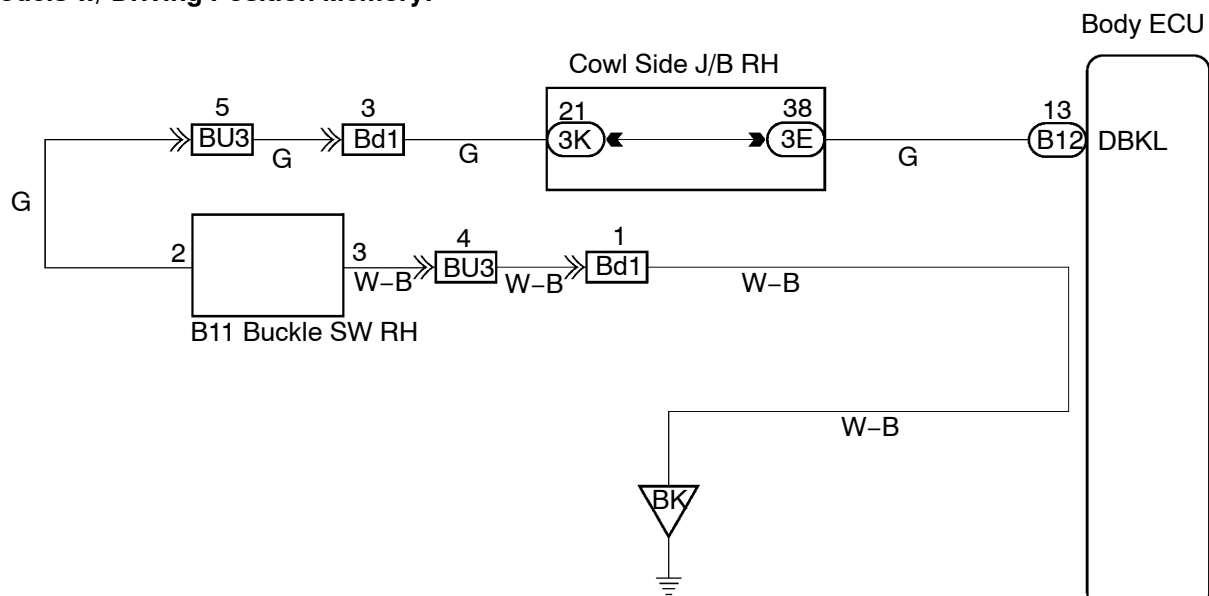

H


I26267

B15 Buckle SW LH

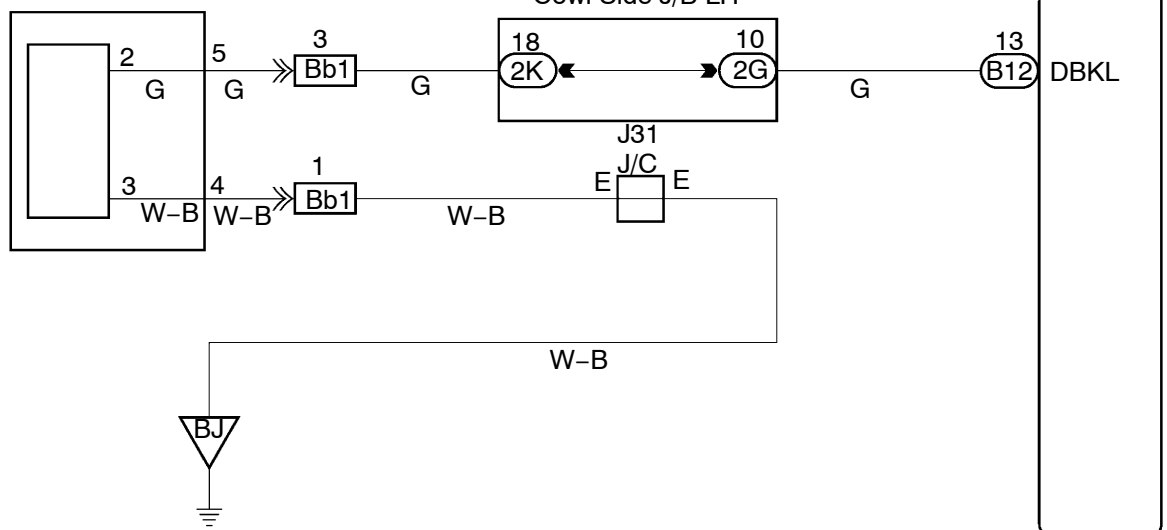

126303

Body ECU

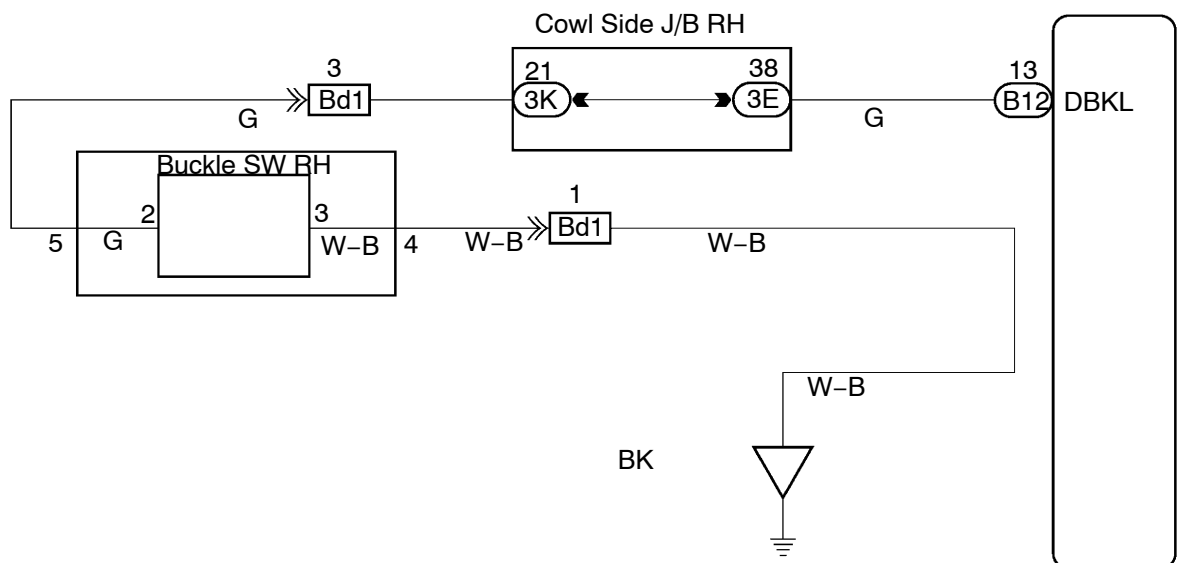

126302

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check driver seat buckle switch using hand-held tester.
---	--

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the driver seat buckle switch operate in DATA LIST ([See page DI-981](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).

NG

2	Check driver seat buckle switch (See page BE-41).
---	--

NG

Replace the driver seat buckle switch.

OK

3	Check wire harness and connector between driver seat buckle switch and Body ECU (See page IN-38).
---	--

OK

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).