


Headlight relay circuit


CIRCUIT DESCRIPTION

The headlight dimmer switch sends a signal to the Body ECU.

WIRING DIAGRAM

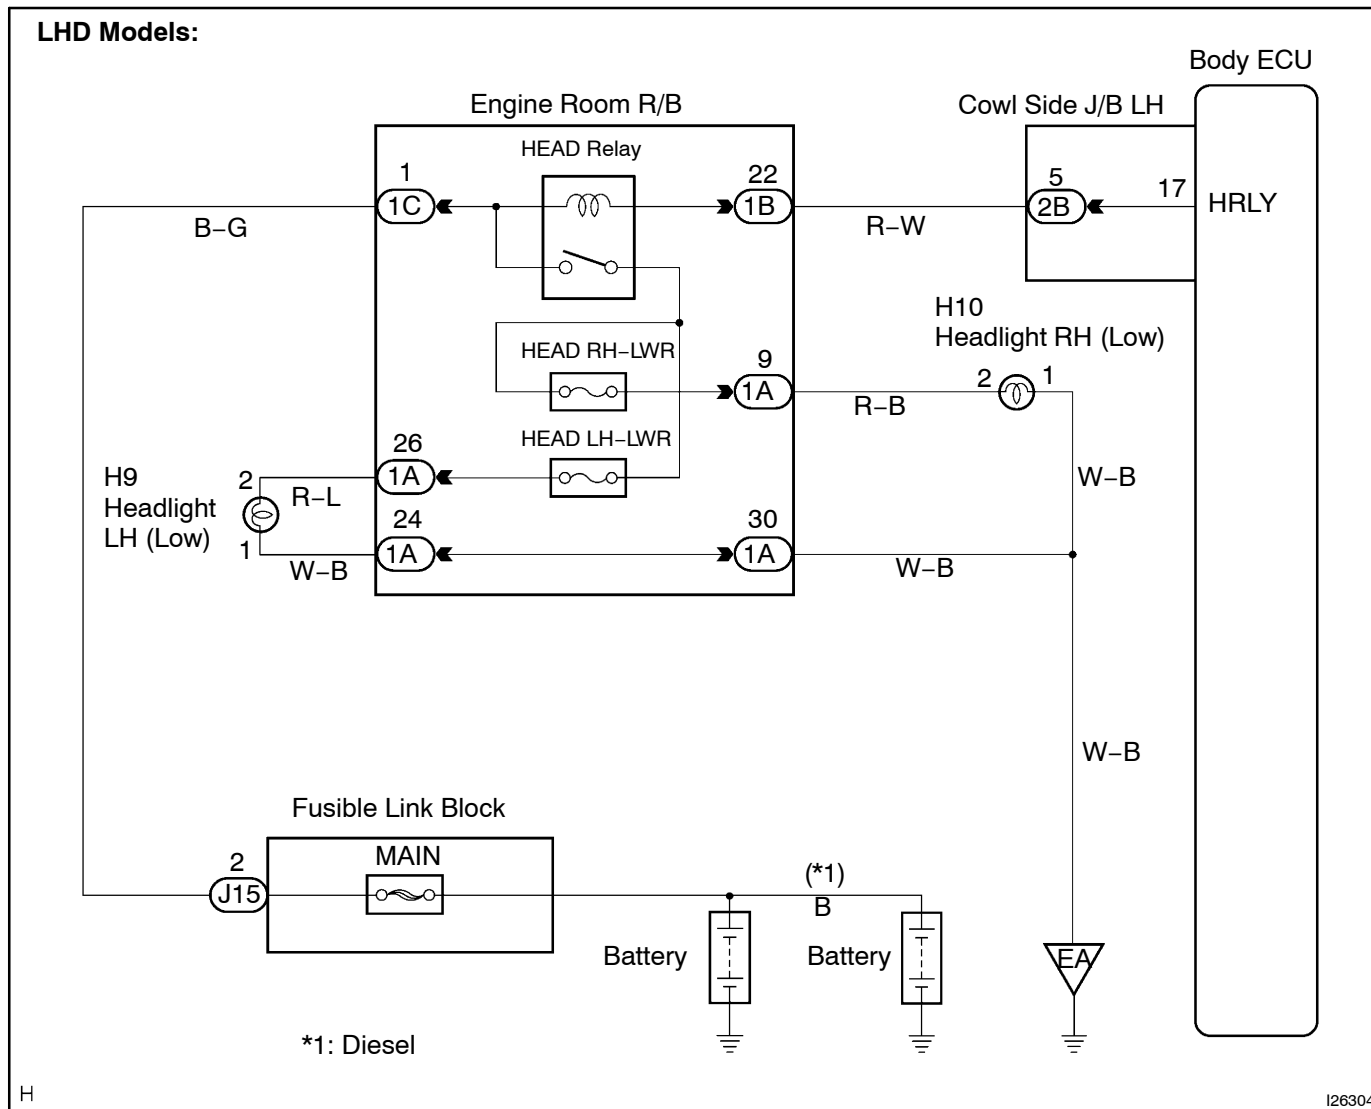

RHD Models:

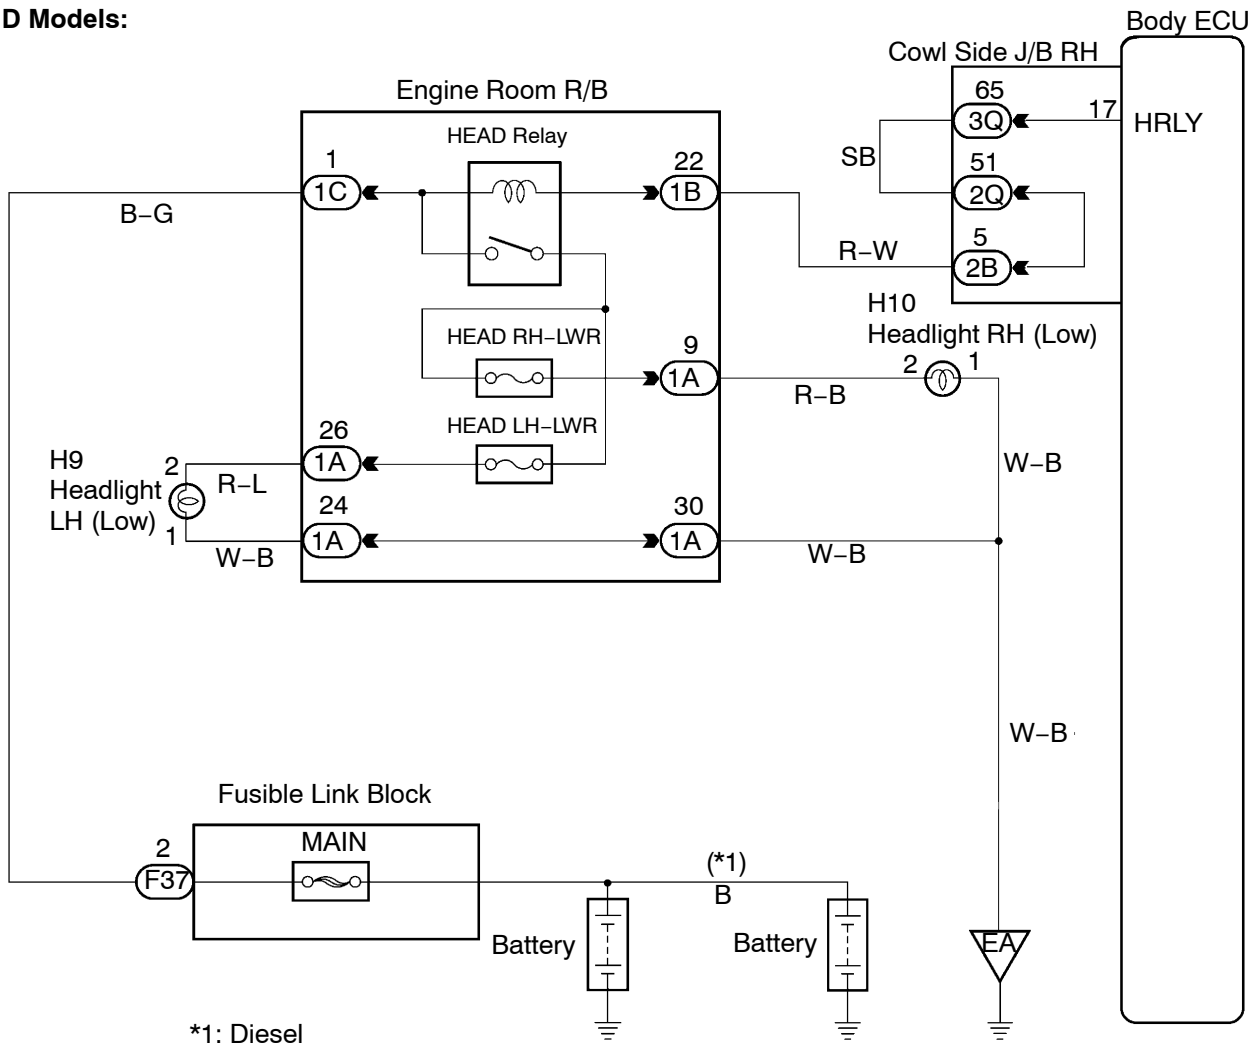

*1: Diesel

H

126305

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check headlight relay using hand-held tester.
---	---

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the headlight relay operate in ACTIVE TEST ([See page DI-981](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).

NG

2	Check headlight relay circuit (See page BE-23).
---	---

NG

Replace engine room J/B assy with wire harness.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).