
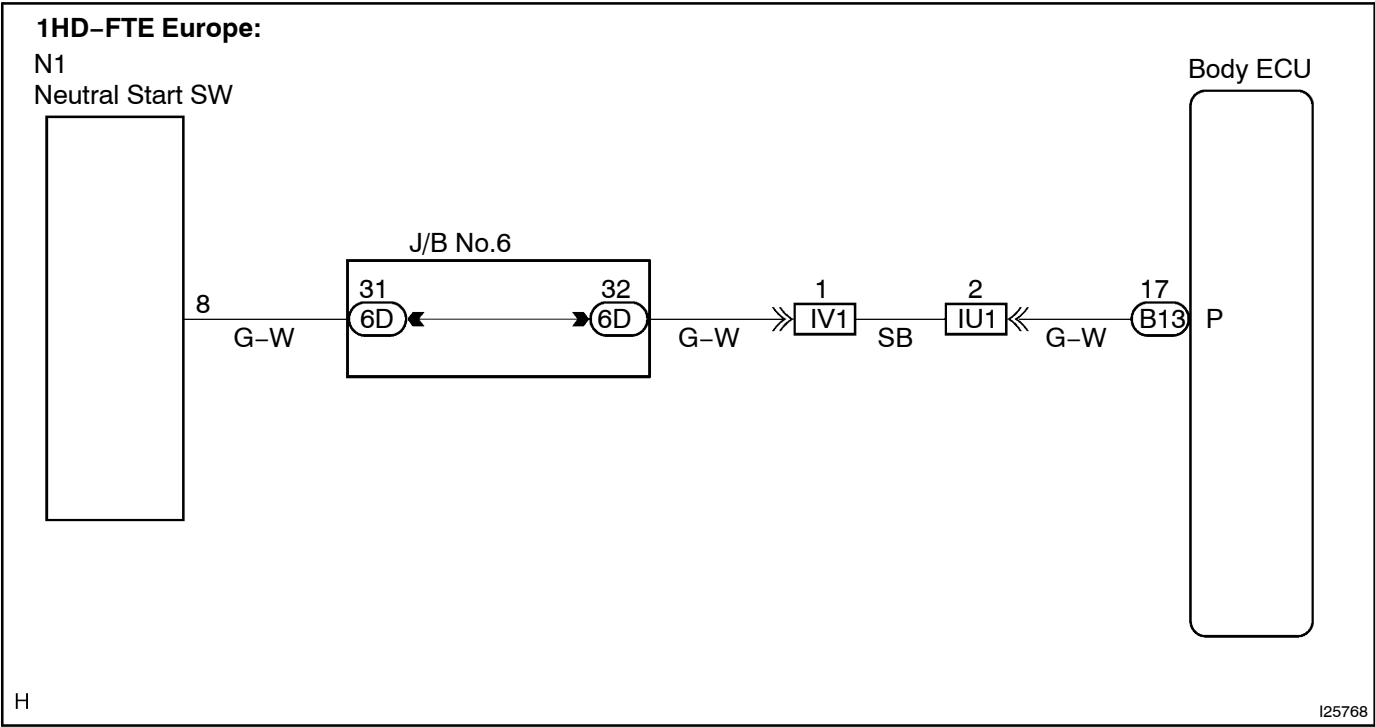


Neutral start switch circuit

WIRING DIAGRAM

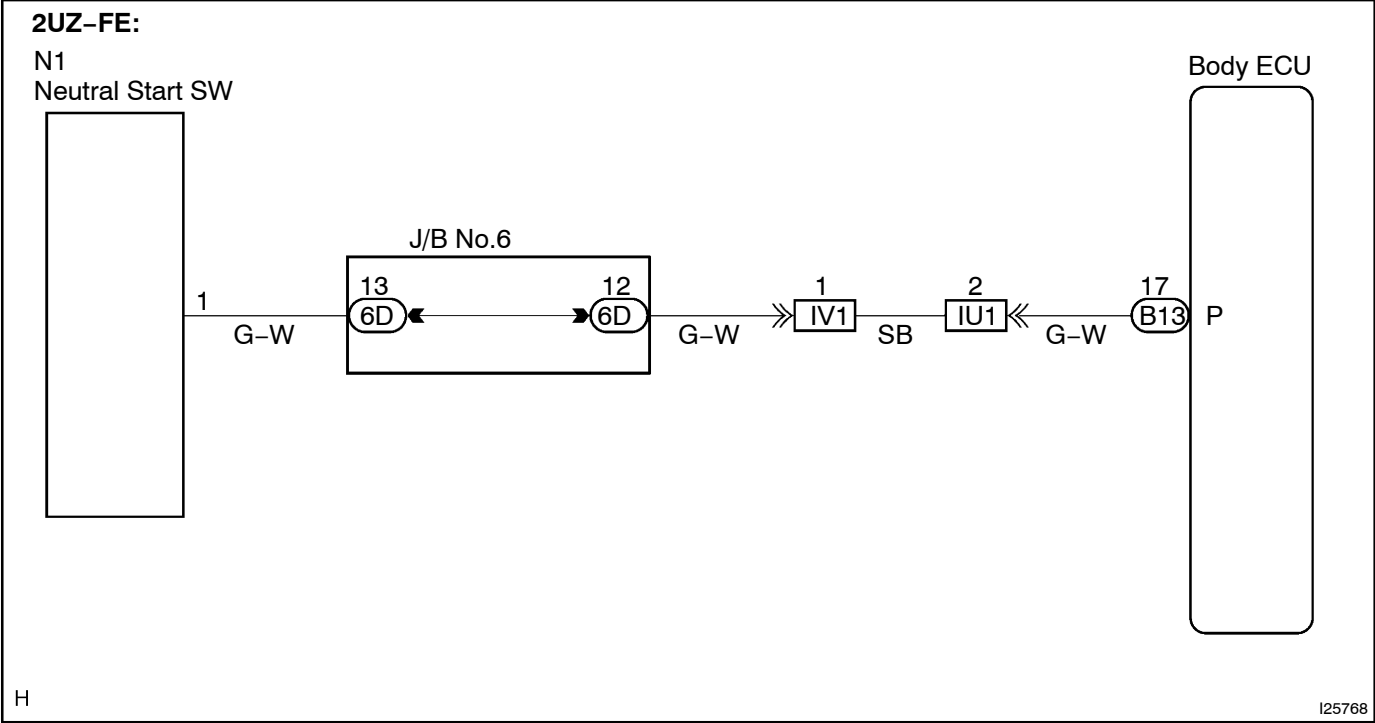


1HD-FTE Except Europe:

N1

Neutral Start SW

Body ECU

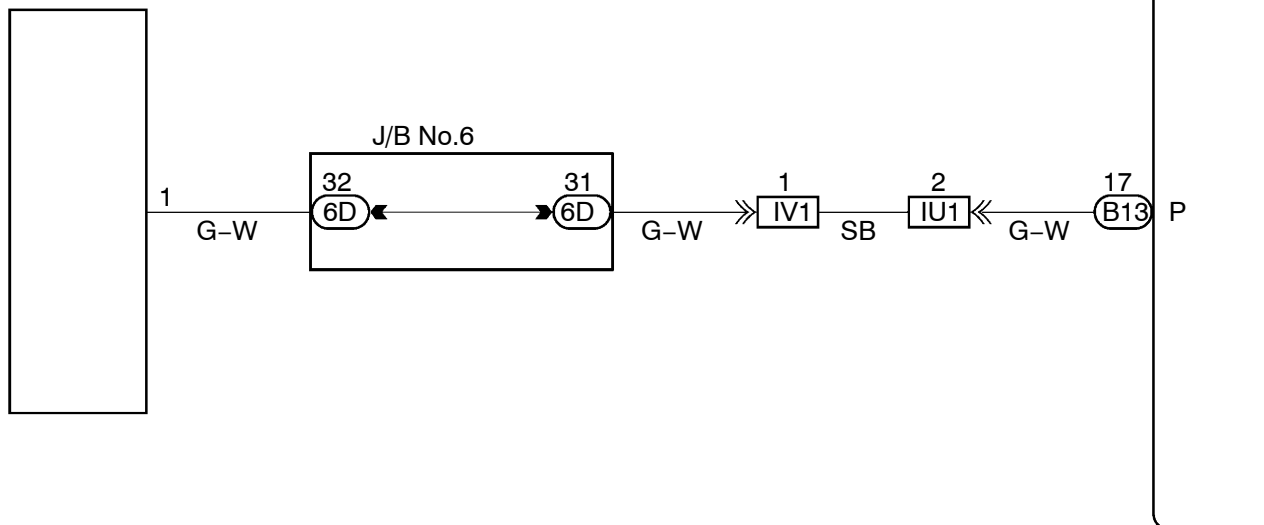

H


I25768

1FZ-FE:

N1

Neutral Start SW

Body ECU

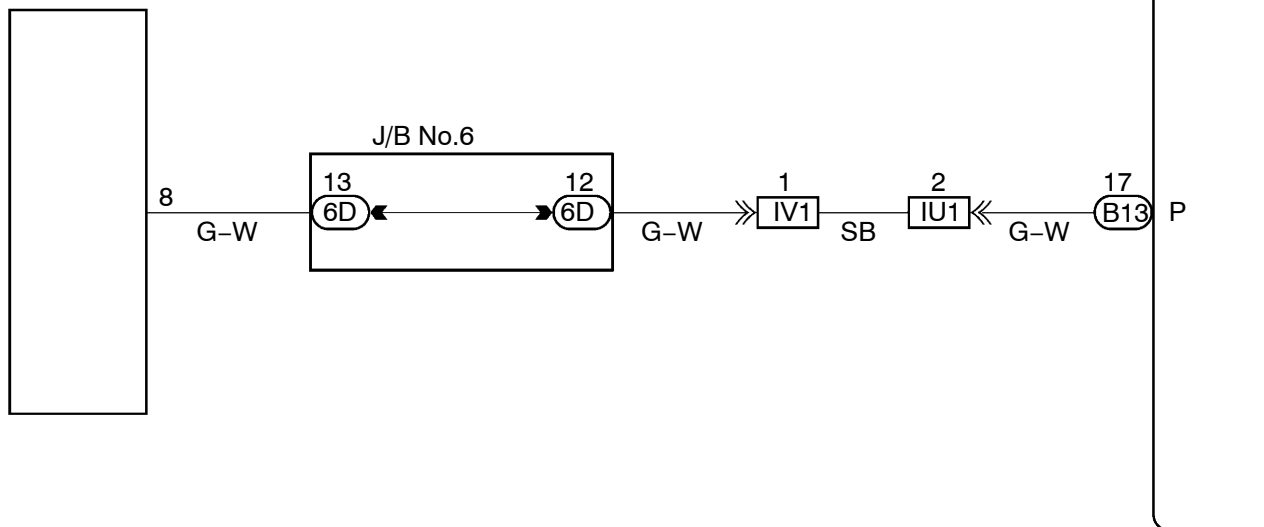

H

I25768

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check neutral start switch using hand-held tester.
---	---

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the neutral start switch operate in DATA LIST ([See page DI-981](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).

NG

2	Check neutral start switch.
---	------------------------------------

NG

Replace the neutral start switch.

OK

3	Check wire harness and connector between neutral start switch and Body ECU (See page IN-38).
---	---

OK

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).