



Power window motor circuit on front RH door

CIRCUIT DESCRIPTION

The front RH power window switch receives the power window switch signal from the switch to operate the power window motor.

WIRING DIAGRAM

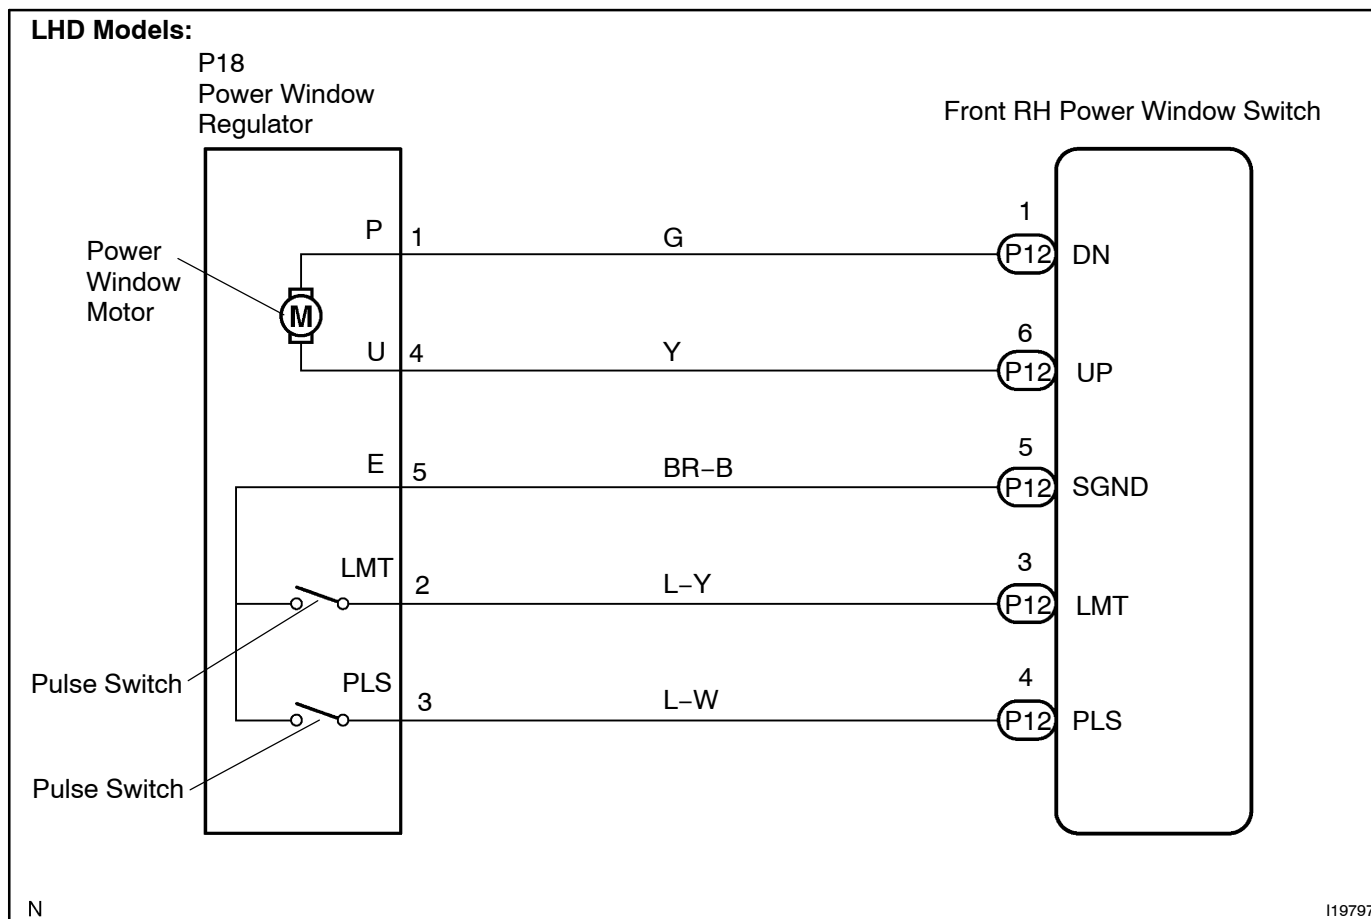

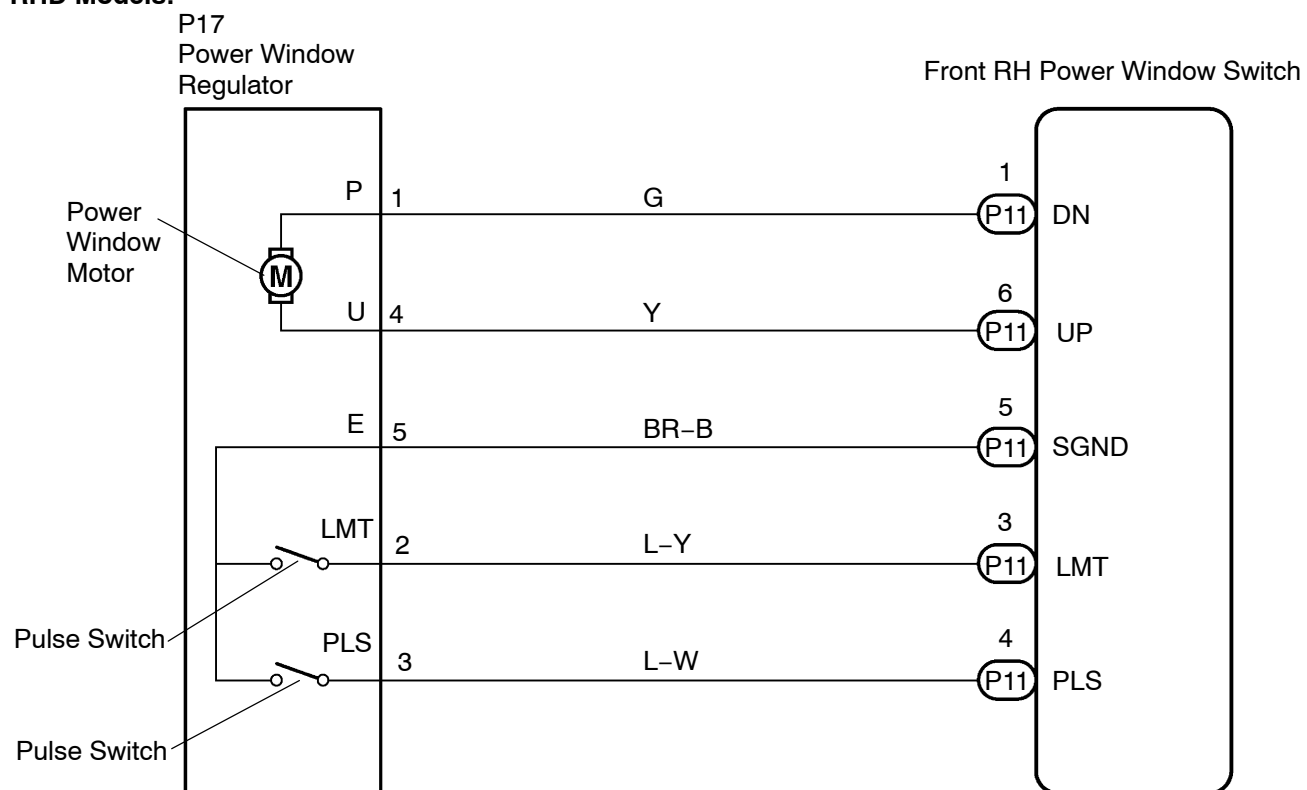RHD Models:

N

I19797

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check power window motor using hand-held tester.
---	---

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the power window motor can operate in ACTIVE TEST ([See page DI-981](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1063](#)).

NG

2	Check power window motor (See page BE-51).
---	---

NG

Replace power window motor.

OK

3	Check wire harness and connector between power window motor and front RH power window switch (See page IN-38).
---	---

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1063](#)).