



Jam protection limit / pulse switch circuit on front RH door

CIRCUIT DESCRIPTION

The front RH power window switch receives the power window switch signal from the switch to operate the power window motor.

WIRING DIAGRAM

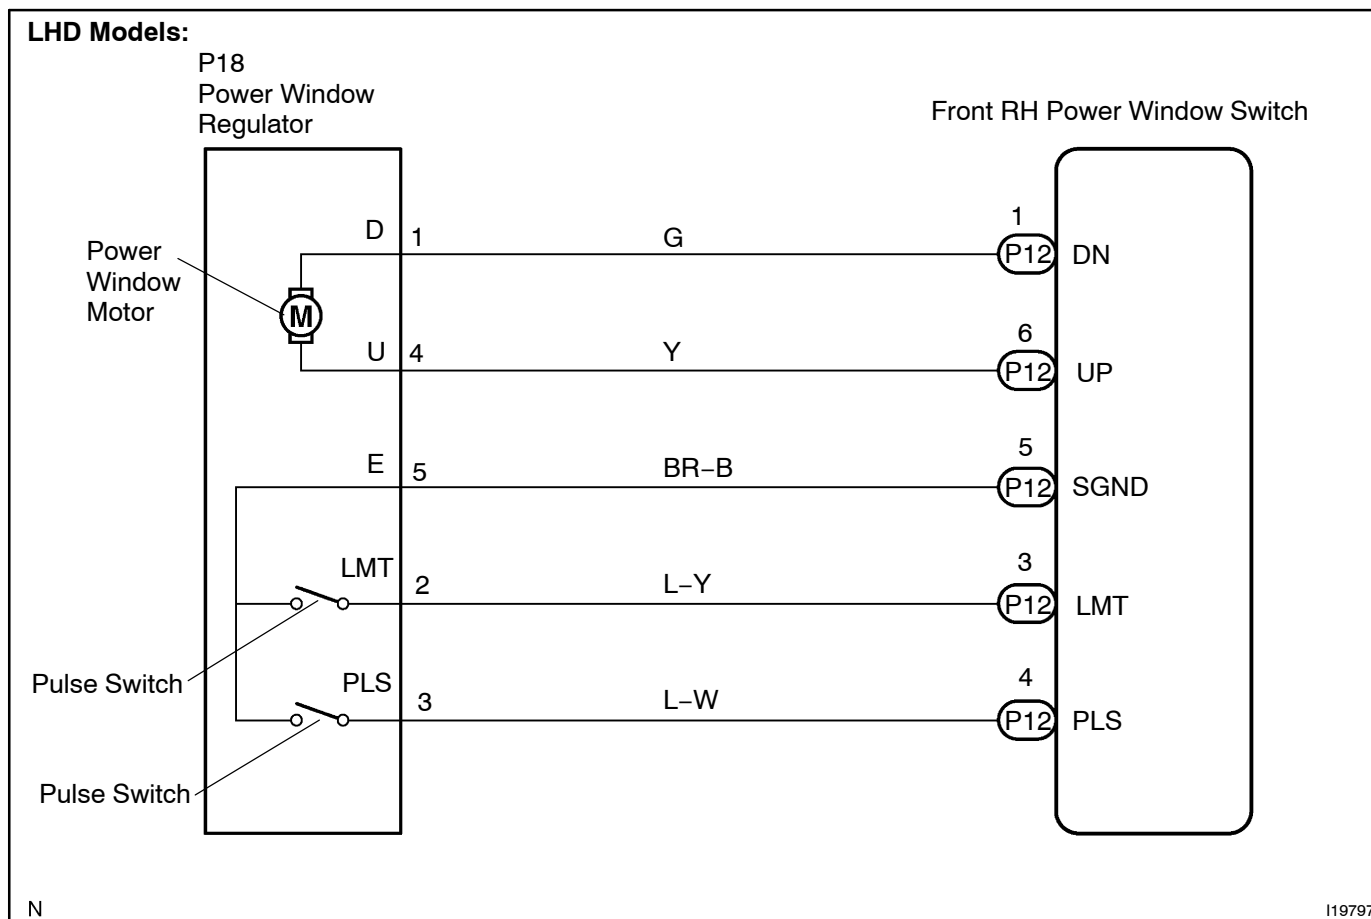

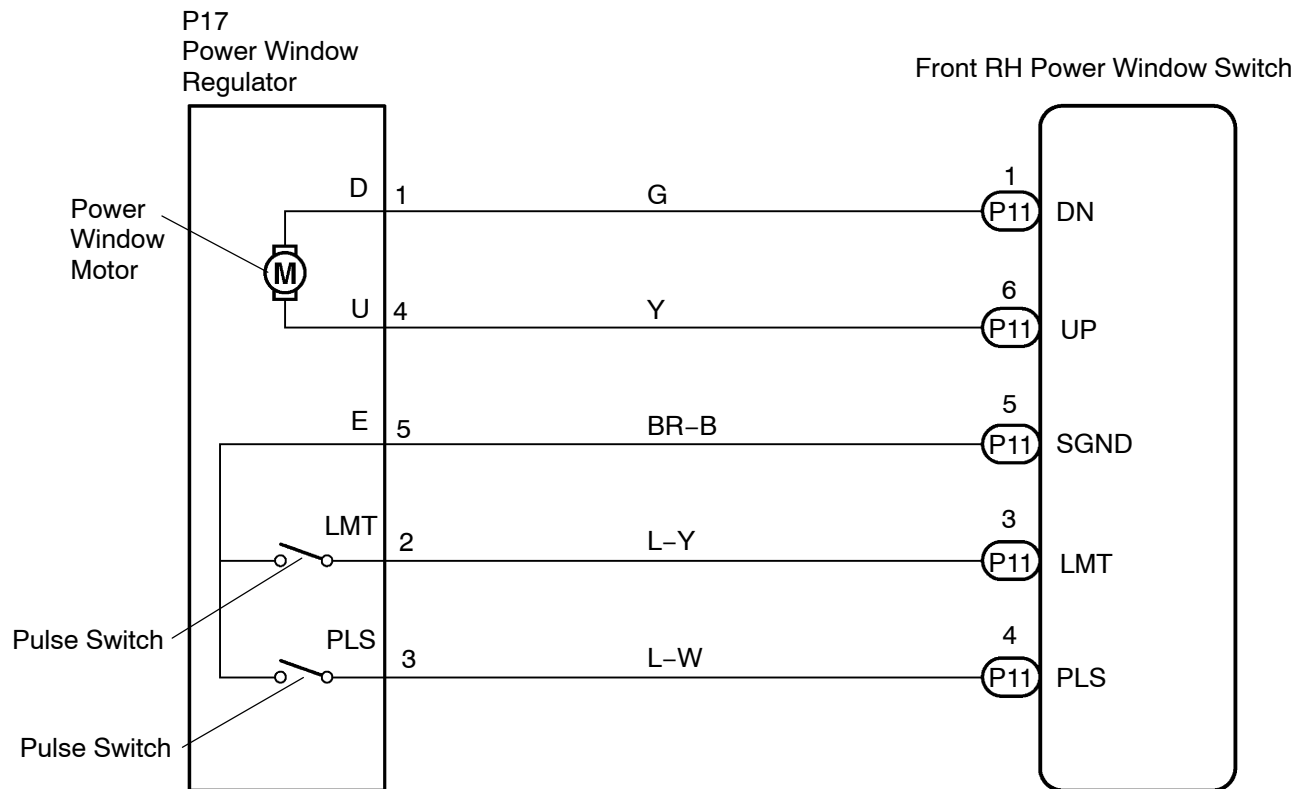RHD Models:

N

I19797

INSPECTION PROCEDURE

- | | |
|---|---|
| 1 | Check jam protection limit / pulse switch (See page BE-51). |
|---|---|

NG

Replace power window motor.

OK

- | | |
|---|---|
| 2 | Check wire harness and connector between power window motor and power window switch (See page IN-38). |
|---|---|

NG

Repair or replace wire harness or connector.

OK

Replace Power window switch.