


Jam protection limit / pulse switch circuit on rear right door

CIRCUIT DESCRIPTION

The rear RH power window switch receives the driver door power window switch signal from the master switch to operate the power window motor.

WIRING DIAGRAM

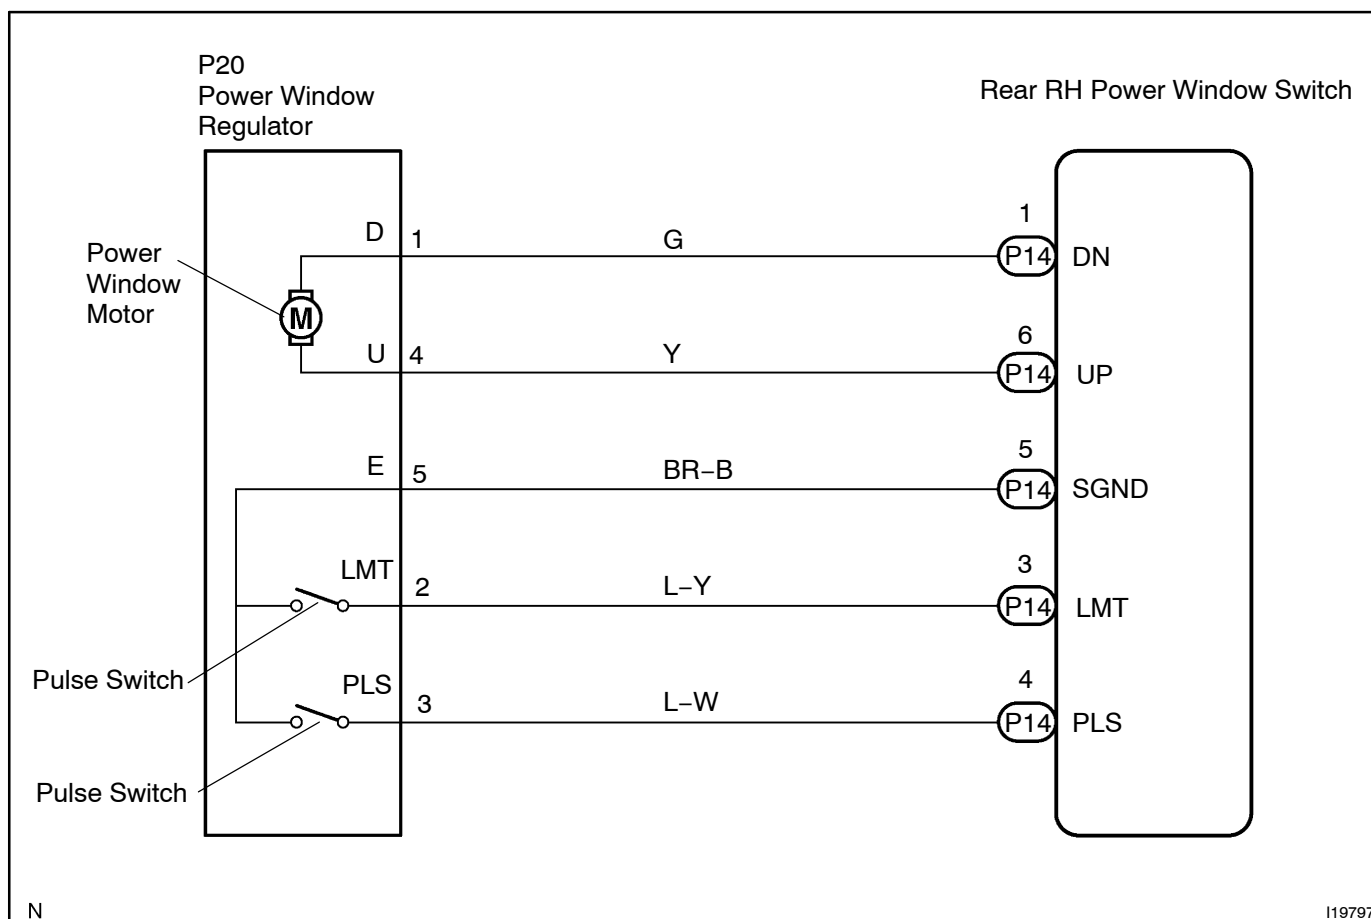

INSPECTION PROCEDURE

- | | |
|---|---|
| 1 | Check jam protection limit / pulse switch (See page BE-51). |
|---|---|

NG

Replace power window motor.

OK

- | | |
|---|---|
| 2 | Check wire harness and connector between power window motor and power window switch (See page IN-38). |
|---|---|

NG

Repair or replace wire harness or connector.

OK

Replace Power window switch.