


INSPECTION

1. **Vehicle not involved in collision:**
INSPECT SUPPLEMENTAL RESTRAINT SYSTEM
 - (a) Do a diagnostic system check ([See page DI-432](#)).
 - (b) Do a visual check which includes the following items with the curtain shield airbag assembly installed in the vehicle. Check cuts, minute cracks or marked discoloration on the front pillar garnish and roof headlining.
2. **Vehicle involved in a collision and airbag is not deployed:**
INSPECT SUPPLEMENTAL RESTRAINT SYSTEM
 - (a) Do a diagnostic system check ([See page DI-432](#)).

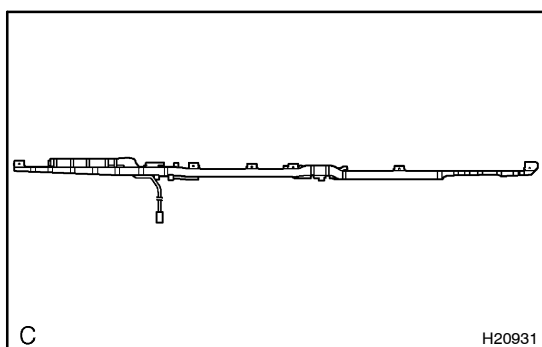


- (b) Do a visual check which includes the following items with the curtain shield airbag assembly removed from the vehicle.
 - Check cuts, tears and cracks, or marked discoloration of the curtain shield airbag assembly.
 - Check cuts and cracks in wire harness, and chipping in connectors.

CAUTION:

For removal and installation of the curtain shield airbag assembly, [see page RS-70](#) and [RS-79](#). Be sure to follow the correct procedure.

3. **Vehicle involved in a collision and airbag is deployed:**
INSPECT SUPPLEMENTAL RESTRAINT SYSTEM
 - (a) Do a diagnostic system check ([See page DI-432](#)).
 - (b) Do a visual check which includes the following items with the curtain shield airbag assembly removed from the vehicle.
 - Check the deformation or cracks on the body that the curtain shield airbag installed on.
 - Check the damage to the connector and wire harness.

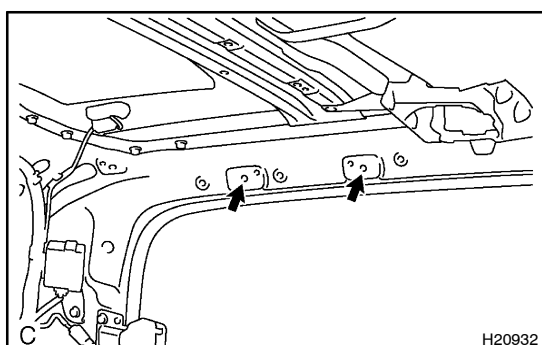

HINT:

If the body that the curtain shield airbag was installed on is deformed or cracked, replace it.