

REMOVAL


NOTICE:

- Do not open the cover or the case of the ECU and various electrical devices unless absolutely necessary. (If the IC terminals are touched, the IC may be destroyed by static electricity.)
- If the wiring connector of the SRS is disconnected with the ignition switch at ON position, DTCs will be recorded.

HINT:

For the step 1 to 7, refer to [page BO-92](#).

1. REMOVE REAR DOOR SCUFF PLATE
2. REMOVE REAR DOOR OPENING TRIM
3. REMOVE REAR SEAT BELT ANCHOR
4. REMOVE REAR MAT SET PLATE
5. Forward-Facing Type:
REMOVE REAR NO. 2 SEAT
6. w/ Rear No. 2 Seat (Forward-Facing Type):
REMOVE STRIKER PLATES
7. REMOVE QUARTER TRIM PANEL

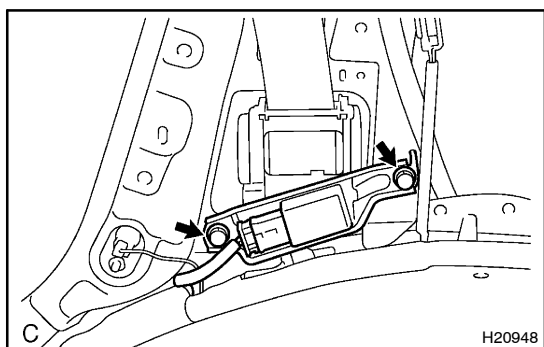

8. REMOVE CURTAIN SHIELD AIRBAG SENSOR ASSEMBLY

- (a) Disconnect the connector.

NOTICE:

Disconnect the connector with the sensor assembly installed.

- (b) Remove the 2 bolts and curtain shield airbag sensor assembly.