

REMOVAL

1. REMOVE NO. 1 ENGINE UNDER COVER


Remove the 6 bolts.

2. REMOVE NO. 2 ENGINE UNDER COVER

Remove the 8 bolts.

3. REMOVE AIR CLEANER ASSEMBLY WITH AIR CLEANER HOSE

- (a) Disconnect the MAF meter connector.
- (b) Disconnect the hoses.
- (c) Loosen the clamp.
- (d) Remove the 3 bolts.

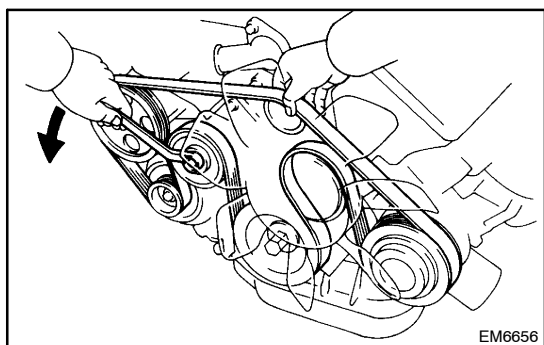

4. REMOVE DRIVE BELT

Loosen the drive belt tension by turning the drive belt tensioner counterclockwise, and remove the drive belt.

5. DISCONNECT 2 VACUUM HOSES

Remove the 2 clips.

6. DISCONNECT RETURN HOSE

Remove the clip.

7. REMOVE PRESSURE FEED TUBE

Remove the union bolt and 2 gaskets.

8. REMOVE PS VANE PUMP ASSEMBLY

Remove the 3 bolts.